

ARGUS 153

Manual

Version: 1.01 / EN

Important note:

An ARGUS basic package contains at least one VDSL interface, which includes a variety of functions and tests. All other interfaces and functions are available as options (see datasheet). Therefore, depending on the scope of function supplied, individual menu options may be hidden.

© **by intec Gesellschaft für Informationstechnik mbH**
D-58507 Lüdenscheid, Germany, 02/2018

All rights, including translation rights, reserved. No part of this work may be reproduced, duplicated or disseminated in any form (print, photocopy, microfilm or any other method) without written consent.

All rights are reserved. No one is permitted to reproduce or duplicate, in any form, the whole or part of this document without intec's permission.

1	Introduction	6
2	Safety information	9
2.1	Safety and transport information for the battery pack	12
3	General technical data	14
4	Quick-start guide	16
5	Configuring accesses	23
5.1	Access wizard	24
5.2	Phys. parameters	30
5.3	Profile	31
5.4	Notices	33
6	Physical layer	36
7	Operation on G.fast and xDSL accesses	37
7.1	Configuring the G.fast and xDSL interface	38
7.2	G.fast and xDSL settings	39
7.3	ARGUS in access mode xTU-R	47
7.4	ARGUS in access mode xTU-R bridge	74
7.5	ARGUS in access mode xTU-R router	76
8	Operation with Ethernet accesses	78
8.1	Configuring the Ethernet interface	79
8.2	Ethernet settings	80
8.3	Establishing an Ethernet connection	82
9	Virtual lines (VL)	85
9.1	Virtual lines in the status screen	85
9.2	Virtual line profiles (VL profiles)	87
9.3	Activating a virtual line	89
	9.3.1 Starting a service	89
	9.3.2 Assigning additional virtual lines	90
9.4	Virtual line settings	95
9.5	Displaying protocol statistics	103
10	Services + Tests	110
10.1	Displaying service statistics	111
11	Overview of tests and hotkey assignment	112
12	LTE	114
12.1	LTE Settings	114
12.2	Establishing LTE connection	115
12.3	LTE scan	118
	12.3.1 Start LTE scan	118
13	Loop	120

14	IP tests	127
14.1	IP ping	127
14.2	Traceroute	133
14.3	HTTP download	137
14.4	FTP download	142
14.5	FTP upload	146
14.6	FTP server	150
14.7	Textbrowser	157
15	Network scan	161
16	VoIP tests	166
16.1	Starting VoIP telephony	174
	16.1.1 VoIP back-to-back	182
16.2	VoIP wait	183
16.3	VoIP call generator	186
17	IPTV tests	189
17.1	IPTV	189
	17.1.1 Multiple virtual lines	194
17.2	IPTV scan	203
17.3	IPTV passive	210
17.4	Video on demand (VoD)	214
18	Parallel tests	222
19	Auto tests	228
20	Copper tests	232
20.1	Line scope	233
	20.1.1 Starting the line scope	233
	20.1.2 Graph functions	236
20.2	Active Probe	244
	20.2.1 Active Probe II	244
	20.2.2 Connecting the Active Probe II	245
	20.2.3 Starting Active Probe II (example with line scope)	245
20.3	TDR	248
	20.3.1 TDR settings	248
	20.3.2 Wire types	249
	20.3.3 Starting TDR	251
	20.3.4 Graph functions	253
	20.3.5 Examples	258

21	Ethernet cable tests	261
21.1	Configuring the Ethernet interface	261
21.2	Ethernet cable test settings	261
21.3	Ethernet port flash	262
	21.3.1 Starting Ethernet port flash	262
22	Test results	264
22.1	Saving test results	265
22.2	Displaying saved test results	266
22.3	Sending test results to a PC	266
22.4	Delete test results	267
22.5	Sending all test results to PC	267
22.6	Deleting all test results	268
23	WLAN	269
23.1	Starting WLAN	269
23.2	Test results via WLAN	270
23.3	WLAN in router mode	271
24	ARGUS settings	272
24.1	Cloud services	272
	24.1.1 Cloud services settings	274
	24.1.2 Cloud Update	275
	24.1.3 Configuration import	277
	24.1.4 Upload test result	280
24.2	Remote access	282
24.3	Configuring the device	284
24.4	Backing up and restoring settings	287
	24.4.1 Backup / Restore	287
25	Update via PC	290
26	Using the battery pack	292
27	Appendix	294
A)	Hotkeys	294
B)	Symbols	299
C)	Error message: PPP connection	302
D)	Error message: Download test	303
E)	HTTP status codes:	304
F)	General Error Messages	306
G)	VoIP SIP status codes	307
H)	Vendor identification numbers	309
I)	Software Licenses	310
J)	Abbreviations	311
K)	Index	318

1 Introduction

The multifunction instrument for the last mile

The ARGUS 153 is the low-cost, entry-level instrument for high-performance DSL interfaces such as super vectoring (VDSL2 profile 35b, 35b bonding) and G.fast as well as the still widely used ADSL.

Compact, robust and light: the ARGUS 153 multifunction (ADSL and VDSL) measuring device tests interfaces and services rapidly and reliably – and offers great value for money. This instrument lets you test VDSL2, ADSL, Ethernet and the physical characteristics of the subscriber line with no module changes. A high-quality, high-performance VDSL/ADSL chipset enables powerful test performance and rapid analyses. You can even upgrade the ARGUS 153 to a G.fast tester if necessary.

The ARGUS 153 is thus the ideal instrument for fast, simple commissioning of all-IP subscriber lines. Triple-play testing (Data, VoIP and IPTV) is also available as an option. The versatile expansion possibilities also include e.g. TDR, DMM and line scope in the copper segment as well as WLAN and LTE in wireless.

Your advantage: The ARGUS 153 is a simple, low-cost and comprehensively expandable multifunction instrument, e.g. for transition to all-IP, that covers all the requirements for the last mile.

Overview of key ARGUS functions:**G.fast and xDSL interfaces (ADSL, ADSL2, ADSL2+, VDSL2, VDSL2 profile 35b, G.fast)**

- Synchronisation with DSLAM (xTU-C) and determination of all relevant connection parameters and error counters
- Bridge, router and terminal-device modes, via IPv4 and IPv6

Ethernet interfaces

- Gigabit Ethernet test interface (10/100/1000 Base-T)

LTE extension incl. LTE scanner and data tests**IP tests via xDSL and Ethernet**

- **IP tests**
 - Ping and traceroute tests (BRAS information, PPP trace, VLAN), via IPv4 and IPv6
 - Download tests for measuring throughput (HTTP-download, FTP-up/download)
 - FTP server test, up/download from ARGUS to ARGUS
 - Parallel testing of multiple services (VoIP, IPTV, Data)
- **VoIP test**
 - VoIP terminal device simulation, including acoustics (var. codecs), via IPv4 and IPv6
 - OK/FAIL assessment of VoIP speech quality (QoS) according to:
 - MOS_{CQE} (ITU-T P.800), E-model (ITU-T G.107)
- **IPTV tests**
 - Stream request (STB mode), IPTV channel scan, IPTV passive
 - OK/FAIL assessment and display of quality parameters

Copper test (Cu test) functions

- **Line Scope:** High-performance realtime Line Scope with display in time and frequency range (FFT) up to 35 MHz
- **TDR:** Time domain reflectometer to measure line lengths and locate faults
- **Copper Box:** expansion of the ARGUS copper test function, see ARGUS Copper Box manual

Documentation and Analysis

- **Documentation** of all parameters recorded to test reports (in device and on PC) via automatic access tests
- Transfer of test results via **QR code** to a smartphone
- **Update Tool** to carry out FW updates for free
- **WINplus** PC software for generating, saving, archiving and printing test reports and for configuring the ARGUS®
- **WLAN** extension for transferring test results to systems of an electronic order processing system, access point mode (browsing, download) and remote control via smartphone



Note:

Detailed explanations regarding Copper Box may be found in the separate documentation for the respective device.

You should receive this together with your equipment. You can also download the latest manuals at <http://www.argus.info/en/service/downloads>, or simply contact our Service Department:

intec Gesellschaft für Informationstechnik mbH
Rahmedestr. 90
D-58507 Lüdenscheid
Tel.: +49 (0) 2351 / 9070-0
Fax: +49 (0) 2351 / 9070-70
www.argus.info/en
support@argus.info

2 Safety information

ARGUS may only be operated using the accessories supplied with the device. The use of other accessories can result in faulty measurements or even damage to ARGUS and the connected equipment. Only use ARGUS according to the instructions contained in this accompanying document. Use in any other manner can cause harm to persons or destroy your ARGUS.



- Before connecting ARGUS to an access, make sure that no dangerous voltages or voltages for which ARGUS and its accessories are not specified are present. Also keep in mind that the voltage can change over the time that the device is connected.
- Use ARGUS only according to its intended purpose at all interfaces and local loops.
- Voltages over 50 V AC and 120 V DC can cause death.
- Never conduct measurements without the battery pack!
- ARGUS is not waterproof. Therefore, protect ARGUS against water penetration.
- Before replacing the battery pack, disconnect the power adapter and all measuring leads and power ARGUS down.
ATTENTION: Never remove the battery pack during operation.
- Remove the power adapter from the mains socket as soon as ARGUS is switched off or no longer in use (e.g. after charging the battery pack)!
- ARGUS may only be used by trained personnel.
- ARGUS may only be operated using the power adapter supplied with the device.
- Only manufacturer-approved headsets may be connected to the headset socket; any other use of this socket (e.g. connection to a home entertainment system) is expressly prohibited.
- Only the Active Probe II, the ARGUS Copper Box and the other manufacturer-approved USB devices without mains connection may be connected to the USB host interface (USB-A). Any other use (e.g. connection to a PC) is expressly prohibited.
- If external USB devices are used on the USB-host interface (USB-A), no warranty is assumed for occurrences outside the mechanical wear of normal plug-in.
- In battery power mode, always cover the ARGUS power socket with the supplied rubber protective cap labelled "Power".



- The electromagnetic compatibility (EMC) has been tested according to the regulations specified in our conformity declaration. ARGUS is a class A device. This device can cause radio interference in residential areas. In this case, the user may be required to implement appropriate measures.
- Active charging of the battery pack and automatic charging (on by default) may only be carried out in a temperature range of 0 °C to +40 °C.
- The device may not be used during thunderstorms.
- If ARGUS is operated under extreme conditions, it can be set to energy-saving mode to protect the device and the user; this can interrupt the running test and drop the connection.

To ensure dependable extended operation of ARGUS, always make sure that it is optimally protected against high temperatures.
- The device may not be opened.
- Please observe the following safety and transport information when using the lithium-ion battery pack.
- Before starting a test or synchronising on an interface, determine how you want to supply power to ARGUS (battery pack or power adapter). The car adapter is only for charging the device. When ARGUS is connected to this adapter, you should not run any tests or synchronise on a DSL interface.
- ARGUS contains extremely sensitive electronic components. Depending on the operating mode selected, an electronic discharge from the user can, in rare cases, result in impairment of device function. The user may need to restart the impaired test or function.

Return and environmentally compatible disposal

Currently applicable environmental legislation restricts the use of certain hazardous substances in electrical and electronic devices, particularly the concentration respectively use of lead (Pb), cadmium (Cd), mercury (Hg), hexavalent chromium [Cr(VI)], polybrominated biphenyls (PBB) and polybrominated diphenyl ethers (PBDE).

We hereby affirm on the basis of the assurances, designations and documentation of our suppliers that all our ARGUS-brand measurement technology products are free of substances in concentrations, preparations or applications whose market release is prohibited pursuant to the applicable requirements of the RoHS Directive 2011/65/EU of the European Parliament and Council dated 8 June 2011. Our EAR registration number is: WEEE reg. no. DE 92829367.

Since October 2005, we have been marking all our measuring devices with this symbol, in compliance with WEEE 2002/96/EC and the corresponding German statute ElektroG:



() (DIN EN 50419).

In other words, ARGUS and its accessories, may not be disposed of as household waste. Please consult with our Service department with respect to the return of old devices.

2.1 Safety and transport information for the battery pack

Transport

The battery pack has been tested according to the UN directive (ST/SG/AC.10/11/Rev. 4, part III., subchapter 38.3). Protective functions have been implemented to guard against short-circuit, destruction and dangerous reverse currents. As the battery pack contains a lithium quantity below current thresholds, it is not subject to international regulations governing hazardous materials either as an individual part or mounted in ARGUS. When transporting multiple battery packs, however, you may also need to observe this safety information. Further information is available on request.



Failure to observe the following danger and warning information can impair the protective functions of the battery pack. This can cause extremely high voltages and currents which can in turn result in abnormal chemical reactions, acid leaks, overheating, smoke, explosion and/or fire. Additionally, failure to observe this information can negatively impact both the performance capacity and the performance duration.

Hazard information and warnings

1. Do not disassemble or short-circuit the battery pack.
2. Do not throw the battery pack into fire or overheat it ($> 60\text{ }^{\circ}\text{C}$).
3. The battery pack must not become wet or damp.
4. Active charging of the battery pack and automatic charging (on by default) may only be carried out in a temperature range of $0\text{ }^{\circ}\text{C}$ to $+40\text{ }^{\circ}\text{C}$.
To maximise battery life, do not store the battery long-term at temperatures above $+50\text{ }^{\circ}\text{C}$.
5. The battery pack may only be charged using the corresponding ARGUS device or an approved charger.
6. Do not puncture the battery pack with a sharp object.
7. Do not throw the battery pack or expose it to shocks.
8. Do not use battery packs that have become damaged or deformed.
9. The battery pack contacts have a specific polarity and may not be inserted in ARGUS or a charging device with reverse polarity.
10. Only connect the battery pack to the corresponding ARGUS or charger in the intended manner.
11. The battery pack may not be directly connected to electrical outputs such as power adapters, car adapters etc.
12. Only use the battery pack with ARGUS.
13. Do not attach, transport or store the battery pack together with metallic objects.
14. Do not expose the battery pack to electrostatic charges.
15. The battery pack may not be charged or discharged together with primary batteries or other battery packs.


16. If the battery pack fails to charge by the end of the charging time, it can no longer be recharged.
17. Do not expose the battery pack to excessive pressure.
18. If the battery pack emits odours or heat, becomes discoloured or deformed or otherwise appears different from normal during operation, charging or storage, immediately remove the battery pack from the device and never use it again.
19. In the event that acid leaks and comes in contact with eyes or skin, wash immediately with clean water. Do not rub. In both cases, seek medical attention immediately. Otherwise, permanent injury may occur.
20. Keep the battery pack away from children.
21. Read this manual and the corresponding safety information carefully before using the battery pack.
22. If odours, rust or other abnormalities are detected before the first use, contact intec GmbH to clarify the next steps.

3 General technical data

Device specifications

Dimensions/weight Height: 235 mm Width: 97 mm Depth: 65 mm Weight: approx. 810 g (1.79 lbs) (incl. battery pack)	Inputs/outputs - RJ-45 (Line) for xDSL, G.fast and Copper tests - Ethernet 10/100/1000 Base-T - 2x USB-A socket, USB-host interface - USB-B socket, USB client interface - Headset input
Control panel 25 keys	
LCD display LCD colour display with switchable background illumination 320 x 240 pixels	Temperature range Temperature range for charging battery pack: 0 °C to +40 °C Operating temperature (in battery mode): -10 °C to +50 °C Operating temperature (with power/car adapter): 0 °C to +40 °C Storage temperature: -20 °C to +60 °C Humidity: up to 95 % rel. humidity, non-condensing Power supply Lithium ion battery pack with 7.2 V rated voltage (observe the safety information) or 12 V/1.5 A ARGUS power adapter
<div><div><div></div><div></div><div></div></div><div><div></div><div></div><div></div></div></div>	
Miscellaneous ARGUS user safety tested according to EN60950-1 RoHS conformity pursuant to the WEEE directive The electromagnetic compatibility (EMC) was tested according to the regulations specified in our declaration of conformity. CE marking ARGUS 153 complies with EC directives 2004/108/EC and 2009/C197/03. We will be happy to provide a detailed declaration of conformity on request	

Supported standards

VDSL (Line): ITU-T G.993.2 (VDSL2) ITU-T G.993.5, G.vector (vectoring) ITU-T G.998.2, G.bond (Bonding) ITU-T G.993.2, Annex Q (Super Vectoring) Profiles 8a, 8b, 8c, 8d, 12a, 12b, 17a, 30a, 35b ITU-T G.998.4 (G.INP, Retransmission)	Ethernet (LAN): IEEE 802.3 - 10 Base-T - 100 Base-T - 1000 Base-T Autonegotiation Auto-MDI(X)
G.fast (Line): ITU-T G.9700/9701 (Profil 106a)	 Dielectric strength:
ADSL (Line): ITU-T G.992.1, Annex A (ADSL) ITU-T G.992.2, Annex A (G.lite) ITU-T G.992.3, Annex A (ADSL2) ITU-T G.992.5, Annex A (ADSL2+) ITU-T G.992.1, Annex B (ADSL) ITU-T G.992.3, Annex B (ADSL2) ITU-T G.992.5, Annex B (ADSL2+) ITU-T G.992.5, Annex J (ADSL2+) ITU-T G.992.3, Annex L ITU-T G.992.3, Annex L ITU-T G.992.3, Annex M (ADSL2) ITU-T G.992.5, Annex M (ADSL2+)	Line: DC: max. +200 V AC: max. +100 V _{pp} (Copper tests only) DC: max. +200 V (xDSL) DC voltage measurements: - Accuracy: ±2 %

4 Quick-start guide



Power key



- Switches on ARGUS
- Reactivation after power-down (adjustable, see page 286)
- Switches on display illumination (also possible with any other key). In battery mode, the display illumination switches off automatically after an interval that can be set in ARGUS (see page 286).
- You can open the ARGUS Manager from any point in the menu (press briefly). Return from the ARGUS Manager to the original menu.
- Switches off ARGUS (key must be held down): after an adjustable interval (e.g. after 10 minutes), ARGUS automatically shuts down in battery mode (see page 286).

Enter key



- Opens menu
- Switches to next display
- Starts/opens test
- Accepts setting

Back key



- Switches ARGUS back to the previous display without saving current entries, e.g. changes in a configuration parameter
- Cancels tests
- Exits graphic displays
- Switches to main menu after powering up

Cursor keys



- Browses display lines page by page (vertical cursor keys)
- Cursor movement within a display line (horizontal cursor keys)
- Within selection lists or statistics, the horizontal cursor keys can be used to scroll through pages
- Select a menu, a function or a test
- Set wire types during the TDR
- Move display cursor in graphic displays
- Select functions in graphic status screen

Telephony



G.fast, xDSL (access mode xTU-R, xTU-R Router) and Ethernet

- Starts VoIP telephony

Level key



- Opens the graphic status screen
- G.fast and xDSL access: displays results
- Ethernet: opens results
- Start/stop function for realtime analyses (Line Scope / TDR)

Number block



- Entry of numerals 0 through 9, letters and special characters
- Direct function call, depending on the selected access (hot key), e.g. page 295 et seq.

Softkeys



- The function of the three softkeys depends on the respective situation. The currently assigned function appears in the bottom line of the display in the form of three blue fields with white letters, e.g.:
<Menu>: opens main menu
<Start>: establishes a connection or starts a test
- Other softkeys are described in the corresponding chapters of this manual.


Shift key




In some menus, a green "S" in a green circle appears in the top line of the display.

In these menus, the softkeys are assigned two functions. The Shift key toggles the softkey assignment (see example page 195).

Example: Press Shift to change the softkey assignment.

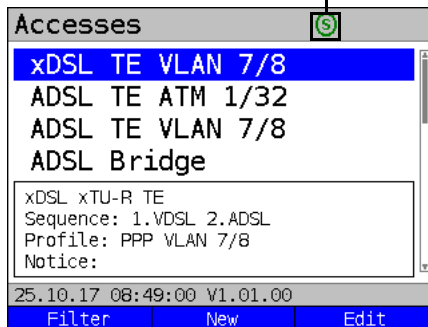


ARGUS is mainly controlled using the four cursor keys, the Enter key , the Back key



, the Level key  and the three softkeys.

The bottom line of the display shows the current softkey assignments.

In the following pages of this manual, only the respective currently valid softkey function is displayed in angle brackets < >, e.g. <Menu>. The softkey <✓> performs the same function as the Enter key .

Top connections



PWR

For external power adapter.

When the external power adapter is connected, ARGUS switches off the battery power supply.

USB-A or USB-A 1/2

USB-host interface

(Active Probe II, Copper Box, WLAN, LTE)



ARGUS checks regularly if there are any USB devices connected.

USB-B (mini-USB)

USB-client interface (PC connection)



Headset socket

Bottom connections

Yellow Link/Data LED:
signals physical connection with another Ethernet port

- LED steadily illuminated: connecting
- Flashing LED: transmitting/receiving



The green Speed LED and yellow Link/Data LED indicate transmission speed

- LED on: 10/100 Base-T

Green Speed LED indicates transmission speed

- LED on: 10/100/1000 Base-T

Line

Access G.fast	Pin assignment: 4/5
Access xDSL	Pin assignment: 4/5
Access Copper	Pin assignment: 4/5


LAN


Connection to a PC network card.

Connection to the Ethernet interface of an xDSL modem, router (IAD) or hub/switch or another Ethernet interface (access: Ethernet).

Charging the battery in initial operation

The battery pack compartment is on the rear of the device. Attach the battery back by placing it against the retaining points at the top end and then screwing down the knurled screw. Use only the battery pack supplied with the device. Observe the safety information given on page 12. Now connect your (switched-off) ARGUS to the external power supply supplied with the device.

Switch on ARGUS using the  key. The following display appears (you may first need to acknowledge warnings or messages with <continue>):

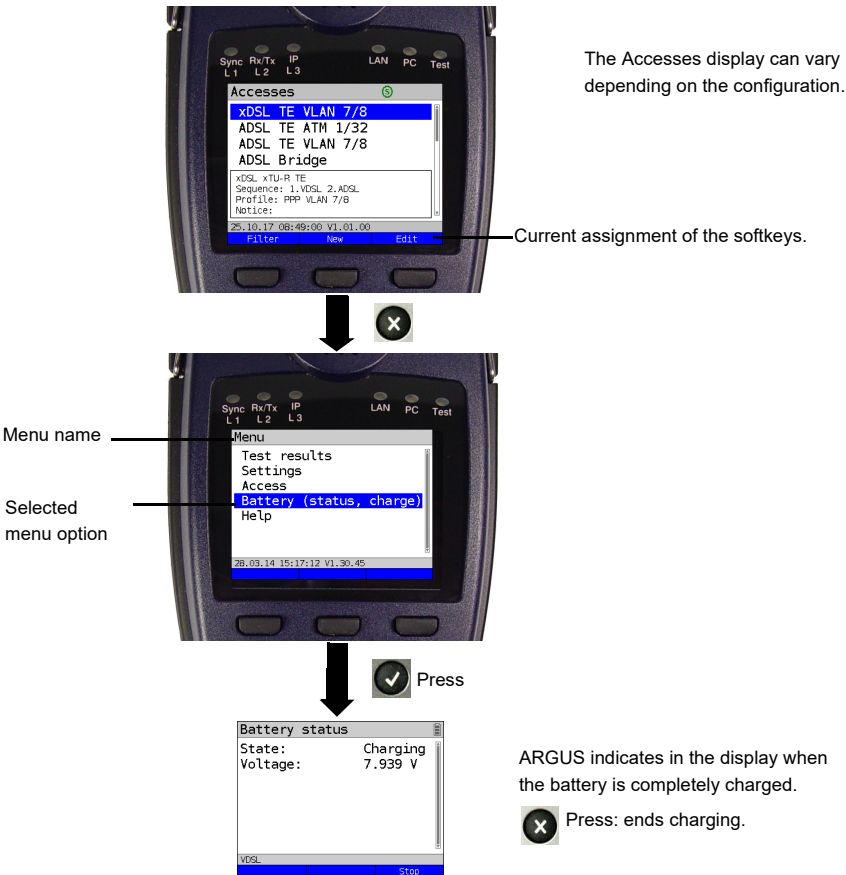

You must first change the battery pack supplied with the device completely (see page 293 Status) before full capacity is reached.

Power-saving mode




In battery mode, ARGUS automatically switches off after five minutes of no activity (interval adjustable, see page 286). ARGUS does not switch off during a test e.g. (Loopbox) or in trace mode.

The device can alternatively be operated using the supplied external adapter. When the adapter is connected, power supply via the battery is automatically switched off. ARGUS must always be operated with the battery, regardless of the power supply type. This ensures e.g. uninterrupted operation of the real-time clock.



Unplug the adapter from the mains as soon as ARGUS is switched off and no longer in use (battery charging).

5 Configuring accesses

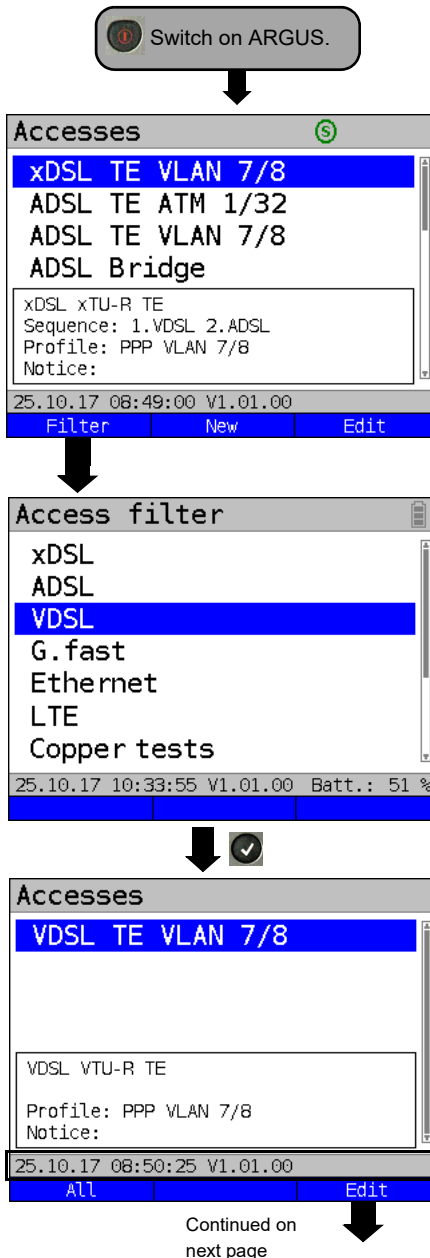

After powering up, ARGUS displays all configured accesses (up to 100). By default, one access is preconfigured for every interface type (ADSL, VDSL, ...). When changing accesses, the last access used is indicated on the display with ●. ARGUS additionally displays a preview of the selected access settings, see also page 28. The preview window opens after 2 seconds.

<New> Creates an access, see page 24, Fig. 2.

<Edit> Edits an access, see page 24, Fig. 1.



Toggles softkey assignment, see page 30.



Switches to main menu.

With the **<Filter>** softkey, ARGUS lets you filter all pre-configured accesses according to access type (xDSL, ADSL, VDSL, ...) and displays this group.

In this example, VDSL is selected.




All relevant accesses are displayed in which VDSL is specified in the configuration.

The status line (above the softkey) displays either the date, time, version and battery level after power-up, or the access "still" selected after changing accesses..

<All> Display of all possible accesses, see Fig. 1.

<Edit> Edits the selected access profile.

5.1 Access wizard

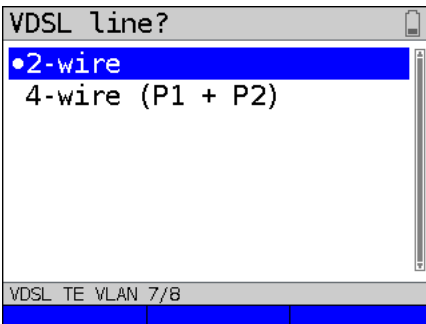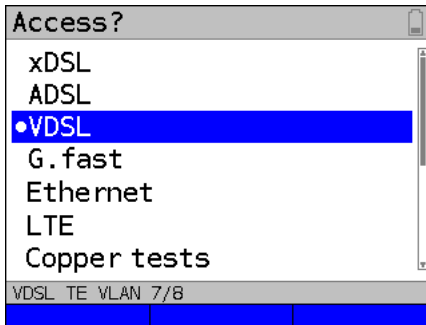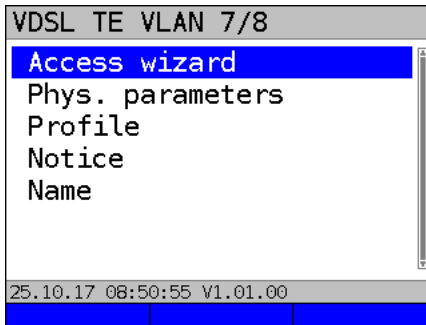

Continued on
next page

ARGUS switches to the "Accesses" main menu.

You can now configure the selected access, here VDSL TE VLAN 7/8, using the access wizard.

The query parameters of the access wizard depend on the selected access (VDSL, VDSL, ...), see page 28.

Selection of physical interface (here VDSL).

- For xDSL and G.fast, see page 37.
- For Ethernet, see page 78.
- For Copper tests, see page 232 and ARGUS Copper Box Manual.

Selection of number of wire pairs.

For normal VDSL accesses, a 2-wire connection (copper twisted pair) is used, for VDSL bonding accesses, a 4-wire access is used.

Access mode?	
•VTU-R TE	
VTU-R bridge	
VTU-R router	

25.10.17 08:51:51 V1.01.00



Profile?	
•Profile 1	
Profile 2	
Profile 3	
Profile 4	
Profile 5	
Profile 6	
Profile 7	

VDSL TE VLAN 7/8

Edit



Continued on
next page

ARGUS switches directly to the access mode settings.

Selection of access mode (here VDSL VTU-R terminal) device).

- For xTU-R TE, see page 47.
- For xTU-R bridge, see page 74.
- For xTU-R router, see page 76.

You can now link your configured access settings with one of 20 profiles. These profiles link the access settings with the access and test parameters. You can define service, virtual line and other parameters.

The selected profile is highlighted in the display in blue. The default profile is indicated with a ● in the display.

Access name?

VDSL TE VLAN 7/8

 
16/24 signs


VDSL TE VLAN 7/8

DeleteAb>AB

Once you have selected the profile, ARGUS suggests an access name, based on the settings you made previously (here VDSL TE VLAN 7/8). You can enter up to 24 characters (in this example 16/24 characters).

- <Delete>

Deletes access name.
- 

 
Clears mark and returns cursor keys to the start.
- 


Clears mark and returns cursor keys to the end.
- <Ab>AB>

Entry begins with upper-case letters and continues in lower-case.
- <AB>12>

Entry of upper-case letters.
- <12>ab>

Entry of numbers.
- <ab>AB>

Entry of lower-case letters.
- 

Entry of special characters, e.g. @, /, -, ., *, ?, %, =, &, ! etc.
- 

Entry of special characters e.g. _, :, +, # etc.

Summary

VDSL 2-wire VTU-R TE

Profile: PPP VLAN 7/8

Notice:

✓: Save and quit wizard.


X: Step back.


VDSL TE VLAN 7/8

Phys. param.Notice



 

- ARGUS displays a summary of the configuration.
- <Phys. param.>

Edits the physical parameters, see page 39.
- <Notice>

Entry of notices, see page 33.
- 

Save and exit the wizard.
- 

Go back one level.

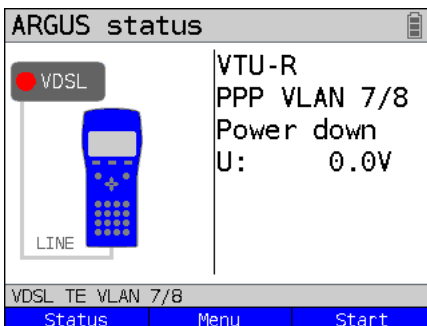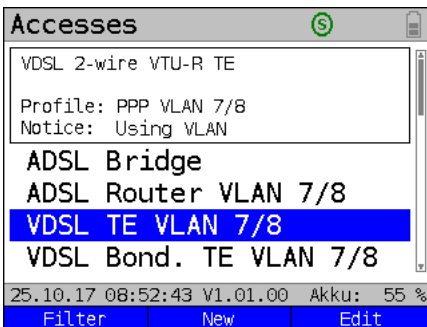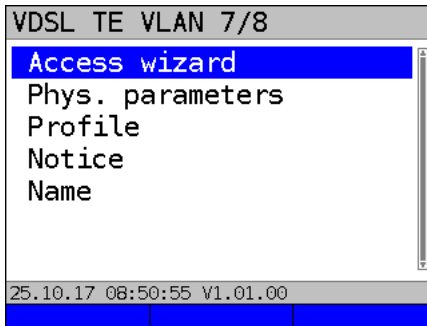

ARGUS returns to the editing overview of the selected access (here VDSL TE VLAN 7/8).

To configure the services or test parameters, select "Profile"; see also page 31. You need to exit the access wizard before ARGUS can use the configured access.



Exit the access wizard.



Select access.

Press OK to confirm the selected access, here VDSL.

ARGUS switches to the ARGUS status display.

<Status> Switches to status screen.

<Menu> Switches to main menu.

<Start> Starts the VDSL connection.

ARGUS access wizard


The access wizard prompts for different information depending on the access/interface.

Each parameter queried depends on the respective previous parameters (from left to right).

Access/ interface	Sync sequence	Line (PIN, only LTE)	Mode	Access mode	Profile
xDSL	1. VDSL 2.ADSL	-	Annex A Annex B	xTU-R TE xTU-R bridge xTU-R router	Profile
ADSL	-	-	Annex A Annex B ...	ATU-R TE ATU-R bridge ATU-R router	Profile
VDSL	-	2-wire 4-wire (P1 + P2)	-	VTU-R TE VTU-R bridge VTU-R router	Profile
G.fast	-	-	-	FTU-R TE FTU-R bridge FTU-R router	Profile
Ethernet	-	LAN	-	IP based, Cable test	Profile
LTE	-	PIN	-	-	Profile
Copper tests	-	-	-	-	-

xDSL automatic detection


For xDSL access, you are prompted for sync sequence.

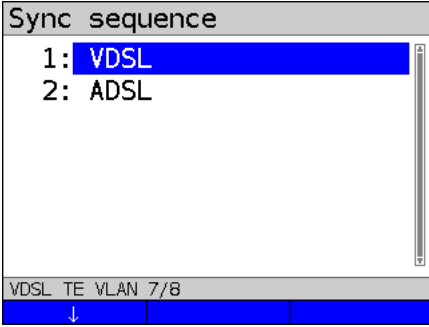	Description
	<p>Creating a new xDSL access enables to adjust the sync sequence of VDSL and ADSL for xDSL automatic detection.</p> <div data-bbox="252 371 680 699">  </div> <p><↓> The selected access is moved down one place in the list. <↑> The selected access is moved up one place in the list..</p> <p>Default: 1. VDSL 2. ADSL</p>


For ADSL access, you are prompted for ADSL mode:

	Description
ADSL mode	<p>Different ASDL modes can be set depending on the variant. The set ADSL mode must be compatible with the ATU-C (network side). When ADSL auto-modes "Annex A/M auto, Annex B/J auto, Annex A auto, Annex B auto and Annex M auto" are selected, ARGUS automatically detects and matches the configuration on DSLAM.</p> <p>Default: Annex A/M auto</p>

Sorting the accesses in the access overview

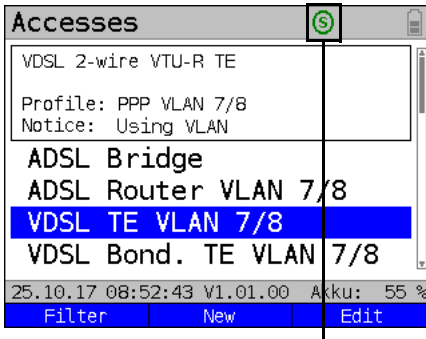


Press one after another

 

Shortcut to access selection menu.


In order to keep frequently used accesses readily available, ARGUS allows you to arrange the configured accesses in any order.

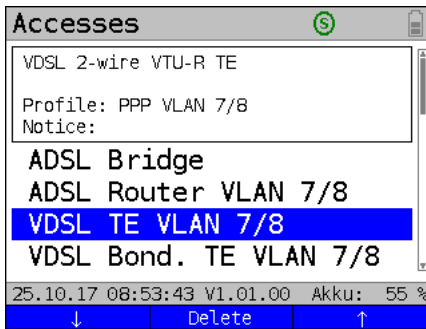

Switches to softkey assignment.

- <↓> The selected access is moved down one place in the list.
- <↑> The selected access is moved up one place in the list.
- <Delete> Deletes the highlighted access.


5.2 Phys. parameters

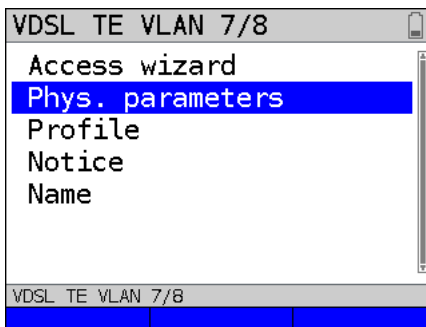

Edits the physical parameters of the selected access (here VDSL TE VLAN 7/8, see page 39).

The physical parameters can also be opened and edited directly when the access wizard is finished (see page 28 Fig. 1).

5.3 Profile

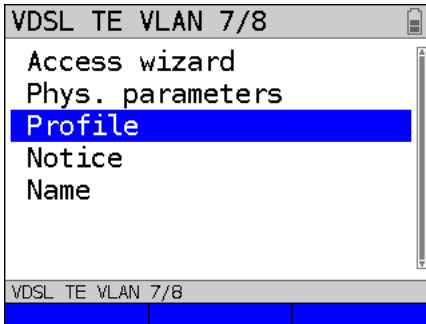


The preconfigured accesses can be linked to up to 20 profiles.

These profiles link the access settings with the access and test parameters. You can set various parameters here including those for service and virtual line.




Select a profile.

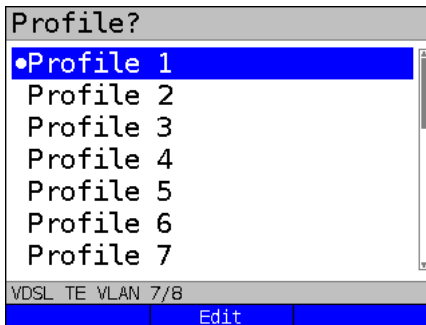

ARGUS enables configuration of up to 20 profiles.



Select the profile you wish to edit. The selected profile appears in the display in blue. The default profile is indicated with a ● in the display.

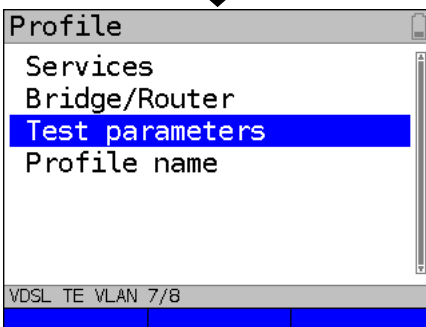

Select e.g. Services or Test parameters.


Services page 110 et seq.

Bridge/router, see page 74.

Profile name: Enter the name of the access, see page 26.






Continued on next page

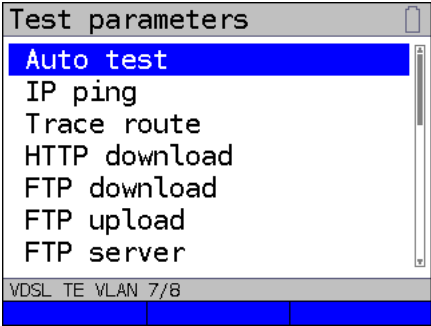

Test parameter settings are described starting on page 120.

5.4 Notices

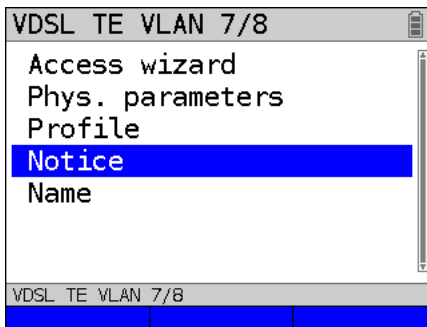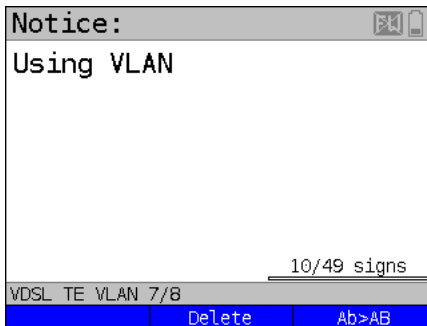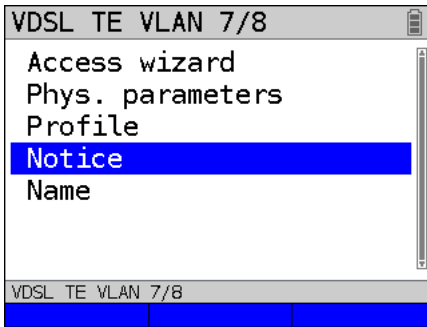

In the preview, ARGUS shows not only the selected access, the xDSL mode and the access mode but also a freely editable notice (see Fig. 1 page 33).

This note can be up to 49 characters long.

In this example, the note "Using VLAN" is selected.

<Delete> Deletes notice.



Clears mark and returns cursor keys to the start.



Clears mark and returns cursor keys to the end.

<Ab>AB> Entry begins with upper-case letters and continues in lower-case.

<AB>12> Entry of upper-case letters.

<12>ab> Entry of numbers.

<ab>AB> Entry of lower-case letters.





Entry of special characters, e.g. @, /, -, ., *, ?, %, =, & ! etc.



Entry of special characters such as _, :, +, # etc.

Press OK to save the entered notice.

You can subsequently edit the access name as described for the access assistant, see page 26.

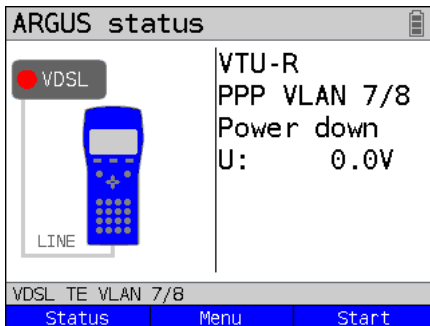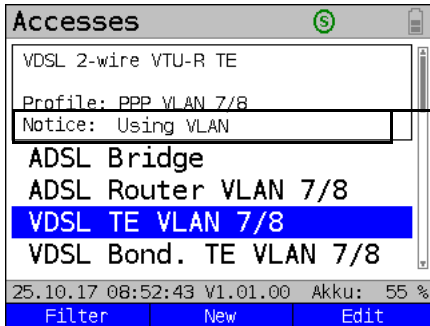

The saved notice is linked with the access and is displayed in the preview.

The preview appears approx. 2 seconds after the access is selected.

<Filter> ARGUS switches to the Filter menu, see page 23.

<New> Creates a new access.

<Edit> Edits access.

Selects access

Switches to ARGUS status, see page 28.

<Status> Switches to status screen.

<Menu> Switches to main menu.

<Start> Starts the VDSL connection.

6 Physical layer



The physical layer (layer 1) is shown in the status screen (Fig. 2) with its own graphical element (here VDSL). The other elements in the status screen are initially only named. This is explained in more detail on page 85 (Virtual Lines) and page 110 (Services). The physical layers for the G.fast, ADSL and Ethernet interfaces are presented in the same way as for VDSL. The selection of the VDSL access and the access mode VTU-R are directly adopted in the status screen. If the defaults are correct, layer 1 (synchronisation on VDSL) can be established directly on <Start>. The most important information such as voltage (U) and modem states (power down) are displayed in the layer-1 box (blue). To change the VDSL configuration directly, press <Edit>. To change the access type directly in the status screen (Fig. 2), press the softkey <Access> or the key combination  plus .

Fig. 1


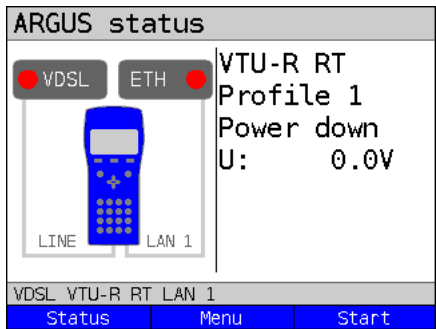


Fig. 2 (example VTU-R router):  Press Level key or <Status>

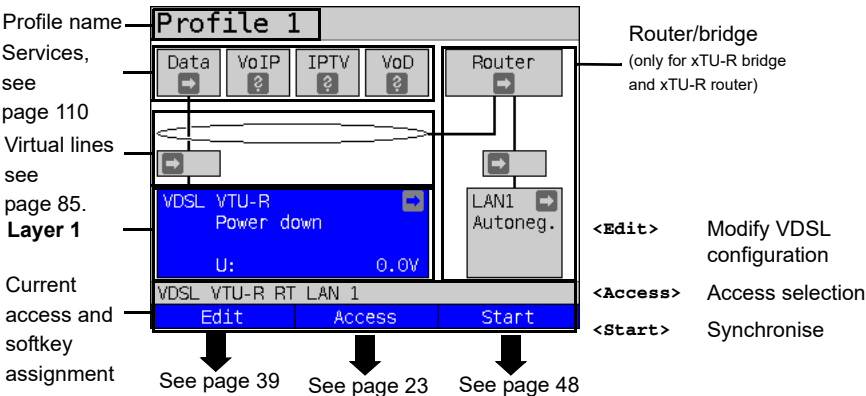

See page 112 for tests that can be run via layer 1.

7 Operation on G.fast and xDSL accesses

ARGUS supports G.fast and the following DSL interfaces: ADSL, VDSL.

ARGUS supports the following access modes:

- | | |
|---------------------|--|
| xTU-R | Terminal device mode (Fast/xDSL transceiver unit) see page 47.
ARGUS is connected to the xDSL access (in front of or behind the splitter). ARGUS replaces the modem and PC. |
| xTU-R bridge | Bridge mode (Fast/xDSL transceiver unit bridge) see page 74.
ARGUS is connected to the xDSL access and the PC.
ARGUS replaces the xDSL modem. |
| xTU-R router | Router mode (Fast/xDSL transceiver unit router) see page 76.
ARGUS is connected to the xDSL access and the PC.
ARGUS replaces the xDSL modem and router. |



The individual DSL tests record and store data (e.g. traces of IP data). It is the user's responsibility to comply with the applicable legal requirements.




The line may not carry a DC voltage greater than 200 V DC and should be free of AC voltage components.



In principle, the operating temperature range set out in "Technical data" (see page 14). For ambient temperatures just below +50 °C, extended operation in high-performance modes can trigger the temperature dependent ARGUS protection functions described in the safety information (see page 9).

7.1 Configuring the G.fast and xDSL interface

Status screen

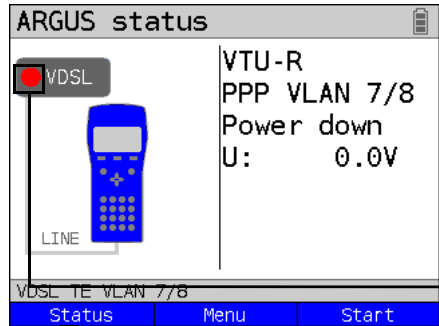

- Display (from top to bottom)
- Access mode (in this example: VTU-R)
 - Previous profile (in this example: profile 1)
 - Modem state (in this example: power down)
 - DC voltage on the interface

VDSL test not yet started:


Meaning of LED image in display:

- Red LED: No test started
- Yellow LED: Test started
- Green LED: Connected
- <Menu> Switches to main menu, see menu tree
- <Status> Switches to status screen

see page 48

Main menu, see menu tree

Status screen:

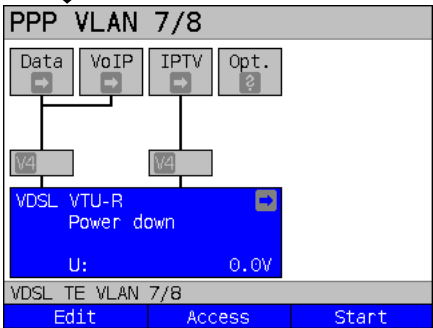

ARGUS status screen:
Layer-1 box (blue in display) selected.

<Edit> Opens settings


Note: accessing functions via number keys/key combinations








You can call important functions/tests directly using the keys of the ARGUS keypad. You can find an overview of these key combinations on page 112.

7.2 G.fast and xDSL settings




ARGUS stores all relevant settings (e.g. set and limit values) for a test with the accesses. Only the relevant settings are applied, depending on the test situation. You can restore the default settings at any time (see page 289):

Setting	Description	
Phys. parameters:		
ADSL:		
Rated / threshold value	Setting	Entry of the comparison value for the upstream and downstream ATM bitrate [kbit/s] using the number keys.
	Bitrate	ARGUS displays a large green "OK" in the ARGUS status screen if the current bitrate is above the set value for an active DSL connection and an "OK" for connection parameters below the target, otherwise "NOK". Default: d: 0 and u: 0
	CRC limit value	Sets the max. CRC (cyclic redundancy check) value. ARGUS displays a large green "OK" in the ARGUS status screen if the current value is below the set limit value for an active DSL connection and an "OK" for connection parameters below the target, otherwise "NOK". Range: 0 to 999,999,999 Default: far: * and near: * (*=off)
	FEC limit value	Determines the maximum FEC (forward error correction) value. ARGUS displays a large green "OK" in the ARGUS status screen if the current value is below the set limit value for an active DSL connection and an "OK" for connection parameters below the target, otherwise "NOK". Range: 0 to 999,999,999 Default: far: * and near: * (*=off)
	HEC limit value	Determines the maximum HEC (header error correction) value. ARGUS displays a large green "OK" in the ARGUS status screen if the current value is below the set limit value for an active DSL connection and an "OK" for connection parameters below the target, otherwise "NOK". Range: 0 to 999,999,999 Default: far: * and near: * (*=off)

INP/SNRM	Determines whether preference is to be given to INP (inpulse noise protection) or SNRM (signal-to-noise- ratio margin) when an ADSL connection is established. Default: Favour DS SNRM
Retransmission (G.INP)	When retransmission (G.INP, G.998.4) is used, the downstream of ADSL links is protected against pulse noise on layer 1. Delays and packet losses are minimised; however, this increases the interleave delay for downstream. Default: Down- & upstream
	<div>ADSL 11979/1021 kb/s R CRC: U FEC: U</div> <p>When Retransmission (G.INP) is active, ARGUS shows in the status line a „R“ for Retransmission.</p> <div>ADSL 11979/1021 kb/s R CRC: U FEC: U</div> <p>When Retransmission (G.INP) is unlocked but not active, ARGUS shows in the status line a „R“ for Retransmission.</p>


MAC address (line) (not available using the access wizard)				
<div>  </div>	<p>Display and selection of the line MAC addresses. The first two MAC addresses cannot be manually edited.</p> <ol style="list-style-type: none">1. When the standard MAC address is selected, ARGUS uses its own MAC address. Default: Standard MAC address2. When you select the dynamic MAC address, a different MAC address is used each time the device synchronises.3. You can enter a third MAC address: Mark the line and then press <Edit>. <p><Edit> Entry of new MAC address. The address is entered in hexadecimal form using the number keys and key combinations: *1=A, *2=B, *3=C, *4=D, *5=E, *6=F and confirmed with  . No group MAC addresses may be used. Default: 00:00:00:00:00:00</p> <p> Accepting the address. The new address is temporarily saved, and is no longer available after powering down.</p>			
	<p>Press one after another Display of ARGUS MAC addresses: Line, LAN, ETH, see also page 295 and following.</p> <p> and </p>			
	<p>The setting “Dynamic MAC address” is active across all interfaces. For instance, if the setting for ADSL is changed, this also affects the MAC address for VDSL or Ethernet. Dynamic MAC addresses are used here as well. The setting “Dynamic MAC address” is saved.</p>			
	<p>Every service (see page 110) is connected to the physical layer (see page 36) via its own virtual line (see page 85) uses its own MAC address. If the setting “Standard MAC address” is used, this is made up as follows: Voreinstellung: 00:12:A8:EX:XX:XX</p>			
	<p>The first three blocks (00:12:A8) do not change, as these stand for intec GmbH. The fourth block (EX) changes depending on the selected interface and service, provided that this uses its own virtual line. The final two blocks (XX:XX) depend on the device type and serial number.</p>			
	<table><tr><td>00:12:A8:E0:XX:XX</td><td>Data service via Ethernet interface.</td></tr><tr><td>00:12:A8:E1:XX:XX</td><td>Data service via G.fast or a xDSL interface (ADSL, VDSL).</td></tr></table>	00:12:A8:E0:XX:XX	Data service via Ethernet interface.	00:12:A8:E1:XX:XX
00:12:A8:E0:XX:XX	Data service via Ethernet interface.			
00:12:A8:E1:XX:XX	Data service via G.fast or a xDSL interface (ADSL, VDSL).			

	00:12:A8:E3:XX:XX	VoIP service via Ethernet or G.fast/xDSL interface.
	00:12:A8:E4:XX:XX	IPTV service via Ethernet or G.fast/xDSL interface.
	00:12:A8:E5:XX:XX	Opt. service via Ethernet or G.fast/xDSL interface.
Gratuitous ARP	Determines whether Gratuitous ARP (Address Resolution Protocol) is to be used. When this is set to “on“, ARGUS transmits one ARP message every 60 seconds unrequested to communicate its MAC address. Default: Off	
VDSL:		
Rated / threshold value	Setting bitrate	Entry of the comparison value for the upstream and downstream bitrate [kbit/s] using the number keys. ARGUS displays a large green "OK" in the ARGUS status screen if the current bitrate is above the set value for an active DSL connection and an "OK" for connection parameters below the target, otherwise "NOK". Default: d: 0 and u: 0
	CRC limit value	Sets the max. CRC (cyclic redundancy check) value. ARGUS displays a large green "OK" in the ARGUS status screen if the current value is below the set limit value for an active DSL connection and an "OK" for connection parameters below the target, otherwise "NOK". Range: 0 to 999,999,999 Default: far: * and near: * (*=off)
	FEC limit value	Determines the maximum FEC (forward error correction) value. ARGUS displays a large green "OK" in the ARGUS status screen if the current value is below the set limit value for an active DSL connection and an "OK" for connection parameters below the target, otherwise "NOK". Range: 0 to 999,999,999 Default: far: * and near: * (*=off)
Firmware	Selects the firmware (FW) in the VDSL chipset. You can choose between version A, version B and version C. Further information is available on request. Default: A	

Carrier set	<p>The carrier set determines the carrier frequencies that ARGUS uses to signal to DSLAM that it is ready to synchronise (ITU G.997.1). The carrier generally specifies which sets are to be used. You can select the following sets with corresponding upstream tones (interval between tones 4.3125 kHz) in ARGUS:</p> <ul style="list-style-type: none"> - A43, tones: 9, 17, 25 - B43, tones: 37, 45, 53 - V43, tones: 944, 972, 999 <p>Default: A43, B43, V43</p> <p>When multiple sets are selected, ARGUS cyclically transmits the tones of the selected sets in parallel.</p>
Vectoring mode	<p>Vectoring mode defines how ARGUS behaves when synchronising with DSLAM:</p> <ul style="list-style-type: none"> - Non-vectoring (off) <p>This is standard VDSL2 with non-vectoring-capable DSL access multiplexers (DSLAMs) and modems. However, it can also be used for mixed operation with non-vectoring-capable modems on vectoring-capable DSLAMs. In such a case, the simulated modem is throttled to the ADSL2+ bandwidth (max. 16 Mbit/s).</p> <ul style="list-style-type: none"> - Full vectoring <p>Full vectoring operation requires vectoring-capable DSLAMs and modems. VDSL2 vectoring is supported when this technology is present at both ends of the bundle.</p> <p>Default: Full vectoring</p>
Retransmission (G.INP) 	<p>When retransmission (G.INP, G.998.4) is used, the downstream of VDSL2 links is protected against pulse noise on layer 1. Delays and packet losses are minimised; however, this increases the interleave delay for downstream.</p> <p>Default: Down- & upstream</p> <hr/> <p></p> <p>When VDSL Vectoring or Retransmission (G.INP) are active, ARGUS shows in the status line a blue highlighted „V“ for Vectoring or „R“ for Retransmission. A flashing „R“ signals that retransmissions are occurring.</p> <p></p> <p>When VDSL Vectoring or Retransmission (G.INP=) are unlocked but not active, ARGUS shows in the status line a grey highlighted „V“ for Vectoring and „R“ for Retransmission.</p>

Suppress profile 30a	Determines whether profile 30a is to be suppressed or not. Default: No	
MAC address, see page 41.		
Gratuitous ARP	Determines whether Gratuitous ARP (Address Resolution Protocol) is to be used. When this is set to “on”, ARGUS transmits one ARP message every 60 seconds unrequested to communicate its MAC address. Default: Off	
G.fast:		
Rated / threshold value	Setting bitrate	Entry of the comparison value for the upstream and downstream bitrate [kbit/s] using the number keys. ARGUS displays a large green "OK" in the ARGUS status screen if the current bitrate is above the set value for an active G.fast connection and an "OK" for connection parameters below the target, otherwise "NOK". Default: d: 0 and u: 0
	CRC limit value	Sets the max. CRC (cyclic redundancy check) value. ARGUS displays a large green "OK" in the ARGUS status screen if the current value is below the set limit value for an active G.fast connection and an "OK" for connection parameters below the target, otherwise "NOK". Range: 0 to 999,999,999 Default: far: * and near: * (*=off)
	FEC limit value	Determines the maximum FEC (forward error correction) value. ARGUS displays a large green "OK" in the ARGUS status screen if the current value is below the set limit value for an active G.fast connection and an "OK" for connection parameters below the target, otherwise "NOK". Range: 0 to 999,999,999 Default: far: * and near: * (*=off)
MAC address, see page 41.		

Status screen:

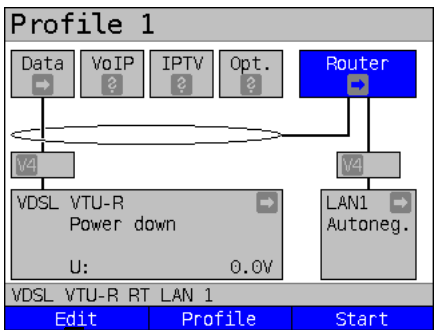

ARGUS in Status screen, in this example VDSL router mode is selected.

<Edit> Open settings

Profiles (<Edit> edit profiles)

Bridge/Router

IP version (Bridge + Router)	Determines which IP version is to be used.
	IPv4: Internet Protocol version 4 acc. to RFC 791 IPv6: Internet Protocol version 6 acc. to RFC 2460 Dual Stack If IPv6 is available, this protocol is preferred; if not, IPv4/IPv6: ARGUS switches to IPv4. Default: IPv4
IPv4 (Bridge + Router)	Definition of IP address assignment IP mode: Static IP: Fixed IP address DHCP server: Assignment of IP address by ARGUS Default: DHCP server Own IP Range: Range 0.0.0.0. to 255.255.255.255 Address: Default: 192.168.10.1 (assignment see RFC 3330) IP netmask: Range: Range 0.0.0.0. to 255.255.255.255 Default: 255.255.255.0 (assignment see RFC 3330) DHCP server: Settings for the DHCP server: (Bridge + Router) - Starting and ending IP address Range: Range 0.0.0.0. to 255.255.255.255 Default: (assignment see RFC 3330) Start: 192.168.10.30 End: 192.168.10.40 Domain name - Duration of reservation for IP addresses Range: 1 - 99999 seconds Default: 240

	NAT (only Router)	NAT (network address translation) on or off. The NAT service automatically and transparently replaces address information (e.g. IP addresses of the LAN) with other address information (e.g. IP addresses of the WAN). Default: NAT on
	SIP port (only Router)	Port used for incoming SIP signalling. Range: 0 to 65535 Default: 5060
IPv6 (only Router)	Firewall	Determines whether ARGUS uses a firewall in router mode. Default: on
	Discard prefix	Specifies whether ARGUS rejects or uses the address prefix (first 64 bits of the IPv6 address, customer/provider-specific). Default: on
VLAN (only Bridge)	VLAN handling	When VLAN tagging is used, a VLAN tag is attached to every outgoing Ethernet frame (from the WAN). The tag is removed from every incoming Ethernet frame. In transparent VLAN, the Ethernet frames are passed on unchanged. Default: Transparent
	VLAN ID	Identifier for the VLAN to which the frame belongs. Every VLAN is assigned a unique number, the VLAN ID. A device that belongs to the VLAN with ID = 2 can communicate with every other device in the same VLAN but not with devices in other VLANs. Range: from 0 to 4095 Default: 2
Data log (Bridge + Router)	Data log on or off	This function must be set to "on" so that a trace file can be sent to the PC; see page 71. After terminating a virtual line (VL) via the corresponding service or the physical layer, ARGUS queries whether the trace file should be sent to the PC. The mini-USB port must also be connected to the PC. For example, when the data log is activated for VL 1, only VL 1 is recorded. When one VL is configured for multiple services and the data log is active, all data of this VL are recorded. Default: off

See chapter „9.4 Virtual line settings“ (see page 95) for further configurations.


7.3 ARGUS in access mode xTU-R

Determining the G.fast and xDSL connection parameters using VDSL as an example (procedures also apply for ADSL connections)


ARGUS is connected directly to the VDSL access via the supplied xDSL lead and the ARGUS socket line (either in front of or behind the splitter). In this case, ARGUS replaces the modem and PC. ARGUS establishes a VDSL connection and determines all relevant VDSL connection parameters. ARGUS displays the VDSL connection parameters and, if desired, saves them when the link is disconnected.



Use only the patch cable supplied with the device.

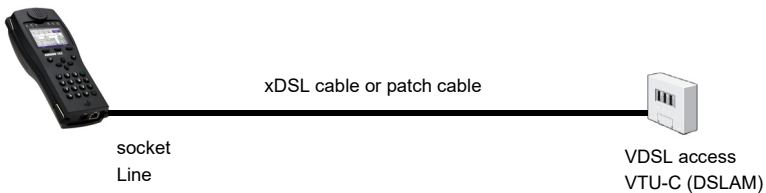

In this example, VDSL VTU-R mode is configured and selected as described in chapter „5 Configuring accesses“ (see page 23).

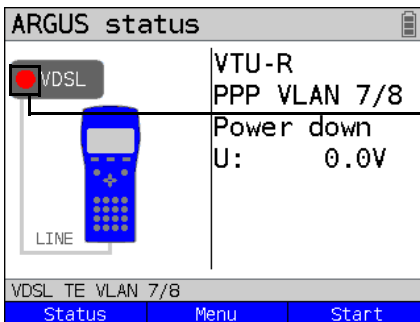


The VDSL test has not yet been started: red LED in the display!

Meaning of LED image in display:

Red LED: no test started

Yellow LED: test started

Green LED: connected

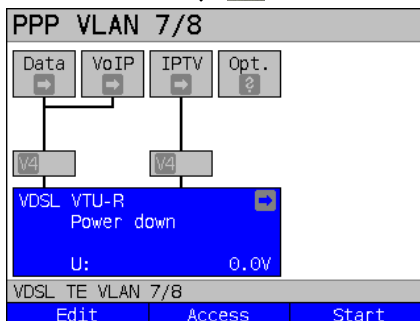


All further functions and procedures are explained using this status screen.

Establishing the G.fast and xDSL connection using VDSL as an example

Profile configuration:

ARGUS uses the settings (see page 29) and limit values (see page 39) stored in the respective profile for establishing a VDSL connection.

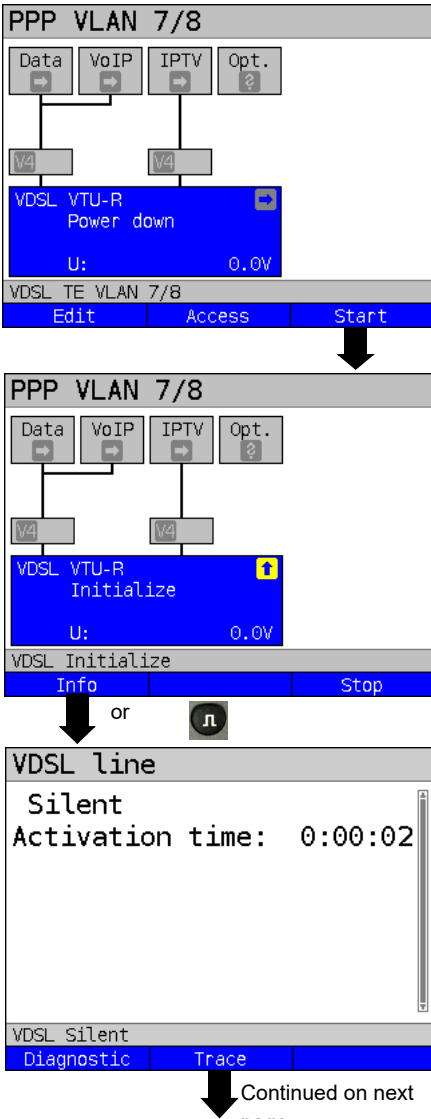

ARGUS in status screen.

ARGUS uses the default profile (PPP VLAN 7/8 in the example) to establish the VDSL connection.

- <Edit>** Edits the VDSL settings and MAC address.
- <Access>** Selects a new access.

Establishing a VDSL connection


ARGUS synchronises with DSLAM (LED "Sync/L1" flashes, display shows element on yellow background). ARGUS displays the current connection status (in this example "Initialize") in the layer-1 box (blue).

While connecting:

Display:

- Current connection status
- Time elapsed since start of synchronisation in h:min:s.


- <Diagnostic>** This function is available on request.

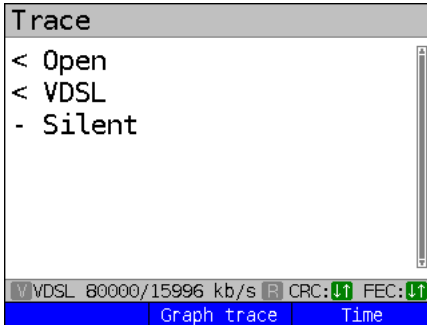

Display of commands

- < = Command sent by ARGUS
- > = Command sent by DSLAM
- = Connection status


Display timestamp

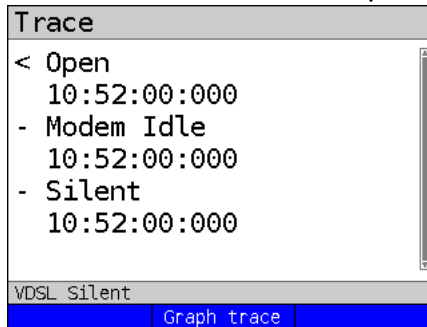

ARGUS shows the time (internal clock, see page 285) at which the commands are received.



Switches to the previous display and the status screen.

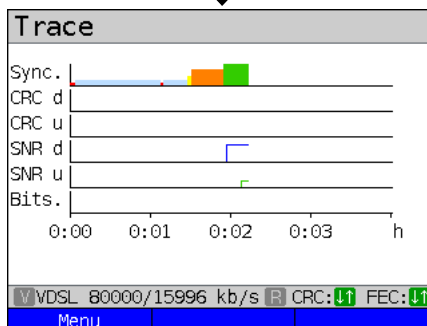


Display the graphical xDSL trace.

Display:

- Synchronising
- CRC error in downstream
- CRC error in upstream (ADSL/VDSL only)
- SNR in downstream
- SNR in upstream (ADSL/VDSL only)
- Bitswap events (ADSL/VDSL only)

See page 51 for an explanation of the colour code.

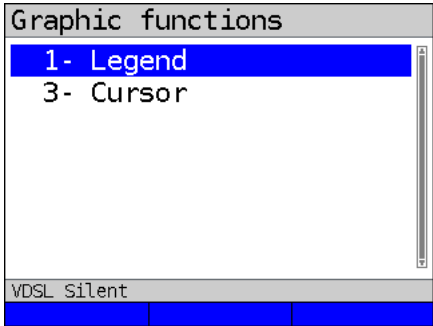


1

You can show and hide the label for the xDSL trace using the number key.

3

The function of the cursor is described on page 55.

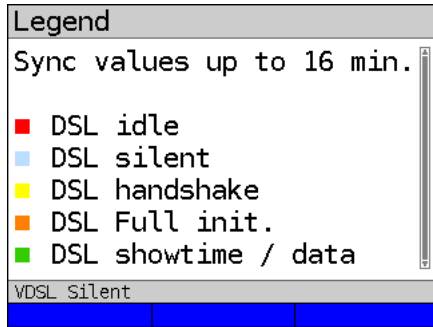

The colour code in the xDSL trace can be interpreted as follows.

Legend and explanations:


Recording time	Resolution	Leap factor
16 min.	1 sec.	-
32 min.	2 sec.	2
64 min. (1 h 4 min.)	4 sec.	2
128 min. (2 h 8 min.)	8 sec.	2
256 min. (4 h 16 min.)	16 sec.	2
512 min. (8 h 32 min.)	32 sec.	2
1024 min. (17 h 4 min.)	64 sec. (1 min. 4sec.)	2
2048 min. (1 d 10 h 8 min.)	128 sec. (2 min. 8 sec.)	2
4096 min. (2d 20 h 16 min.)	256 sec. (4 min. 16 sec.)	2
8192 min. (5 d 16 h 32 min.)	512 sec. (8 min. 32 sec.)	2

Meaning of the modem states:

Colour	Short form	Explanation
red	■ DSL Idle	No-load
light blue	■ DSL Silent	ARGUS transmits handshake tones (silence on the DSLAM side).
yellow	■ DSL Handshake	A handshake (G.hs) signal from the remote station was detected.
orange	■ DSL Full init.	Start of the training phase following successful handshake.
green	■ DSL Showtime / Data	Showtime achieved. The TC sublayer is established. ARGUS is ready for operation.

Connected

As soon as the connection is established, (LED "Sync/L1" continuously illuminated and green tick mark in layer 1 box), ARGUS determines the VDSL connection parameters. After synchronising, ARGUS must remain connected to the VDSL access for at least 20 seconds. Only then can ARGUS save all VDSL connection parameters.

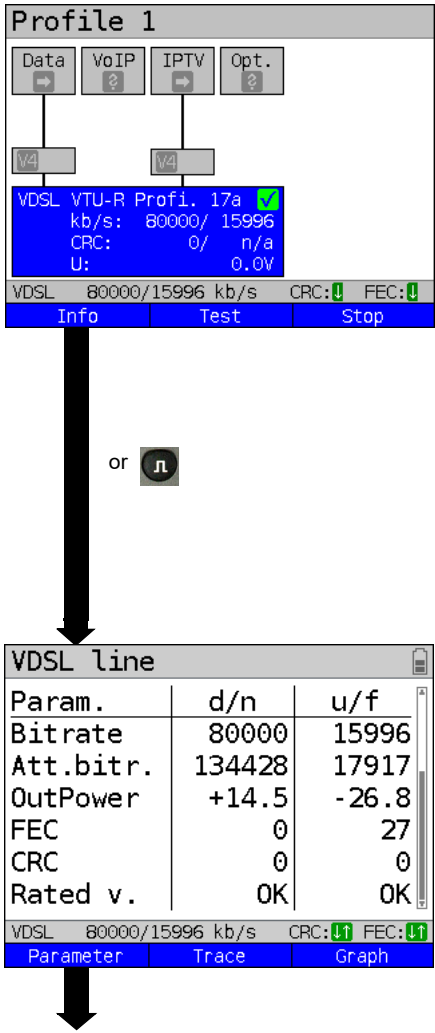

Continued on next page

ARGUS in status screen.

Display (layer-1 box)

- Access and access mode
- VDSL profile (8,12,17,30 or 35 MHz)
- d: Downstream data rate
u: Upstream data rate
- Number of CRC errors in downstream/upstream
- DC voltage at interface

<Info> Displays the VDSL connection parameters.

<Stop> Disconnects the VDSL connection.

Signals of CRC/FEC error counters:

Symbol	Colours	Explanations
	left and right	
	green / green	No CRC errors occurred in the final second.
	red / red	In the final second, FEC errors occurred in both upstream and downstream.
	green / red	No upstream CRC errors occurred in the final second.
	red / green	In the final second, FEC errors occurred in downstream only.

Display of VDSL connection parameters in overview:

- d/n: downstream/near
- u/f: upstream/far



Browse connection parameters

<Trace> Displays trace data, see page 49.

<Graph> Displays the graph, see page 54.

VDSL parameter			
Data Rate [kbit/s]		d u	
Net Data	80000	15996	
Attainable	133983	20493	
Relative capacity		d u	
[%]	59.7	78.0	
VDSL 80000/15996 kb/s R CRC: U1 FEC: U1			
Statistic		QR code	
		Reset	

Displays the connection parameters in long form for downstream (d) and upstream (u), see table page 61.

n/a not available

n/u not used

n/r not received



Browse parameter display

<Reset> Resets the error counters.



Generates QR code.

Display of xDSL parameters as QR code.



Exits the QR code menu.



Statistics			
Ethernet		Rx	Tx
Frames	0	0	0
Bytes	0	0	0
VDSL 80000/15996 kb/s CRC: U1 FEC: U1			

G.fast and VDSL (EFM) - Ethernet statistics

Frames Displays the received (Rx) and transmitted (Tx) Ethernet frames.

Bytes Displays the received (Rx) and transmitted (Tx) Ethernet bytes.




Continued on next page

VDSL line		
Param.	d/n	u/f
Bitrate	80000	15996
Att.bittr.	134428	17917
OutPower	+14.5	-26.8
FEC	0	27
CRC	0	0
Rated v.	OK	OK
VDSL 80000/15996 kb/s CRC: FEC:		
Parameter	Trace	Graph



The following graphs and graph functions are only available for G.fast, ADSL and VDSL.

Displays the bit distribution
i.e. transported bits per tone (channel)
y-axis: bits
x-axis: tones (channels)
Line interference sources can be identified on the basis of the bit distribution (e.g. due to HDSL, RF, DPBO etc.).

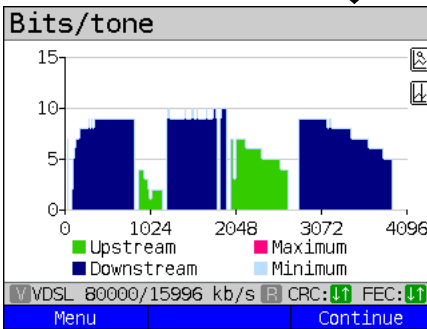

ARGUS switches to the previous display.

<Continue> Switches to next graph.

Graph functions:

The graph functions such as zoom, cursor and setting of the x-axis enable detailed analysis of the graphs:



Exits the menu without changing.



You can also use this number key to toggle the zoom function within a graph.



The function of the cursor is described on page 56.



Toggles the x-axis from tone to frequency is described on page 57.



Toggles the min/max is described on page 57.



Switches automatically to the next graph with the view and adopts all settings for this graph.



and




Saves the result without disconnecting the connection.

Graphic functions	
2- Zoom	
3- Cursor	
9- x-axis setting	
0- Min/max	
*7- Store	
✓- Next	
V VDSL 80000/15996 kb/s R CRC: FEC:	

Continued on
next page



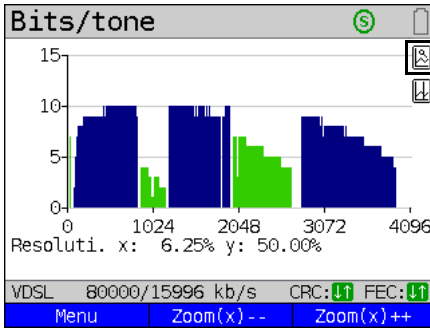


The magnifying glass shown in the display rests on a white background.

It has not yet been zoomed.

<Zoom(x)++ Magnifies the middle section of the graph (100%).


<Zoom(x)-- Reverses **<Zoom(x)++** and resets magnification.

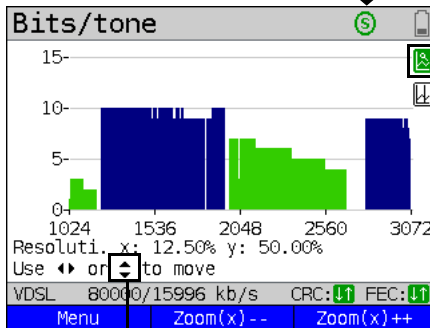

The magnifying glass shown in the display rests on a dark background, indicating that it has been zoomed.



Use the cursor keys to horizontally scroll through the zoomed range.

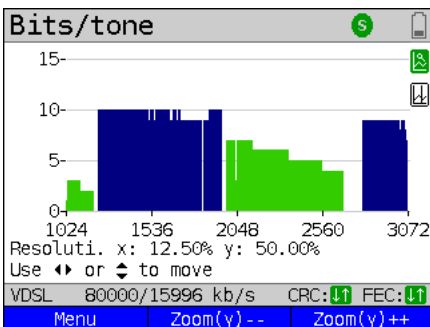


[Shift] toggles the softkey assignment.

ARGUS switches from x-axis zoom to y-axis zoom

<Zoom(x)++ Magnifies the middle section of the graph (100%).

<Zoom(y)-- Reverses **<Zoom(y)++** and resets magnification.

Continued on
next page

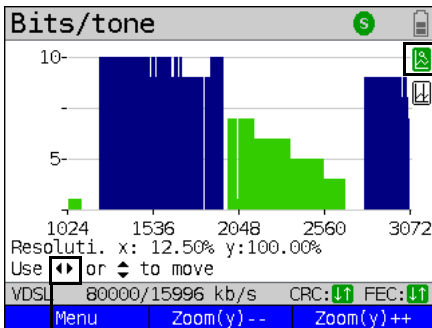


The magnifying glass shown in the display rests on a dark background, indicating that it has been zoomed.



You can use the cursor keys to scroll vertically through the zoomed range.




Activates the cursor directly.

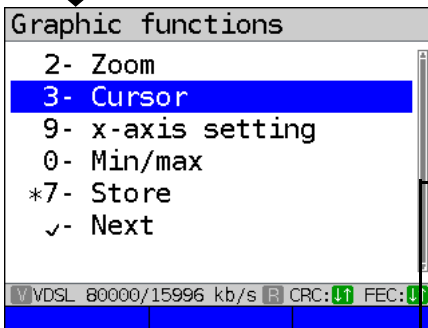

The cursor functions enables precise determinations on the graphs.

When the Cursor function is started, a green cursor line appears in the middle of the graph.

<Cursor> You can toggle the cursor on and off as needed using the Cursor softkey after activating it in the menu.

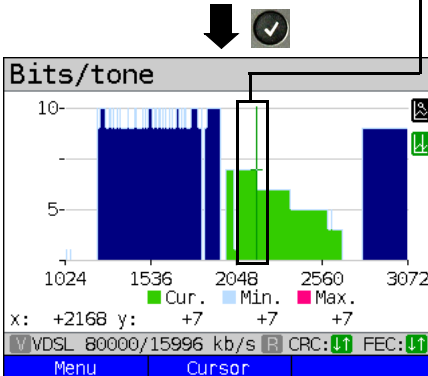

The values of the graph for the position under the cursor are displayed in the graph as follows:


x: 2168. Tone

y: 7 bits




Use the left and right cursor keys to move the cursor to any point on the graph to measure it. Briefly pressing a cursor key causes the cursor to jump to by one position in the graph. When the cursor key is held down, the steps the cursor covers in the graph become progressively larger.

Continued on next page

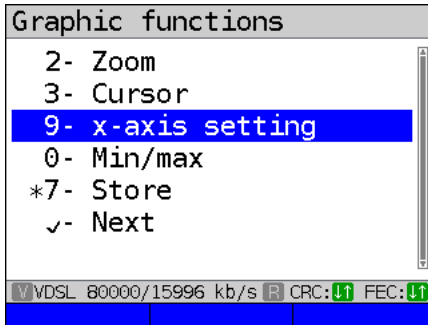

By toggling the x-axis you can change its labelling from tone to frequency.

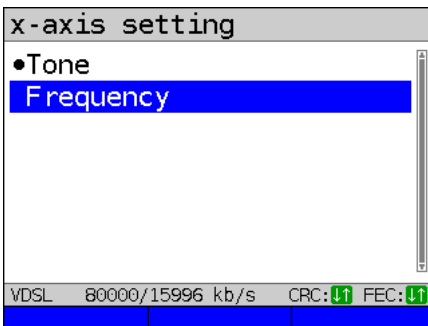


Available options:

- Tone:** Displays the values of the x-axis as tones.
- Frequency:** Displays the values of the x-axis as frequencies.




Direct setting of x-axis.

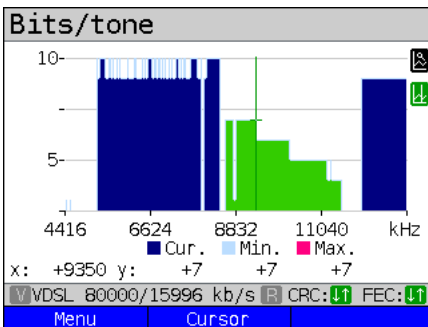


You can use the left and right cursor to scroll through the range (in this example frequency).


The zoom function and the cursor function can also be combined. However, the starting position of the cursor can vary. The graph functions can be used for all graphs.


Continued on
next page

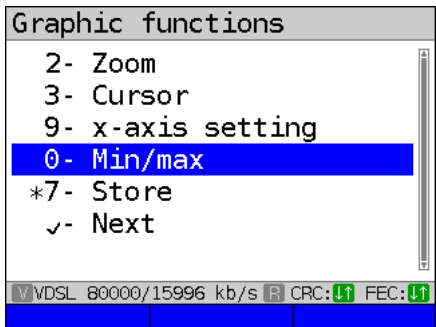

With the Min/Max setting, the bits/tone and SNR/tone graphs display the minimum and maximum values.

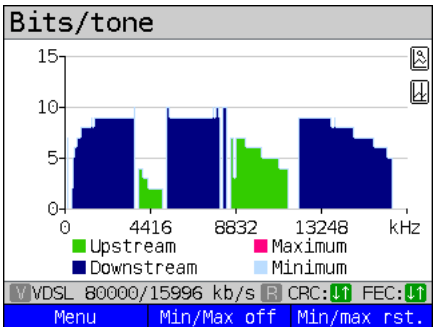


 Displays the maximum value (pink).

 Displays the minimum value (blue).

<Min/Max off> Hide min/max values.


<Min/Max rst.> Reset min/max values.

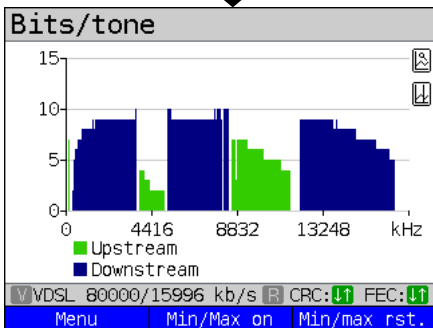


Displays the min/max softkeys.



Continued on next page

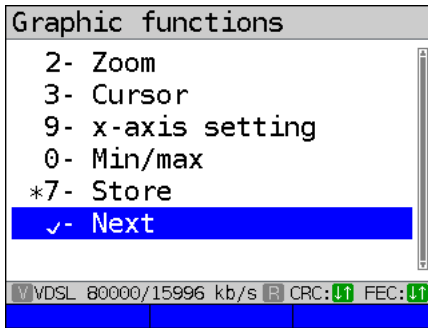


Additional result graphs

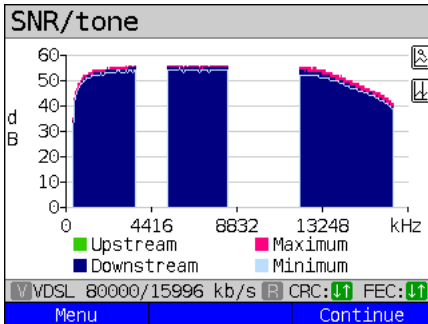

Display of signal-to-noise ratio (SNR) for each tone
y-axis: SNR in dB
x-axis: tones (channels)

This enables interference sources for individual tones (channels) to be detected, in this example downstream power backoff (DPBO).

<Menu> Opens the graph functions (see page 55).

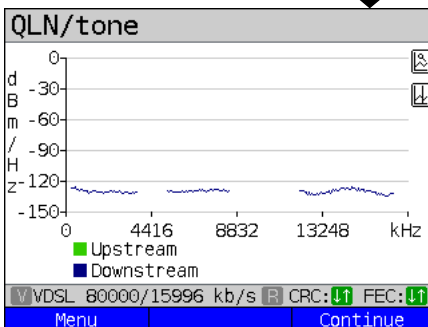


Display of quiet line noise (QLN) for each tone. The QLN represents the quiet line noise of the twisted pair as a function of the frequency.
y-axis: QLN in dBm/Hz
x-axis: tones (channels)

The QLN enables detection of narrow-band interference sources due to e.g. coupling of medium-wave emission sources or defective switching components. These interference sources are represented as narrow peaks. This example shows a line with interference from a power supply.

<Menu> Opens the graph functions (see page 55).

Continued on next page

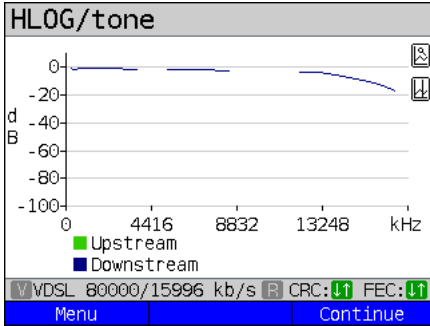

Displays the amplitude component of the transmission function (HLOG) for each tone. HLOG shows the attenuation of a connection as a function of the frequency.


Y-axis: Hlog in dB

X-axis: tones (channels)

On a nominally functioning line, the values drop off as the frequency increases; this function is virtually horizontal on short lines. This example shows a short line.

In the HLOG graphs, a shift can occur in calculating the upstream and downstream values from DSLAM compared to the downstream values from ARGUS. It can also happen that DSLAMs do not transmit the HLOG upstream values or send falsified values.

Example: Mismatch + poor contact on ADSL

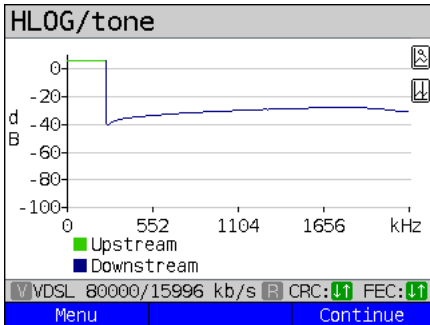


DSL connections are often possible even though one of the two cores is high-ohm or even interrupted (only capacitive coupling). This results in dropped connections and data losses. Such problems can be due to oxidized lines, poor contacts in the telephone sockets, loose terminals or improperly insulated lines. In connections like this, lower frequencies are attenuated much more than higher frequencies. This is recognisable as an atypical relationship between upstream and downstream attenuation, as well as in the HLOG curve. In the event of a problem on one of the wires, the values for the low frequencies are often less than for the higher frequencies.

<Menu> Opens the graph functions, see page 55.

<Continue> ARGUS returns to the bits/tonne graph.

Example: Bridge tap on ADSL

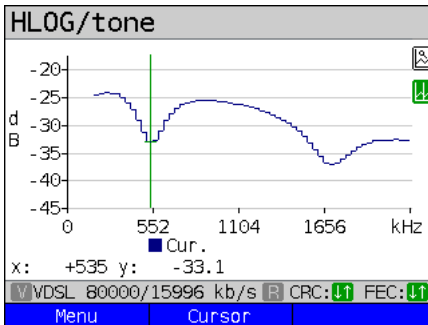

The example at left shows a sink. It can indicate a stub line (bridge tap).

With the rule of thumb:


$$L[m] = 50 / f [MHz],$$

you can estimate the length of a stub line if you know the frequency in MHz (in this example 0.535 MHz):

$$L [m] = 50 / 0,535 \text{ MHz} = 93 \text{ m}$$

There is a stub line approx. 93 m long.

Example: Bridge tap on VDSL

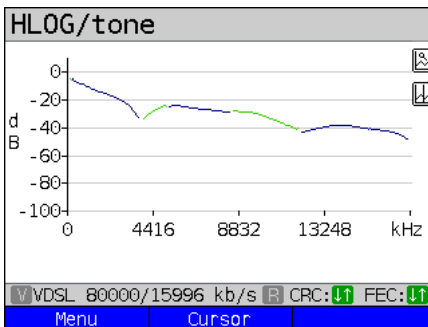

In this example, given a frequency of approx. 3.85 MHz, the stub line is approx. 13 m long.

ARGUS determines the following ADSL connection parameters:

ADSL connection parameters:	
Net data rate	Actually usable ATM bitrate in kbit/s.
Attainable data rate	Theoretically attainable ATM bitrate in kbit/s.
Relative capacity	Line capacity utilisation in percent.
Latency mode	ARGUS shows "interleaved" or "fast", depending on the DSLAM configuration.
Attenuation	Attenuation on a line over the entire length and bandwidth in dB. From a specific attenuation on, certain access types are no longer recommended. However, it is better to compare individually calculated attenuation values that are recommended for specific access types with the dB value in the HLOG graph, at 300 kHz (cursor).
Output power	Output power in dBm with reference to 1 mW.





SNR margin	Signal-to-noise ratio margin in dB. The SNR margin is a measure of how much additional noise the transmission can stand and still maintain a bit error rate (BER) of 10^{-7} . This value is considered a reserve against interference signals. Rule of thumb: The SNR margin in downstream should - doubled - be at least equal to or greater than the SNR margin in upstream.
Impulse noise prot.	INP describes the quality of the protection against pulse interference. The number of consecutive DMT symbols that can be completely distorted without causing errors in higher layers.
Interleave delay	The delay (in ms) due to interleaving of data blocks.
FEC	Forward error correction Number of transmission errors corrected using the checkbytes of a codeword. f (far): Errors that the DSLAM detects and passes to ARGUS. n (near): Errors that ARGUS detects in the transmitted blocks.
CRC	Cyclic redundancy check The checksum of the superframes transmitted by the remote station does not agree with the locally calculated figure. Possible cause: line interference. f (far): Errors that the DSLAM detects and passes to ARGUS. n (near): Errors that ARGUS detects in the transmitted blocks.
HEC	Header error checksum Number of ATM cells with incorrect header checksums. f (far): Errors that DSLAM detects and passes to ARGUS. n (near): Errors that ARGUS detects in the transmitted blocks.
ES	Errored seconds Number of seconds containing one or more erroneous sync words and/or one or more CRC anomalies.
SES	Severely errored seconds Number of seconds containing one or more erroneous sync words or at least 50 CRC anomalies.
LOSS	Loss of signal seconds Shows the number of LOS errors in one second.

UAS	<p>Unavailable seconds</p> <p>Number of seconds in which the ADSL link was unavailable. The connection is considered unavailable at 10 consecutive SESs at the latest. The 10 SESs are added to the time that the connection is unavailable. Once the connection is unavailable, it only becomes available when no SESs occur in 10 consecutive seconds. The 10 SES-free seconds are added to the time that the connection is unavailable.</p>
Reset	Indicates how often the user resets the error counters using the <Reset> softkey.
Resync	Number of resyncs by ARGUS.
Bitswap events	Shows how much data is diverted from a faulty transmission channel (up- and downstream) to other channels.
Retransmission (G.INP)	<p>This parameter shows whether retransmission is activated for down- and/or upstream in DSLAM. When retransmission is activated, faulty data transmission units (DTUs) caused by transmission problems are requested and transmitted again. The following additional parameters are shown when retransmission is activated:</p> <p>The blue R in the ARGUS status line signals that retransmission is activated in DSLAM.</p> <p>R = Retransmission configured or not active (grey)</p> <p>R = Retransmission active (blue)</p> <p>R = Retransmission working (red)</p>
Vendor far	ATU-C vendor.
Version	Vendor-specific information, contains the software version of the ATU-C side (DSLAM).
Vendor near	Manufacturer of the ARGUS chipset (ATU-R).
Version	Vendor-specific information, contains the software version of ARGUS.

ARGUS determines the following VDSL connection parameters

VDSL connection parameters:	
Net data rate	Actually usable ATM bitrate in kbit/s.
Attainable data rate	Theoretically attainable ATM bitrate in kbit/s.
Relative capacity	Line capacity utilisation in percent.





SNR margin	<p>Signal-to-noise ratio in the bands used in dB.</p> <p>The SNR margin is a measure of how much additional noise the transmission can stand and still maintain a bit error rate (BER) of 10^{-7}. The value is considered a reserve against interference signals.</p> <p>Bands not used are indicated with n/u.</p>
Loop attenuation	<p>Attenuation on a line over the entire length and bandwidth in dB.</p> <p>From a specific attenuation on, certain access types are no longer recommended. However, it is better to compare individually calculated attenuation values that are recommended for specific access types with the dB value in the HLOG graph, at 1 MHz (cursor). Bands not used are indicated with n/u.</p>
Signal attenuation	<p>Attenuation of the signal in dB in the corresponding bands.</p> <p>Bands not used are indicated with n/u.</p>
Output power	Output power in dBm with reference to 1 mW.
Interleave delay	The delay (in ms) due to interleaving of data blocks.
Impulse noise prot.	INP describes the quality of the protection against pulse interference. The number of consecutive DMT symbols that can be completely distorted without causing errors in higher layers.
FEC	<p>Forward error correction</p> <p>Number of transmission errors corrected using the checkbytes of a codeword.</p> <p>f (far): Errors that the DSLAM detects and passes to ARGUS.</p> <p>n (near): Errors that ARGUS detects in the transmitted blocks.</p>
CRC	<p>Cyclic Redundancy Check</p> <p>The checksum of the superframes transmitted by the remote station does not agree with the locally calculated figure. Possible causes: line interference.</p> <p>f (far): Errors that DSLAM detects and passes to ARGUS.</p> <p>n (near): Errors that ARGUS detects in the transmitted blocks.</p>
ES	<p>Errored seconds</p> <p>Number of seconds containing one or more erroneous sync words and/or one or more CRC anomalies.</p>
SES	<p>Severely errored seconds</p> <p>Number of seconds containing one or more erroneous sync words or at least 50 CRC anomalies.</p>
LOSS	<p>Loss of signal seconds</p> <p>Shows the number of LOS errors in one second.</p>

UAS	<p>Unavailable seconds</p> <p>Number of seconds in which the VDSL link was unavailable. The connection is considered unavailable at 10 consecutive SESs at the latest. The 10 SESs are added to the time that the connection is unavailable. Once the connection is unavailable, it only becomes available when no SESs occur in 10 consecutive seconds. The 10 SES-free seconds are added to the time that the connection is unavailable.</p>
Reset	<p>Indicates how often the user resets the error counters using the <Reset> softkey.</p>
Resync	<p>Number of resyncs by ARGUS.</p>
Showtime no sync	<p>Shows how often the connection status "showtime" was achieved without a long-term stable connection.</p>
Bitswap events	<p>Shows how much data is diverted from a faulty transmission channel (up- and downstream) to other channels.</p>
Vectoring	<p>The vectoring mode shows whether this remote station supports VDSL2 vectoring (ITU-T G.993.5).</p> <ul style="list-style-type: none"> - Display shows "off" for non-vectoring. - ARGUS displays "Vectoring friendly" or "Full Vectoring" when vectoring is supported. <p>See page 43 for more information.</p>
SRA (Seamless rate adaption)	<p>This parameter shows whether SRA is activated for down- and/or upstream in DSLAM. Seamless rate adaption (SRA) is a seamless adaption of the data rate during a DSL connection. In SRA, the data rate is adapted depending on the SNR margin during a connection.</p>
Retransmission (G.INP)	<p>This parameter shows whether retransmission is activated for down- and/or upstream in DSLAM. When retransmission is activated, faulty data transmission units (DTUs) caused by transmission problems are requested and transmitted again.</p> <p>The following additional parameters are shown when retransmission is activated:</p> <p>The blue  in the ARGUS status line signals that retransmission is activated in DSLAM.</p> <p> = Retransmission configured or not active (grey)</p> <p> = Retransmission active (blue)</p> <p> = Retransmission working (red)</p>

	Data transmission units (DTU)	Retransmission is performed before the CRC mechanism. As long as the retransmission mechanism requests and transmits the erroneous DTUs in corrected form, no CRC errors (data losses) occur. If the retransmission mechanism cannot correct faulty transmissions, e.g. due to sustained interference, CRC errors (data losses) occur. - Retransmi. Multiple retransmitted DTUs due to a transmission problem. Is also displayed in the overview page 52 as "Retransmi". - Correct: Successful retransmission of a DTU - Uncorrect: Unsuccessful retransmission of a DTU
	INP REIN	In ARGUS, interference immunity (DSLAM setting) is displayed with respect to REIN INP. This describes the quality of the protection against pulse interference. REIN (Repetitive electrical impulse noise) describes periodic interference pulses, usually caused by 230 V AC voltage from the supply mains. The value indicates the number of consecutive DMT symbols that can be completely distorted without causing errors in higher layers (1 DMT symbol = ~250 µs).
	INP SHINE	In ARGUS, interference immunity (DSLAM setting) is displayed with respect to SHINE INP. This describes the quality of the protection against pulse interference. SHINE (single high impulse noise event) describes random, unpredictable, non-periodic interference pulses. The value indicates the number of consecutive DMT symbols that can be completely distorted without causing errors in higher layers (1 DMT symbol = ~250 µs).
	ETR	The expected throughput rate (ETR) in kBit/s is the minimum data rate that can be provided through complete error correction through retransmission.
Elec.length@1MHz	Indication of the electrical length for a frequency of 1 MHz in dB. R: VTU-R side C: VTU-C side	
Vendor far	VTU-C vendor.	
Version	Vendor-specific information, contains the software version of the VTU-C side (DSLAM).	
Vendor near	Manufacturer of the ARGUS chipset (VTU-R).	
Version	Vendor-specific information, contains the software version of ARGUS.	

ARGUS determines the following G.fast connection parameters:


G.fast connection parameters:	
Net data rate	Actually usable bitrate in kbit/s.
Attainable data rate	Theoretically attainable bitrate in kbit/s.
Relative capacity	Line capacity utilisation in percent.
SNR margin	<p>Signal-to-noise ratio in the bands used in dB.</p> <p>The SNR margin is a measure of how much additional noise the transmission can stand and still maintain a bit error rate (BER) of 10^{-7}. The value is considered a reserve against interference signals.</p> <p>Bands not used are indicated with n/u.</p>
Signal attenuation	<p>Attenuation of the signal in dB in the corresponding bands.</p> <p>Bands not used are indicated with n/u.</p>
Output power	Output power in dBm with reference to 1 mW.
Interleave delay	The delay (in ms) due to interleaving of data blocks.
Impulse noise prot.	INP describes the quality of the protection against pulse interference. The number of consecutive DMT symbols that can be completely distorted without causing errors in higher layers.
FEC	<p>Forward error correction</p> <p>Number of transmission errors corrected using the checkbytes of a codeword.</p> <p>f (far): Errors that the DSLAM detects and passes to ARGUS.</p> <p>n (near): Errors that ARGUS detects in the transmitted blocks.</p>
CRC	<p>Cyclic Redundancy Check</p> <p>The checksum of the superframes transmitted by the remote station does not agree with the locally calculated figure.</p> <p>Possible causes: line interference.</p> <p>f (far): Errors that the DSLAM detects and passes to ARGUS.</p> <p>n (near): Errors that ARGUS detects in the transmitted blocks.</p>
ES	<p>Errored seconds</p> <p>Number of seconds containing one or more erroneous sync words and/or one or more CRC anomalies.</p>
SES	<p>Severely errored seconds</p> <p>Number of seconds containing one or more erroneous sync words or at least 50 CRC anomalies.</p>

LOSS	Loss of signal seconds Shows the number of LOS errors in one second.
UAS	Unavailable seconds Number of seconds in which the VDSL link was unavailable. The connection is considered unavailable at 10 consecutive SESs at the latest. The 10 SESs are added to the time that the connection is unavailable. Once the connection is unavailable, it only becomes available when no SESs occur in 10 consecutive seconds. The 10 SES-free seconds are added to the time that the connection is unavailable.
Reset	Indicates how often the user resets the error counters using the <Reset> softkey.
Resync	Number of resyncs by ARGUS.
Showtime no sync	Shows how often the connection status "showtime" was achieved without a long-term stable connection.
Bitswap Events	Shows how much data is diverted from a faulty transmission channel (up- and downstream) to other channels.
SRA (Seamless Rate Adaption)	This parameter shows whether SRA is activated for down- and/or upstream in DSLAM. Seamless rate adaption (SRA) is a seamless adaption of the data rate during a DSL connection. In SRA, the data rate is adapted depending on the SNR margin during a connection.
Retransmission (G.INP)	<p>This parameter shows whether retransmission is activated for down- and/or upstream in DSLAM. When retransmission is activated, faulty data transmission units (DTUs) caused by transmission problems are requested and transmitted again. The following additional parameters are shown when retransmission is activated:</p> <p>The blue  in the ARGUS status line signals that retransmission is activated in DSLAM.</p> <p> = Retransmission configured or not active (grey)</p> <p> = Retransmission active (blue)</p> <p> = Retransmission working (red)</p>

	<p>Data transmission units (DTU)</p> <p>Retransmission is performed before the CRC mechanism. As long as the retransmission mechanism requests and transmits the erroneous DTUs in corrected form, no CRC errors (data losses) occur. If the retransmission mechanism cannot correct faulty transmissions, e.g. due to sustained interference, CRC errors (data losses) occur.</p> <ul style="list-style-type: none"> - Retransmi. Multiple retransmitted DTUs due to a transmission problem. Is also displayed in the overview page 52 as "Retransmi". - Correct: Successful retransmission of a DTU - Uncorrect: Unsuccessful retransmission of a DTU
	<p>INP REIN</p> <p>In ARGUS, interference immunity (DSLAM setting) is displayed with respect to REIN INP. This describes the quality of the protection against pulse interference. REIN (Repetitive electrical impulse noise) describes periodic interference pulses, usually caused by 230 V AC voltage from the supply mains. The value indicates the number of consecutive DMT symbols that can be completely distorted without causing errors in higher layers (1 DMT symbol = ~250 µs).</p>
	<p>INP SHINE</p> <p>In ARGUS, interference immunity (DSLAM setting) is displayed with respect to SHINE INP. This describes the quality of the protection against pulse interference. SHINE (single high impulse noise event) describes random, unpredictable, non-periodic interference pulses. The value indicates the number of consecutive DMT symbols that can be completely distorted without causing errors in higher layers (1 DMT symbol = ~250 µs).</p>
	<p>ETR</p> <p>The expected throughput rate (ETR) in kBit/s is the minimum data rate that can be provided through complete error correction through retransmission.</p>
Elec.length@1MHz	<p>Indication of the electrical length for a frequency of 1 MHz in dB.</p> <p>R: FTU-R side</p> <p>C: FTU-C side</p>
Vendor far	<p>Manufacturer of the ARGUS chipset (FTU-R).</p>
Version	<p>Vendor-specific information, contains the software version of the FTU-C side (DSLAM).</p>


Vendor near	Manufacturer of the ARGUS chipset (FTU-R)
Version	Vendor-specific information, contains the software version of ARGUS.

System information for transmission to the ADSL/VDSL remote station

 When a modem is synchronised with a DSLAM, the vendor and device type of the modem is generally displayed in the control system of the DSLAM. For ADSL and VDSL, this occurs according to ITU-T G.997.1. When an ARGUS device synchronises with a DSLAM, the latter reports to the control system the following information, depending on the DSLAM.


Information	Display in DSLAM	Meaning
System vendor ID	0x04, 0x00 (hex)	Country code: Germany
	INGE or 0x49, 0x4E, 0x47, 0x45 (hex)	Provider code: intec Germany
	0x20, 1x01(hex)	System FW version: 1.01.0
Version number	R1.01 U_	Device FW version: 1.01.0
Serial number	ARGUS153-9999-R1.01.0U_	Device type: ARGUS 153 / device serial number 9999

Disconnecting the G.fast and xDSL connection and saving the results

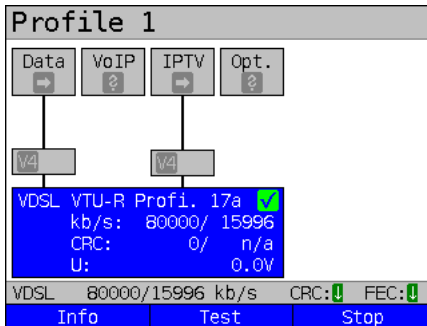

ARGUS in status screen.

Disconnecting the VDSL connection.

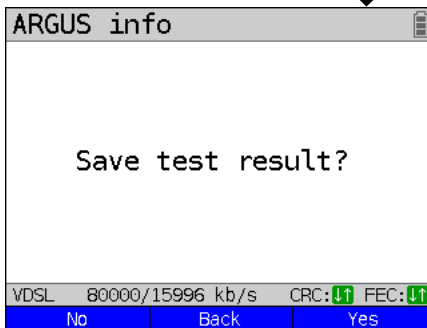

<No> Results are rejected.

<Back> Results are not saved. ARGUS returns to the status display.

<Yes> Saving the result.



ARGUS saves the VDSL connection parameters together with the trace data in the first free slot. You can enter a user-definable name when saving (see page 265). ARGUS automatically suggests a save name, which is composed of:


- the device type (in this example A153)
- the serial number (in this example 40380)
- the configured date (in this example 20th december 2017)
- the configured time (in this example 11:23 h)

If all slots are occupied, you need to manually select a slot to overwrite.




Saving the result

Continued on next page

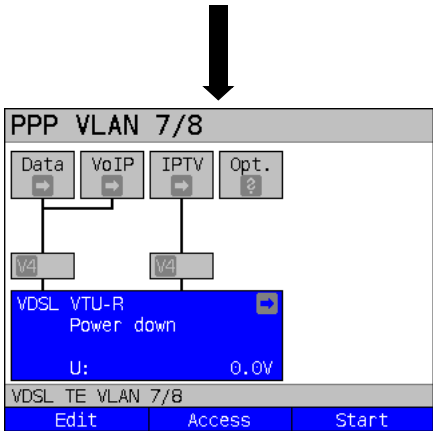



After saving, ARGUS returns to the status display or ARGUS status. You can initialise a new sync attempt directly using <Start>.

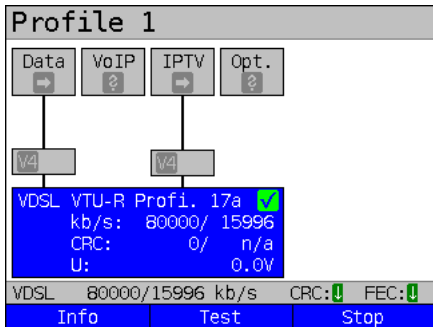Saving the results without disconnecting the G.fast and xDSL connection



ARGUS in status screen.



 and  Saves the result without disconnecting the connections.

ARGUS automatically suggests a save name.

- <Last name> The last name used is suggested.
- <Delete> Deletes the suggestion.
- <Ab>AB> Entry of upper- and lower-case letters and @, /, -, .

Results accepted with the storage name shown.

Displaying stored test results

Test results



Test results	
Used:	1/50
A153_40380_20171220_1142	
A153_40380_20171220_1123	

VDSL TE VLAN 7/8



View



New result	
Rated/threshold values	
Downstream/near	n/a
Upstream/far	n/a

VDSL 80000/15996 kb/s CRC: U1 FEC: U1

Continue



New result	
Activation time:	0:00:31
Profile	8a
Showtime:	0:00:00

VDSL 80000/15996 kb/s CRC: U1 FEC: U1

Continue

ARGUS in Main Menu

In ARGUS status, press **<Menu>**.

When ARGUS is in the selection list for preconfigured accesses, you can switch to the abbreviated main menu with .

Marked the stored test result.

Displays the test results:
ARGUS shows whether the downstream and upstream values are within the limits.



Browse VDSL connection parameters.


<Continue> Displays the signal-to-noise ratio per tone (SNR/tone), QLN/tone, HLOG/tone and the trace data.



Exits results.


7.4 ARGUS in access mode xTU-R bridge

Connect ARGUS to the PC using the patch cable and to the VDSL access using the xDSL cable. In bridge mode, ARGUS acts as a VDSL modem, i.e. ARGUS passively hands on all packets from the Ethernet to VDSL (and vice versa). In this case, the PC is responsible for establishing the connection.

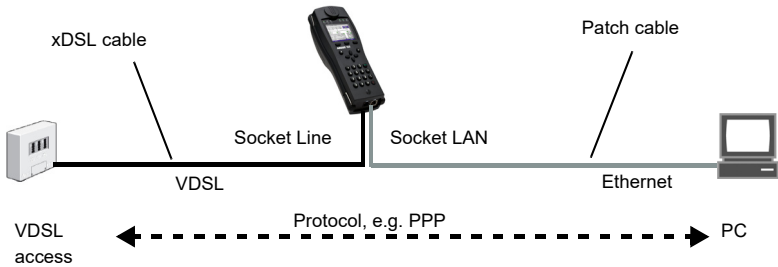

ARGUS in access mode xTU-R bridge

In this example, VDSL VTU-R bridge mode is configured and selected as described in chapter „5 Configuring accesses“ (see page 23).

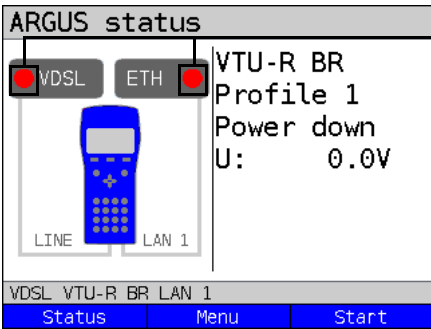

Test not yet started:


red LED in display

Meaning of LED image in display:

- Red LED: no test started
- Yellow LED: test started
- Green LED: connected

Display:

- Access mode
- Default profile, see page 39
- Current status
- DC voltage at interface

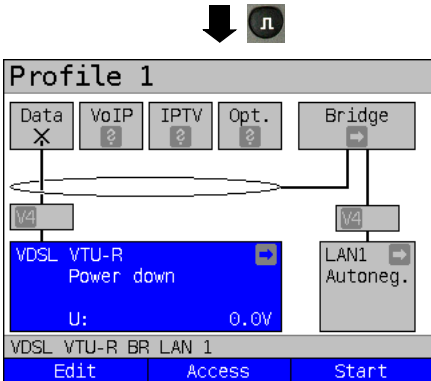

<Edit> VDSL settings.

<Access> Edits an access.

<Start> Starts VDSL.



Switch to bridge mode using the cursor keys, see page 86.

Establishing a VDSL connection

Profile 1

Data ☒ VoIP ☐ IPTV ☐ Opt. ☐ **Bridge** ☒

V4 ☒ V4 ☒

VDSL VTU-R Profi. 17a ☒
 kb/s: 80000/ 15996
 CRC: 0/ 0
 U: 0.0V

LAN1 Autoneg. ☒

VDSL 80000/15996 kb/s CRC: ☒ FEC: ☒

Edit Start

The VDSL connection is established (green tick mark in layer-1 box).

<Edit> Bridge/router parameter settings.

Establishing the VDSL bridge

Profile 1

Data ☐ VoIP ☐ IPTV ☐ Opt. ☐ **Bridge** ☒

V4 ☒ V4 ☒

VDSL VTU-R Profi. 17a ☒
 kb/s: 80000/ 15996
 CRC: 0/ 0
 U: 0.0V

LAN1 ☒
 1000Mb/s
 D: full
 F: off

VDSL 80000/15996 kb/s CRC: ☒ FEC: ☒

Info Stop

The bridge can also be activated directly. If layer 1 has not yet been established, this is automatically started as well.

<Stop> Deactivates bridge mode.

<Info> Displays the activity of bridge mode.

When the physical layer is active (only ADSL), you can run the following tests using the softkey <Test>, see page 112.



No tests are available when bridge mode is active.



Displays the connection parameters.

Switches to the layer-1 box and other elements, see page 86 for explanation.

Profile 1

Data ☐ VoIP ☐ IPTV ☐ Opt. ☐ **Bridge** ☒


V4 ☒ V4 ☒

VDSL VTU-R Profi. 17a ☒
 kb/s: 80000/ 15996
 CRC: 0/ 0
 U: 0.0V

LAN1 ☒
 1000Mb/s
 D: full
 F: off

VDSL 80000/15996 kb/s CRC: ☒ FEC: ☒

Info Stop


<Info> or  Displays the VDSL connection parameters, see page 52.

<Stop> Disconnects the VDSL connection and automatically deactivates the bridge.

7.5 ARGUS in access mode xTU-R router

Connect ARGUS to the PC using the patch cable and to the VDSL access using the xDSL cable.

In router mode, ARGUS replaces both the modem and the router, so that multiple PCs can access a network connection (via a hub/switch). The IP addresses of the network are either issued statically or ARGUS is designated the DHCP server and assigns IP addresses to the connected PCs.

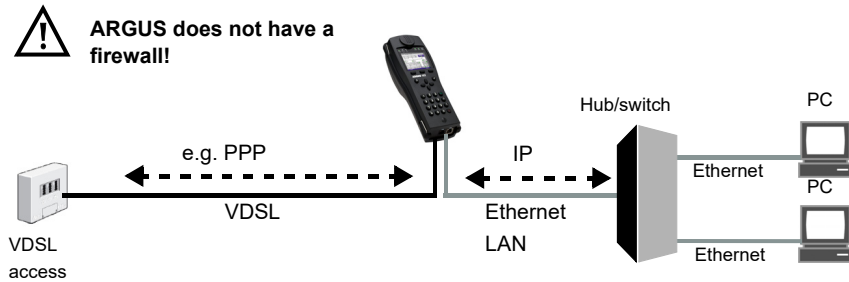


Bridge/router settings, see page 45.

xDSL settings, see page 39 and following.

Settings in access mode xTU-R bridge

In this example, VDSL VTU-R router mode is configured and selected as described in chapter „5 Configuring accesses“ (see page 23).

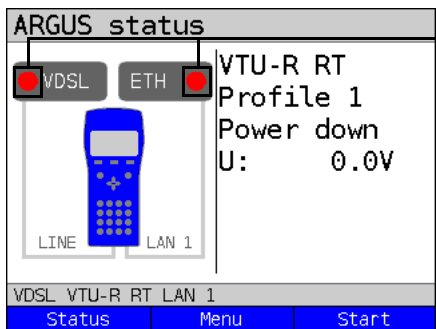

Test not yet started:

red LED in display

Meaning of LED image in display:

Red LED: no test started


Yellow LED: test started

Green LED: connected

Display:

- Access mode
- Default profile (profile 1)
- Current status
- DC voltage at interface



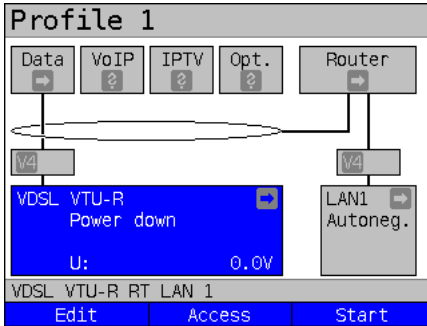

<Edit> VDSL settings.


<Access> Edits an access.

<Start> Starts VDSL.



Switch to router mode using the cursor keys, see page 86.

Establishing the VDSL connection

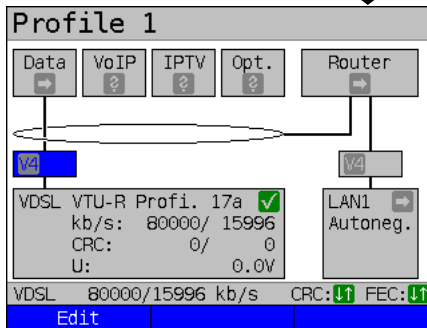


When the physical layer is active (only ADSL), you can run the following tests using the softkey <Test>, see page 112.



No tests are available when router mode is active.

Virtual line selected.

<Edit> Edits the parameters, see chapter „9 Virtual lines (VL)“ (see page 85).

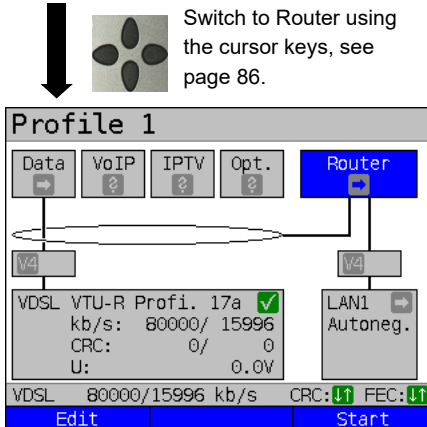

Switch to Router using the cursor keys, see page 86.

Router selected.

The router can also be activated directly. If layer 1 has not yet been established, this is automatically started as well.


<Edit> Bridge/router parameter settings, see page 45.

**Establishing the VDSL router.
The VDSL connection is active.**

See page 74 for bridge mode display and operation.


8 Operation with Ethernet accesses

ARGUS supports the following access modes in Ethernet operation:




The individual tests acquire and store data. It is the user's responsibility to comply with the applicable legal requirements.


Connecting to a modem:


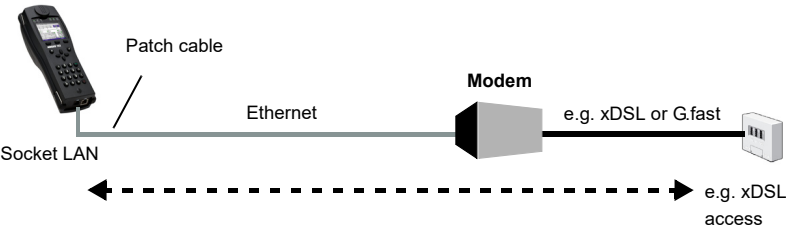


Connecting to a router modem:

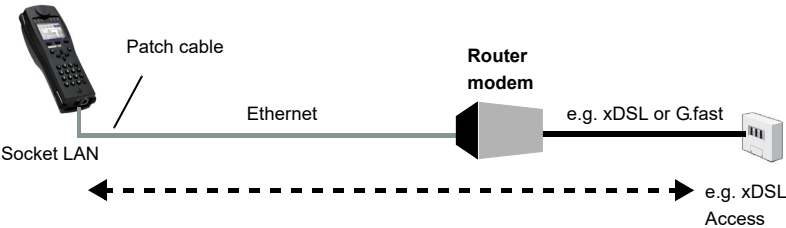

Connecting to a PPTP router modem:

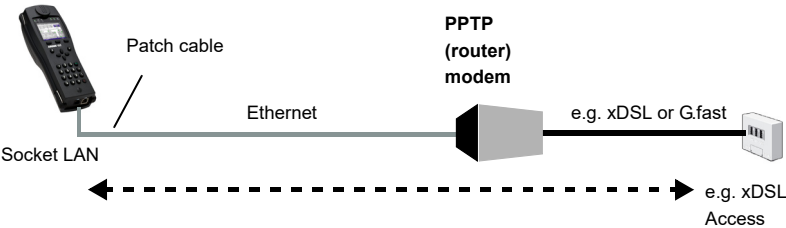

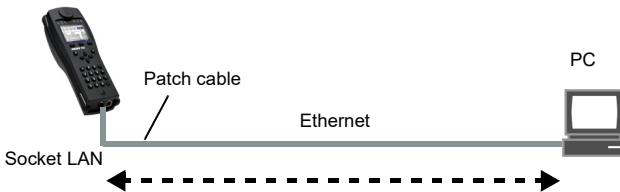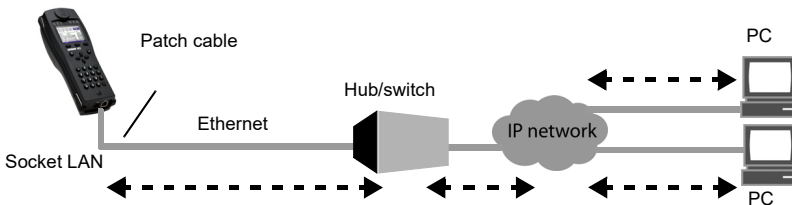Connecting to a PC via IP**Connecting to an IP network:****8.1 Configuring the Ethernet interface**

Please refer to chapter „5 Configuring accesses“ (see page 23) for instructions on configuring the Ethernet interface.

Note: accessing functions via number keys/key combinations

You can call important functions/tests directly using the keys of the ARGUS keypad. You can find an overview of these key combinations on page 112.

8.2 Ethernet settings

You can modify the Ethernet settings as described for VDSL, see page 39.

Setting	Description
Preconfigured accesses	
Phys. parameters:	
Ethernet:	
Autonego- tiation	Switches on or off When autonegotiation is switched on, network cards can automatically detect the correct transmission speed and duplex method of the Ethernet port to which they are connected and configure themselves accordingly. In Ethernet, autonegotiation is based on layer 1 of the OSI model (according to IEEE standard 802.3u). Default: on To set this to off , see the following section below.
MAC address, see page 41.	
Gratu- itous ARP	Determines whether Gratuitous ARP (Address Resolution Protocol) is to be used. When this is set to "on", ARGUS transmits one ARP message every 60 seconds unrequested to communicate its MAC address. Default: Off
LACP	Determines whether the LACP (Link Aggregation Control Protocol) information is to be displayed. Default: off

See chapter „9.4 Virtual line settings“ (see page 95) for further configurations.

Autonegotiation/Ethernet link parameters

Ethernet link autonegotiation is supported by default!

Setting: autonegotiation "on"

When negotiating the link parameters, ARGUS informs the remote station that the following is supported (these settings are fixed and cannot be configured):

- 10, 100 or 1000 Mbit/s
- Half or full duplex
- Flow control on/off (for on: symmetric and asymmetric pause)

Manually configuring the Ethernet link parameters

Setting: autonegotiation "off"

When autonegotiation is deactivated, the speed, duplex and flow control ("pause" method) can be configured in the profile (see above).

- 10, 100 or 1000 Mbit/s, default: **100 Mbit/s**
- Half or full duplex, default: **full**
- Flow control on/off ("Flow control off" is only useful in full duplex mode)


Default: **on**





Unilateral autonegotiation

When a terminal device with autonegotiation "on" encounters a device without autonegotiation, no information is transmitted by the remote station. Even without autonegotiation, the speed is determined using the pulse method/idle pattern (parallel detection). In this case, the terminal device with autodetection generally drops back to half duplex (duplex mismatch possible), which can result in a duplex mode conflict with "poor throughput".

8.3 Establishing an Ethernet connection

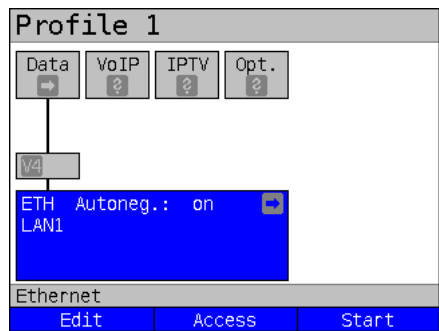

Establishing an Ethernet connection

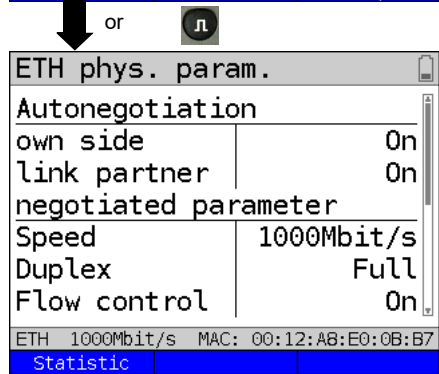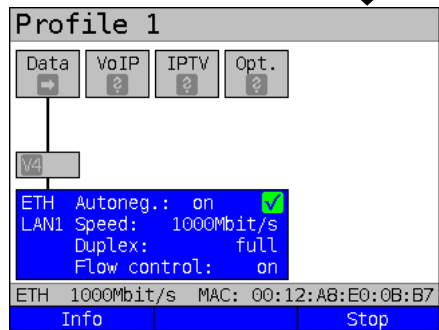

ARGUS in the status screen.

ARGUS uses the default profile (profile 1 in the example) to establish an Ethernet connection.


The test has not yet started!

Meaning of the arrow in the layer-1 box

- Gray arrow no test started
- Yellow arrow test started
- Green check connected mark

- <Info> Displays Ethernet connection parameters.
- <Stop> Stops the Ethernet connection.


- Display:
- Autonegotiation setting
 - Autoneg. at remote station
 - Negotiated speed
 - Type of duplex mode
 - Flow control setting
- <Statistic> Opens Ethernet statistics

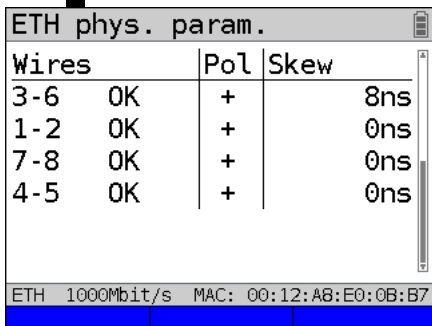

Wires		Pol	Skew
3-6	OK	+	8ns
1-2	OK	+	0ns
7-8	OK	+	0ns
4-5	OK	+	0ns

ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:B7

s. <Statistic> page 82

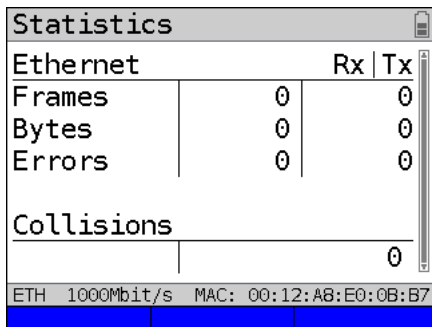


Ethernet	Rx	Tx
Frames	0	0
Bytes	0	0
Errors	0	0

Collisions

0

ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:B7

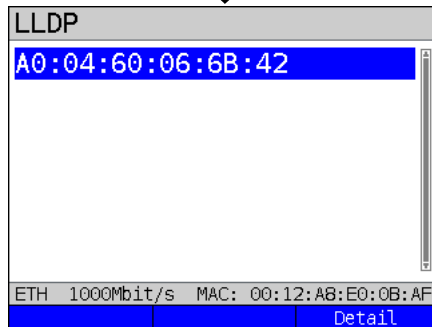

A0:04:60:06:6B:42

ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:AF

Detail

Continued on next page

Displays polling and offset between wires

- Wire allocation:

Left column ARGUS wire allocation

Right column ARGUS wire allocation after autonegotiation with remote terminal. When the display shows "OK", the remote station has inverted the wire allocation.

- Polling

- Skew in ns

Statistic display

- Received (Rx) and transmitted (Tx) internet frames
- Received (Rx) and transmitted (Tx) bytes
- Number of errors on the receiver (Rx) and transmitter (Tx) side
- Number of collisions

<LACP> LACP s. page 84.

Display LLDP:

- Displays the MAC address of neighbour devices.

LLDP	
Port description	
g1	
System name	
System description	
GS724Tv4 ProSafe 24-po...	
ETH 1000Mbit/s	MAC: 00:12:A8:E0:0B:AF

Display LLDP:

- Port description
- System name
- System description
- Chassis ID
- Port ID
- Management address
- Features

Display of LACP information

LACP	
LACP information	
Actor key	17
Partner key	1
Aggregat. ID	2
LACP partner MAC	
58:8B:F3:FE:DA:B3	
ETH 1000Mbit/s	MAC: 00:12:A8:90:03:E7

Display LACP:

- Actor key
- Partner key
- Aggregation ID
- LACP partner MAC address

Disconnecting from the Ethernet connection and saving the results

You can disconnect and save the results from an Ethernet connection as described for VDSL, see page 71.

Saving the results without disconnecting from the Ethernet connection

You can save your results for an Ethernet connection without disconnecting in the same way as for VDSL, see page 72.

9 Virtual lines (VL)


Virtual lines (VL) compile the configurations of layer 2 and layer 3 into profiles, called the VL profiles. These profiles contain e.g. information on protocols, VPI/VCI, VLANs and PPP data (stored in their own subordinate PPP profiles). Virtual lines can be used to conduct tests across multiple VPI/VCI or VLANs and across different protocols.

ARGUS allows you to define up to 20 such VL profiles. In a VL profile, you can edit e.g. the protocol configuration. The VL profiles can be assigned to one or more services independently of the state of the physical layer (layer 1).

Thus, a data test (e.g. IP ping and a VoIP test (e.g. VoIP call) can be performed on a single active access without having to re-establish layer 1 (G.fast, DSL, Ethernet) in spite of differing protocols.


9.1 Virtual lines in the status screen

The virtual lines in the status screen are explained using the access VDSL VTU-R router:

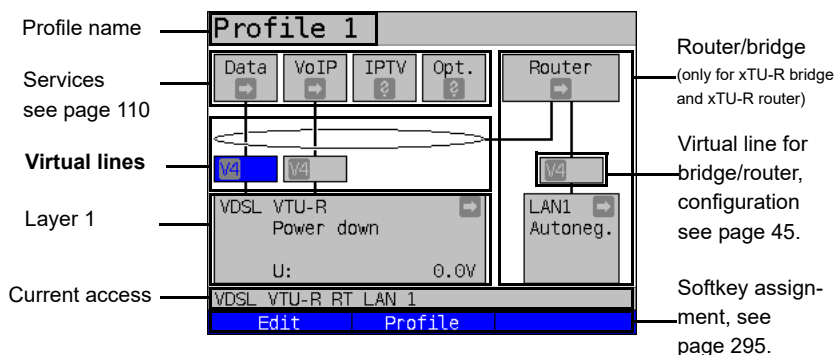


The status screen is divided into three levels that can be individually selected using the cursor keys of the ARGUS keypad.

The status screen is described in greater detail using three display examples.

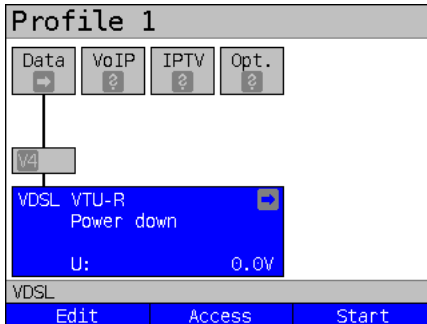

Level 1: physical layer (see page 36)

- <Edit> Configures physical layer.
- <Access> Selects access.
- <Start> Establishes physical layer of the selected access.

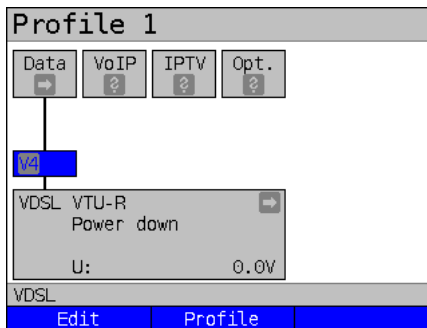


Level 2: virtual lines

- <Edit> Configures virtual line, see page 90.

Configuration options:

- Protocol (IP, PPP, PPTP)
- ATM, see page 95
- VLAN, see page 96
- PPP (PPP profiles)
- PPTP, see page 97
- IP version (IPv4, IPv6, dual)
- IPv4, see page 99
- IPv6, see page 101
- BGP, see page 106
- Data log (for this VL)
- Profile name, see page 102

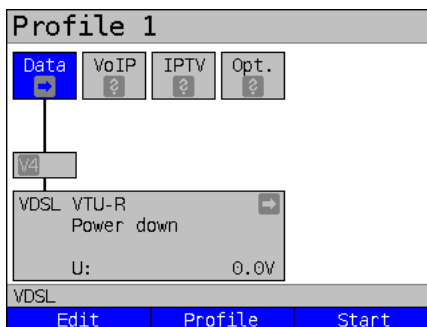

- <Profile> Configures the profile.

Level 3: services (see page 110)

- <Edit> Assigns a VL to a service and configures it.
- <Profile> Configures the profile.
- <Start> Starts the service.

The virtual line and the physical layer start automatically when you press the softkey <Start>.

Depending on the state of the physical layer, the virtual lines or the services, ARGUS displays a variety of symbols in the status screen.



This service has not yet been assigned to a virtual line.



This service, VL or physical layer is idle.



This service is not available (bridge mode only).



Preparing activation of physical layer, VL or service.



Activating the physical layer, VL or service.



Physical layer, VL or service deactivated due to an unexpected occurrence.



Deactivating.



Synchronisation achieved (physical layer) or a VL or service was activated successfully without errors.



A test is currently running in this service.



An error occurred here. Reset with **<Reset>** to continue with the VL/service.

9.2 Virtual line profiles (VL profiles)

The various profile types are explained below:

Profiles (1 - 20), see page 31:

- These contain the assignments of the services (Data, VoIP, IPTV, Opt.) to one or more virtual lines.
- In addition to the services, the settings for the bridge/router and the test parameters can be found here as well.
- Every profile can be assigned an individual profile name.

VL profiles (virtual lines 1 - 20)

- These contain the layer 2/3 settings.
- VL profiles are assigned to services.
- One VL can be assigned to multiple services.
- The VL profiles can be assigned to PPP profiles.

PPP profiles (1 - 20)


- These contain all relevant data for dialling.
- PPP profiles are assigned to VL profiles.
- One PPP profile can be assigned to multiple VL profiles.

Relationships between profile types

When all configurations are reset (see page 289), a VL profile (1-20) is only assigned to the service data in each profile (1-20). One PPP profile is assigned to each VL profile (1-20). All other services (such as VoIP, IPTV and Opt.) are initially not assigned a VL profile or a PPP profile.

The assignment further VL and PPP profiles to services is described starting on page 90.


Default configuration:

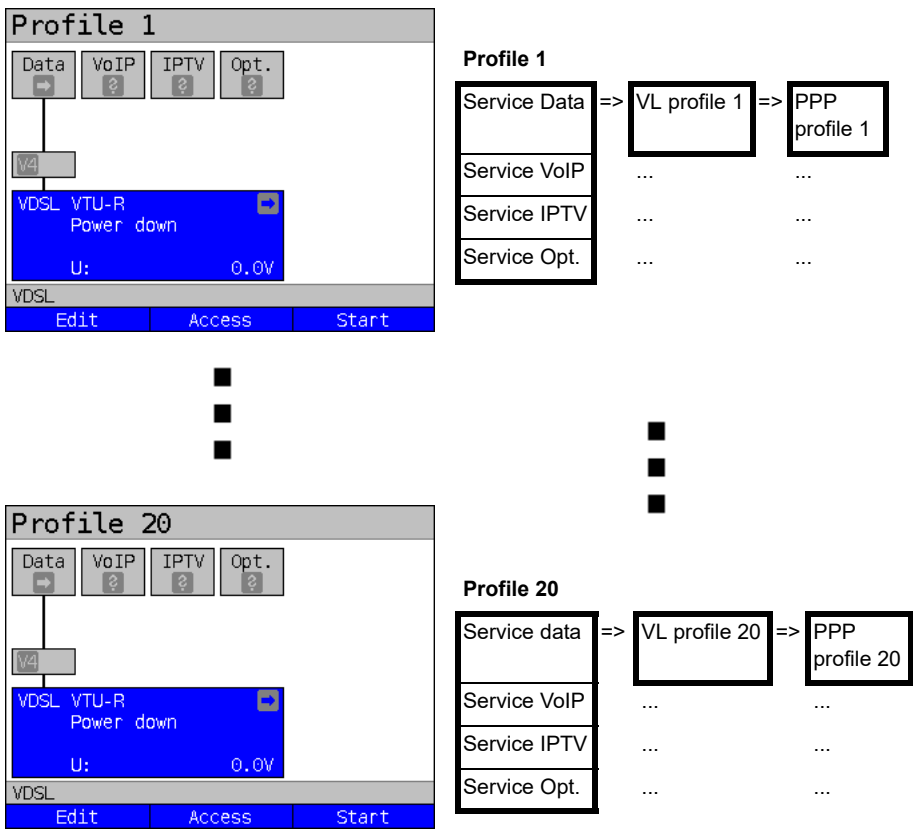


9.3 Activating a virtual line

A service or test must be started in order to activate a virtual line. To enable a test to be started, a service must be configured, and a virtual line assigned to it. In this example, the service Data is configured and assigned to a virtual line.

9.3.1 Starting a service

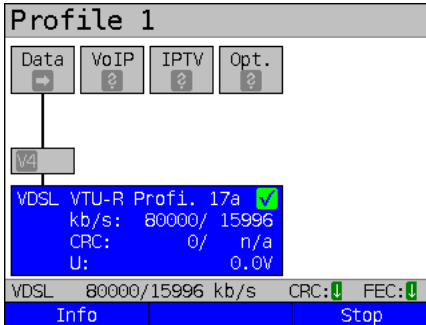

The VDSL access is active.

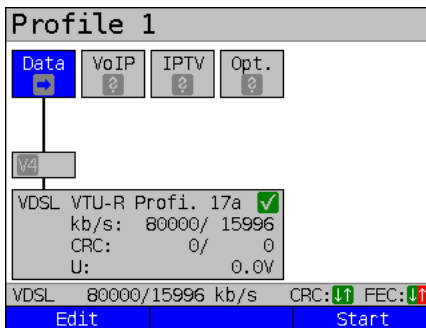


Use the cursor keys to switch from the layer-1 box over the virtual line to the service Data.



If the physical layer is not yet active, this is started automatically with the service or test.

<Start> Starts the service.

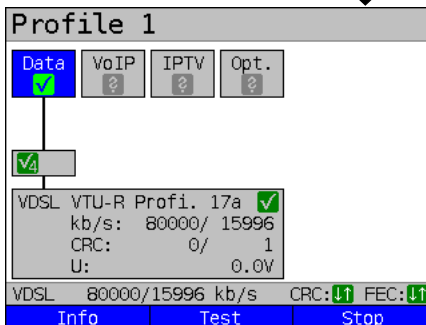


The physical layer (VDSL), the virtual line and the service Data are now active. This is indicated by a green check mark.

<Info> Displays information on the service Data (e.g. duration of activity).

<Stop> Stops the service Data.

See page 110 for explanations of the services.

Continued on
next page

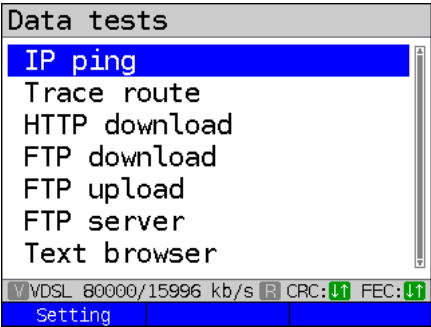


The tests that can be run using the service Data are displayed.

<Setting> Configures the respective test (in this example IP ping). A detailed description is provided in the chapter Test, see page 127.

9.3.2 Assigning additional virtual lines


ARGUS can use multiple services concurrently (e.g. Data and VoIP) via a single virtual line. In this example, VDSL is active. The service Data is selected. The following explains how multiple services can be connected via a single virtual line.

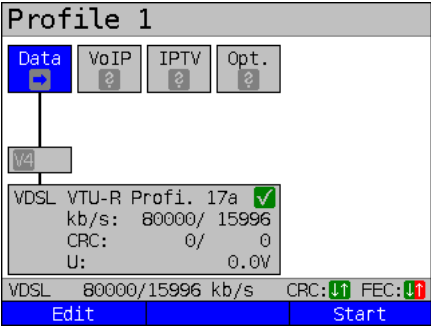

To configure a virtual line (in this example for the service Data) for other services, you must first stop the service. The physical layer remains active.



The service VoIP is greyed out when the VoIP option is not set.

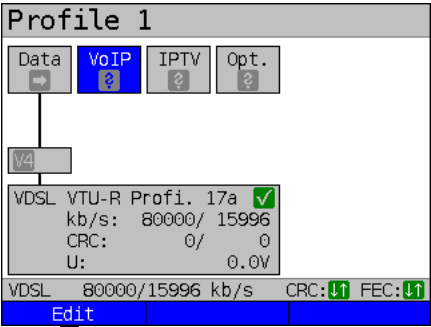

Using the cursor keys, select the service VoIP.

<Edit> Opens the configuration of the selected service (in this example VoIP).



Continued on next page

Service VoIP

Virtual line

VoIP account

VoIP QoS

VDSL 80000/15996 kb/s CRC: FEC:

Select "Virtual line".



Virtual line

•No virtual line

Virt. profile 1

Virt. profile 2

Virt. profile 3

Virt. profile 4

Virt. profile 5

Virt. profile 6

VDSL 80000/15996 kb/s CRC: FEC:

Edit



Select the virtual profile you wish to edit. The selected profile is highlighted in blue in the display.



Elements not available are grayed out, for instance when they are currently active.

<Edit> The configuration options are described starting on page 95.

Edit the selected VL profile.

Virtual line

Protocol

ATM

VLAN

PPP

PPTP

APN

IP version

VDSL 80000/15996 kb/s CRC: FEC:



e.g. select PPP

The configuration options are described starting on page 97.

Opens PPP profile selection



Continued on
next page

PPP profile

•PPP profile 1

PPP profile 2

PPP profile 3

PPP profile 4

PPP profile 5

PPP profile 6

PPP profile 7

VDSL 80000/15996 kb/s CRC: ↑↑ FEC: ↑↑

Edit



e.g. select PPP profile 1

Up to 20 PPP profiles can be configured.

<Edit> Edits the selected PPP profile, see page 97.

PPP settings

User name

Password


Set IP

Activation delay

Profile name

VDSL 80000/15996 kb/s CRC: ↑↑ FEC: ↑↑

 The configuration options are described starting on page 97.



Virtual line

•No virtual line

Virt. profile 1

Virt. profile 2

Virt. profile 3

Virt. profile 4

Virt. profile 5

Virt. profile 6

VDSL 80000/15996 kb/s CRC: ↑↑ FEC: ↑↑


Edit




The desired profile has not yet been selected.



Continued on next page

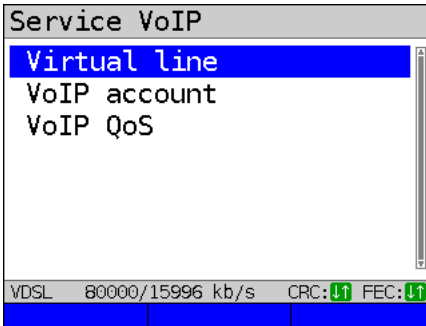


ARGUS switches to the status screen or the Settings menu (depending on whether you accessed the profiles using the main menu or the status screen).

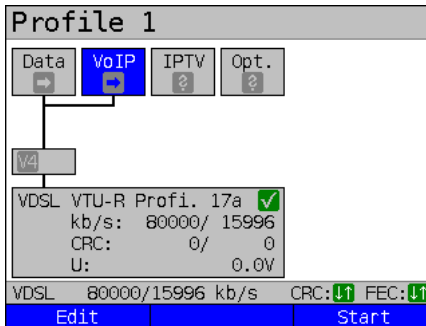

The services Data and VoIP are now connected to the physical layer (VDSL access) via a virtual line.

<Start> Starts the service VoIP.

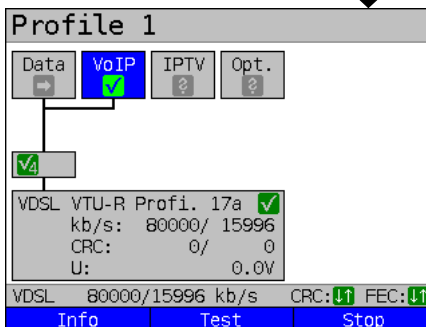


The service VoIP is now active. You can now run a variety of tests via the service VoIP.

In the next step, you can now activate a further service.



Select Data using the cursor keys and press **<Start>** to activate the service.

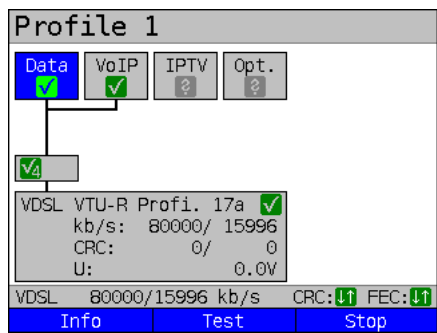


The services Data and VoIP are active. You can now run a variety of tests via the services Data and VoIP.

The display and operation for IPTV and Opt. are the same as for VoIP.


Further examples of different virtual line assignments:

Example 1:

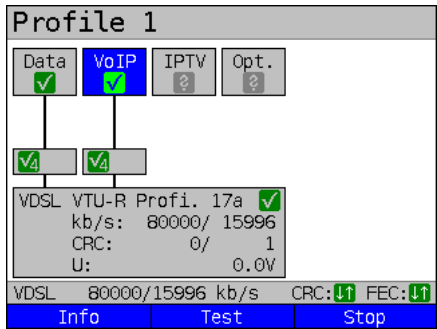

One virtual line is connected with the service Data and another with the service VoIP. The virtual line for VoIP can thus be used for different protocol data than the virtual line for Data.

Example 2:

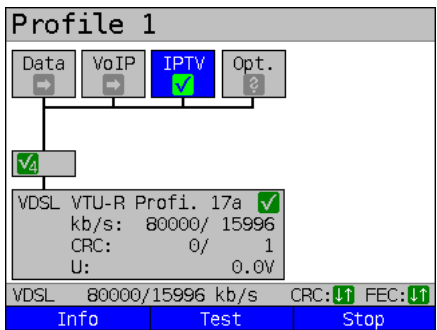


One virtual line was configured for the services Data, VoIP, IPTV und VoD. In this example, the services IPTV and Opt. are active.



Up to four virtual lines can be established for the service IPTV. However, ARGUS only displays these as a single composite virtual line.

A detailed description is provided in the chapter IPTV, see page 189.


Example 3:

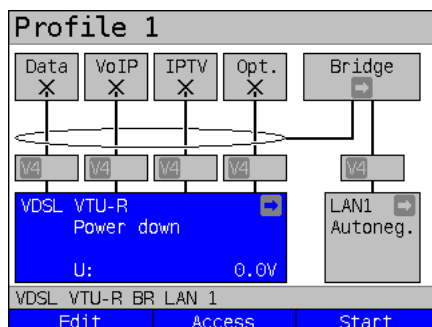

In this example, each service was assigned a virtual line.
As ARGUS is in bridge mode, these services cannot be executed.

9.4 Virtual line settings

Setting		Description			
Virt. profile 1 to 20					
Protocol		Selection of transmission profile that ARGUS uses for the test (e.g. for the IP tests). Default: <i>PPP</i>			
Protocol	ATM:	Interfaces:			
	ATM with ETH	ADSL	VDSL	G.fast	ETH
IP	no	EoA	IP		IP
IP	no	IPoA			
PPP	yes	PPPoE	PPPoE		PPPoE
PPP	no	PPPoA			
PPTP	-	-	-		PPTP
You can choose between the protocol "ATM with Ethernet" or "ATM without Ethernet" using the ATM menu option.					
ATM:		Settings for asynchronous transfer mode			
VPI/VCI		VPI: Enter the virtual path identifier VCI: Enter the virtual channel identifier Ranges VPI: 0 to 255, VCI: 32 to 65535 Default: <i>VPI: 1</i> and <i>VCI: 32</i>			
Encapsulation		Encapsulation of the transmitted packets: LLC or VC-MUX Default: <i>LLC</i>			

ATM with Ethernet	<p>Determines whether Ethernet is used via ATM or not, see table above.</p> <p>Options:</p> <ul style="list-style-type: none"> - No (PPPoA, IPoA) - Yes (PPPoE, EoA) <p>Default: yes (PPPoE, EoA)</p>
VLAN:	VLAN (Virtual Local Area Network)
VLAN	<p>VLAN mode Determines whether VLAN may be used. Up to two VLANs can be used concurrently (2 VLAN tags (Q in Q)). Default: no VLAN</p> <p>1. VLAN tag (C-VLAN), 2. VLAN tag (S-VLAN) (Q in Q)</p> <p>ID: Identifier for the VLAN to which the frame belongs. Every VLAN is assigned a unique number, the VLAN ID. A device that belongs to the VLAN with ID = 2 can communicate with every other device in the same VLAN but not with devices in other VLANs. Range: from 0 to 4095 Default: 1. VLAN: 7 2. VLAN: 2</p> <p> The IDs 0, 1 and 4095 are reserved for management purposes and should preferably not be used.</p> <p>Priority: User priority information: One of eight (3-bit) priorities can be specified for each frame. This makes it possible e.g. to give priority to transmitting speech data while treating HTTP data with lower priority. Range: 0 to 7 Default (1. and 2. VLAN): 0</p>

	<p>TPID: Tag Protocol Identifier</p> <p>The TPID is a 16-bit sub-field within the 4-byte VLAN data field. This field contains the tag information defined by IEEE 802.1q.</p> <p>Default:</p> <p>VLAN 1: 8100 hexadecimal</p> <p>VLAN 2: 88A8 hexadecimal</p>
	<p>Note: When using two VLANs with layer 3 (IP) or layer 4, both are to be set to 8100.</p>
PPP profile:	
User name	Entry of the user name (max. 100 characters) assigned by the carrier. The user name is entered using the number keys. Pressing the right softkey changes the meaning and thus influences the input via the number keys (letters (upper and lower case) and numbers).
Password	Entry of a password (max. 55 characters) assigned by the carrier; see "User name" for an explanation. During entry, the characters of the password are visible until Enter is pressed once. The characters are subsequently only displayed encrypted with "***".
Set IP	When "yes" is set, the IP address defined under IP/own IP address (see below) is used for connecting. Default: no
Current delay	Once a PPP connection has been established, the test is only started after the preset delay time has elapsed. Range: 2 - 10 seconds Default: 2
Profile name	Enter the name of the PPP profile.
PPTP	PPP settings (Point-to-Point Tunnelling Protocol)
	Own server IP address Range 0.0.0.0. to 255.255.255.255 Default: 0.0.0.0

APN	APN settings (Access Point Name) <Edit> Edit the APN profile
Access point	Access point name (APN), gateway between mobile telephony network and data network. Default: */*
Dial-up name	Dial-up name: enter the dial-up number of the access point here. Default: *99#
Profile name	Enter the name of the APN profile.
IP version:	Internet Protocol version
	<p>Determines which IP version is to be used.</p> <p>only IPv4: Internet Protocol version 4 acc. to RFC 791</p> <p>only IPv6: Internet Protocol version 6 acc. to RFC 2460</p> <p>Dual Stack IPv4/IPv6: If IPv6 is available, this protocol is preferred for a test.If not, ARGUS switches automatically to IPv4.</p> <p>Dual Stack Lite: Assigning a globally routable IPv6 address.</p> <p>Default: IPv4</p>

IPv4:	Internet Protocol version 4 configuration
IP mode	<p>Definition of IP address assignment</p> <p>Static IP: Fixed IP address</p> <p>DHCP client: Assignment of IP address by server (remote side)</p> <p>DHCP server: Assignment of IP address by ARGUS</p> <p>DHCP auto: ARGUS checks for the presence of a DHCP server in the network. If a server is present, it assigns the IP address; if not, ARGUS does this.</p> <p>Default: <i>DHCP client</i></p>
Own IP address	<p>Own ARGUS IP address</p> <p>Range: Range 0.0.0.0. to 255.255.255.255</p> <p>Default: <i>0.0.0.0</i> (assignment see RFC 3330)</p>
IP netmask	<p>IP netmask</p> <p>Range: Range 0.0.0.0. to 255.255.255.255</p> <p>Default: <i>255.255.255.0</i> (assignment see RFC 3330)</p>
Gateway IP	<p>Gateway IP address</p> <p>Range: Range 0.0.0.0. to 255.255.255.255</p> <p>Default: <i>0.0.0.0</i> (assignment see RFC 3330)</p>
DNS Server	<p>DNS server 1</p> <p>DNS server 2</p> <p>Entry of DNS server IP address (DNS = Domain Name System)</p> <p>Range: Range 0.0.0.0. to 255.255.255.255</p> <p>Default: <i>0.0.0.0</i> (assignment see RFC 3330)</p>


DHCP client	DHCP timeout: Range: 1 - 9999 seconds Default: 20
	DHCP Vendor ID: - Format: choose format: ASCII or hexadecimal ASCII data: Entry of DHCP vendor ID in ASCII format Default: ARGUS , for details see "User name", page 97 - HEX data: entry of DHCP vendor ID in hexadecimal format, see MAC address page 80
	DHCP vendor info: - Format: choose format: ASCII or hexadecimal - ASCII data: Entry of DHCP vendor information in ASCII format, default: ARGUS , for details see "User name", page 97 - HEX data: entry of DHCP vendor information in hexadecimal format, see MAC address page 80
	DHCP user class information - Format: choose format: ASCII or hexadecimal - ASCII data: entry of DHCP user class info in ASCII format Default: ARGUS , for details see "User name", page 97 - HEX data: entry of DHCP user class information in hexadecimal format, see MAC address page 80
	DHCP user-defined option (generate a custom DHCP option) - Option number Range: 0 to 255 Default: 255 = off - Format: choose format: ASCII or hexadecimal - ASCII data: entry of DHCP user-defined option in ASCII format Default: ARGUS , for details see "User name", page 97 - HEX data Entry of DHCP user-defined option in hexadecimal format, see MAC address page 80

DHCP server	Settings for the DHCP server: - Starting and ending IP address Range: Range 0.0.0.0. to 255.255.255.255 Default: (assignment see RFC 3330) Start: 192.168.10.30 End: 192.168.10.40 - Domain name, see "User name" page 97 for details - Duration of reservation for IP addresses Range: 1 - 99999 seconds Default: 240	
IPv6:	Internet Protocol Version 6 settings	
AFTR	AFTR mode	Determines whether Address Family Transition Router (AFTR) mode is set automatically or statically. Default: Automatic
	AFTR address	Entry of the AFTR address.
DHCP client	DHCP mode	Determines whether DHCPv6 is selected automatically or whether the Router Advertisement (RA) server is ignored. Default: Automatic
	DHCP options	Determines whether the DHCPv6 options are automatically selected or all options requested. Default: Automatic
	Enterprise Number (PEN)	Entry of PEN (Private Enterprise Number). Range: 0 to 65535 Default: 46443

BGP:	Border Gateway Protocol
Mode	Determines whether BGP is to be used. Default: off
AS number	Defines the AS number (Autonomous System). Range: 1 to 65534 Default: 1
IP neighbour router	Determines whether the router's IPv4 or IPv6 address is to be used. Default: IPv4 (0.0.0.0)
AS number neighbour router	Determines the AS (autonomous system) number from the neighbour router. Range: 1 to 65534 Default: 1
TTL	Maximum number of hops over which the path to the destination address node is tracked. Range: 1 to 255 Default: 1
Connect Timeout	Maximum wait time for the response of a network node. Range: 1 to 300 seconds Default: 10 seconds
Data log	Data log on or off This function must be set to "on" so that a trace file can be sent to the PC; see page 71. After terminating a VL via the corresponding service or the physical layer, ARGUS queries whether the trace file should be sent to the PC. For example, when the data log is activated for VL 1, only VL 1 is recorded. When one VL is configured for multiple services and the data log is active, all data of this VL are recorded. Default: off
Profile name	Enter the name of the VL profile. Enter the name as for the access name, see page 26.

9.5 Displaying protocol statistics

Depending on the access mode and the protocol, ARGUS displays BRAS, IP, PPP or Ethernet statistics.

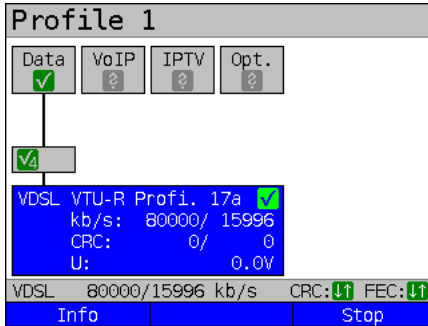


The physical layer, virtual line and service data are active.

<Info> Displays G.fast and DSL results.

<Stop> Deactivates physical layer, VL and Data service.




Switch to the virtual line (VL) using the cursor keys.

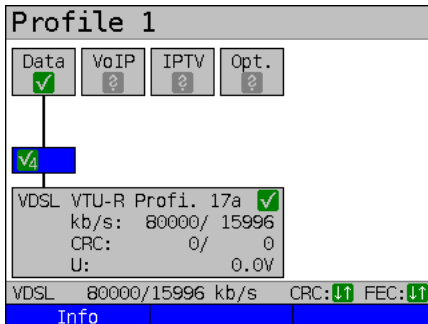

Press one after another



Display of ARGUS MAC addresses:
Line, LAN, ETH, see also page 295 and following.

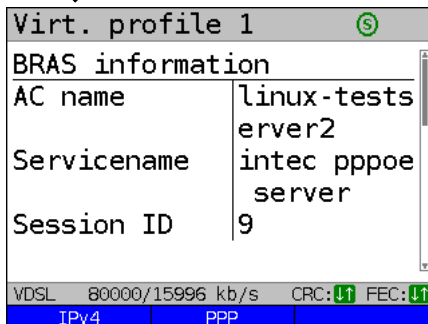

BRAS information:

For PPP protocol only, ARGUS displays the Broadband Access Server (BRAS) information:

- AC (access server): name of server
- Service name name of service
- Session ID: number of the connection

<IPv4> Displays the configuration assigned by the server.



Continued on next page

Virt. profile 1			
PPP		Rx	Tx
Packets	5		4
Bytes	120		106
VDSL 80000/15996 kb/s CRC: ↑↓ FEC: ↑↓			
IPv4		PPP	

PPP information:
ARGUS displays the received (Rx) and transmitted (Tx) PPP packets and the bytes.



Virt. profile 1			
Ethernet		Rx	Tx
Frames	32		33
Bytes	1969		1994
VDSL 80000/15996 kb/s CRC: ↑↓ FEC: ↑↓			
IPv4		PPP	

Ethernet information:
ARGUS displays the received (Rx) and transmitted (Tx) Ethernet frames and bytes.



Virt. profile 1			
< PADI sent			
< PADI sent			
> PADO rec.			
< PADR sent			
> PADS rec.			
< LCP conf. req.			
> LCP conf. req.			
VDSL 80000/15996 kb/s CRC: ↑↓ FEC: ↑↓			
		Time	

<PPP> The softkey <PPP> opens a PPP trace, which displays the PPP login process.

Command display
< = Command sent by ARGUS
> = Command sent by DSLAM

<Time> The <Time> softkey assigns the individual messages to times according to the ARGUS system clock.

Continued on
next page




```

Virt. profile 1
< PADI sent
  16:10:00:000
< PADI sent
  16:10:02:930
> PADO rec.
  16:10:02:950
< PADR sent
VDSL  80000/15996 kb/s  CRC:↓↑ FEC:↓↑


```

- PADI:
PPPoE Active Discovery Initiation
- PADO:
PPPoE Active Discovery Offer
- PADR:
PPPoE Active Discovery Request
- PADS:
PPPoE Active Discovery Session Confirmation
- PADT:
PPPoE Active Discovery Termination
- IPv6 CP:
IPv6 Control Protocol
- LCP:
Link Control Protocol
- IPCP:
Internet Protocol Control Protocol
- PAP:
Password Authentication Protocol

Abbreviation meaning:


 
Abbreviation	Meaning
ack.	acknowledge
auth.	authentication
conf.	configuration
nak.	not acknowledge
prot.	protocol
rec.	received
rep.	reply
req.	request
rej.	rejected

BGP information

Virt. profile 1 


BRAS information


AC name	linux-tests
	erver2
Servicename	intec pppoe
	server
Session ID	9

VDSL 80000/15996 kb/s CRC:  FEC: 

IPv4

PPP






<IPv4> Configuration assigned by the server is displayed, see page 108.



<PPP> PPP information is displayed.

Switches to softkey assignment.


Virt. profile 1 

BRAS information

AC Name	linux-tests
	erver2
Servicename	intec pppoe
	server
Session ID	112

VDSL 80000/15996 kb/s CRC:  FEC: 

BGP



<BGP> BGP information is displayed.

Continued on next page

BGP info	
Routes	10/75
< 192.168.150. 0/24	
< 203. 0. 75. 0/24	
< 203. 0. 74. 0/24	
< 203. 0. 73. 0/24	
< 203. 0. 72. 0/24	
< 203. 0. 71. 0/24	
ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:AF	
Detail	

ARGUS displays the first 10 out of a maximum of 4000 routes for the connection (in this example 10 through 75).

Display BGP info:

- IP addresses of the routes

The display /24 refers to the netmask. This corresponds to the netmask 255.255.255.0.

<Detail> Displays the BGP information of the selected route.

BGP info	
Current route	
< 192.168.150. 0/24	
Next hop	
10. 0. 1. 99	
ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:AF	

Display BGP info:

- Current route (in this example 192.168.150. 0/24)
- Next hop (in this example 10.0.1.99)

IP information

Virt. profile 1	
BRAS information	
AC name	linux-tests
Servicename	erver2
Session ID	intec pppoe server
Session ID	94
VDSL 80000/15996 kb/s CRC: U1 FEC: U1	
PPP	IPv6

IP version-dependent.

In this example IPv6:

<IPv6> IPv6 information is displayed.

<IPv4> IPv4 information is displayed (Softkey not visible in this example, as IPv6 was used).

<IPv4>

IPv6	
Global unicast address	
1	2001:5C0:1100:D910: 1559:DA0B:998F:7D07
Link local address	
1	FE80::1559:DA0B:998F: 7D07
DNS server address	
VDSL 80000/15996 kb/s CRC: U1 FEC: U1	

Assigned configuration:

ARGUS displays the IP configuration assigned by the server:

- Global unicast address
- Link local address
- DNS server address



Use the cursor keys to display further information.



Exits results.

IPv4	
Assigned PPP config.	
IP	10. 67. 15. 95
Gateway	192.168. 15. 99
DNS 1	192.168. 4.253
DNS 2	192.168. 4.253
VDSL 80000/15996 kb/s CRC: U1 FEC: U1	

Assigned configuration:

ARGUS displays the IP configuration assigned by the server:

- Received IP address
- Gateway IP address
- Available DNS servers



Exits results.

10 Services + Tests

The status screen (see explanation page 85) shows four services. Each service can be used to conduct an entire suite of IP tests (see list below). It is also possible to start and stop each service independently of the others.

Example screen with the possible services

Profile 1

Data

VoIP

IPTV

Opt.

V2

VDSL VTU-R

Power down

U: 0.0V

VDSL

Edit

Profile

Start

<Edit>

Assigns the service a VL profile and configures the service.

<Profile>

Configures the profile.

<Start>

Activates the service. If virtual lines and the physical layer are not active, they are also automatically started as well.


The meaning of the symbols, s. page 87.

Once a service is activated, a variety of tests can be started using <Test>.


Services:			
<div><div>Data</div></div>	<div><div>VoIP</div></div>	<div><div>IPTV</div></div>	<div><div>Opt.</div></div>
<div><div>- IP ping</div><div>- Traceroute</div><div>- HTTP download</div><div>- FTP download</div><div>- FTP upload</div><div>- FTP server</div><div>- Textbrowser</div><div>- Network scan*1</div></div>	<div><div>- IP ping</div><div>- Traceroute</div><div>- VoIP call</div><div>- VoIP wait</div><div>- VoIP call generator</div></div>	<div><div>- IP ping</div><div>- Traceroute</div><div>- IPTV</div><div>- IPTV scan</div><div>- IPTV passive</div></div>	<div><div>- IP ping</div><div>- Traceroute</div><div>- HTTP download</div><div>- FTP download</div><div>- FTP upload</div><div>- FTP server</div><div>- Textbrowser</div><div>- Network scan*1</div><div>- Video on demand</div></div>
*1 only Ethernet			

Possible tests that can be executed using the various services.


10.1 Displaying service statistics

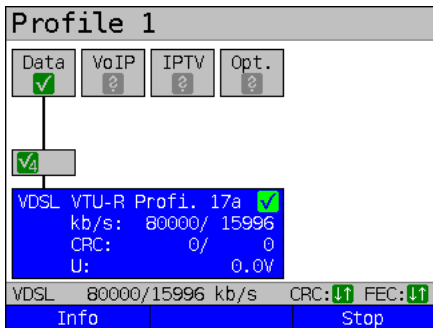

ARGUS in the status screen.
The physical layer, VL and service are active.

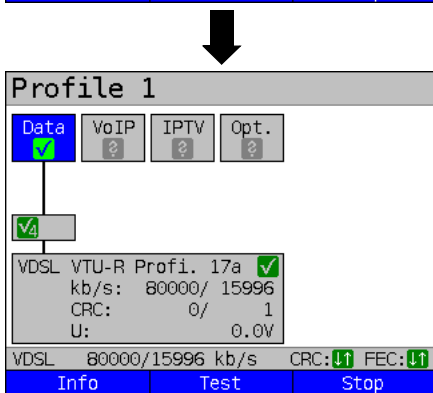

Switch to a service (in this example Data) using the cursor keys.

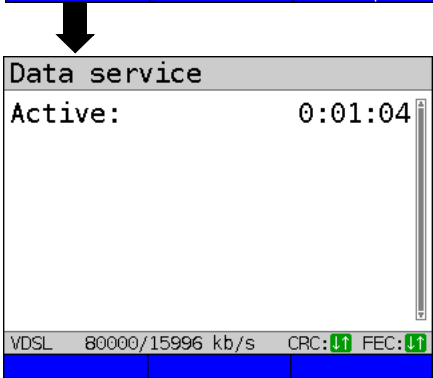

<Info>

Displays the duration of activity of the selected service.



In the service VoIP, the VoIP call parameters are displayed here, see page 179.



Exit the display and return to the status screen.

11 Overview of tests and hotkey assignment

Overview of tests

Display of possible tests at the G.fast, xDSL and Ethernet interface:

Interface Test	ATU-R VTU-R FTU-R	ATU-R BR VTU-R BR FTU-R BR	ATU-R RT VTU-R RT FTU-R RT	ETH	LTE
Copper Box	x	x	x	-	-
Loop see page 120	-	-	-	x	-
LTE scan see page 118	-	-	-	-	x
IP ping see page 127	x	-	x	x	x
Traceroute see page 133	x	-	x	x	x
HTTP download see page 137	x	-	x	x	x
FTP download see page 142	x	-	x	x	x
FTP upload see page 146	x	-	x	x	x
FTP server see page 150	x	-	x	x	-
Text browser see page 157	x	-	x	x	-
Network scan see page 161	-	-	-	x	-
VoIP call/wait see page 166	x	-	x	x	-
IPTV see page 189	x	-	x	x	-
IPTV scan see page 203	x	-	x	x	-

Interface	ATU-R VTU-R FTU-R	ATU-R BR VTU-R BR FTU-R BR	ATU-R RT VTU-R RT FTU-R RT	ETH	LTE
Test					
IPTV passive see page 210	-	x	x	x	-
VoD see page 214	x	x	x*1	x	-

*1 = not for VDSL/G.fast

A virtual line must be configured first before ARGUS can execute these tests (exception: loop). Configuration is described in the chapter "Virtual line", see page 85.

12 LTE

With the LTE function and an approved USB stick (including SIM card), ARGUS can scan all available networks (LTE scan) and determine their connection parameters. This also permits data tests to be carried out.



With the LTE function and an approved USB stick (including SIM card), ARGUS can scan all available networks (LTE scan) and determine their connection parameters. This also permits data tests to be carried out.

Insert a valid SIM card before using (not included in scope of supply).

Attention: Be aware of any restriction on your data volume (particularly in download tests, data cut-offs can be reached quickly).

Do not use any other LTE stick with your ARGUS instrument other than the listed LTE sticks with the corresponding firmware version. Observe the manufacturer's operating and safety instructions.

Only operate your LTE stick within the specified parameters. Never store or transport your ARGUS instrument with the LTE stick plugged in (risk of destruction).

Do not use continuously on your ARGUS instrument. Use only antennas approved by the manufacturer.

12.1 LTE Settings

Please refer to page 39 for instructions on configuring the LTE interface.


Settings	Description
Preconfigured accesses	
Phys. parameters:	
LTE (USB):	
Frequency band	Sets the frequency band to be used for the LTE connection (800 MHz, 1600 MHz, 2600 MHz). Default: Automatic
PIN	Entry of PIN (personal identification number) for the inserted SIM card. Up to eight characters are possible. Default: ****

See chapter 9 Virtual lines (VL) page 85 for further configurations.
See page 98 for APN configurations.



The PPP protocol must be selected in order to establish a virtual line.

12.2 Establishing LTE connection

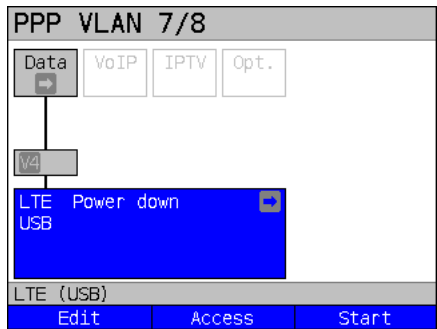

ARGUS in status screen.


ARGUS uses the default profile (PPP VLAN 7/ in the example) to establish a LTE connection.

The test has not yet started!

Meaning of arrow in the layer-1 box:

- Gray arrow no test started
- Yellow arrow Test started
- Green check mark Connected


Establishing a LTE connection

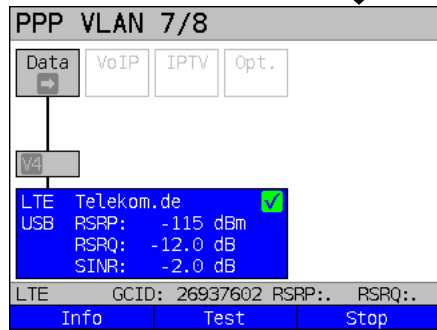

Display:

- Provider
- Current LTE parameters
- Current Cell ID (GCID)

- <Info> Display LTE connections paramertes
- <Test> Displays the available tests.
- <Stop> Stops the LTE connection

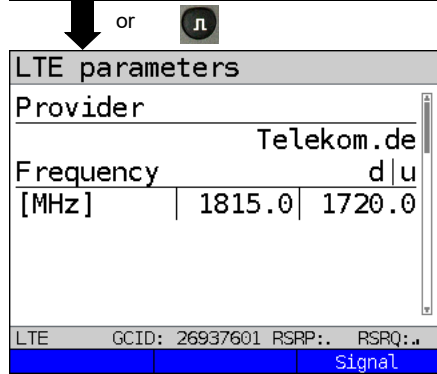

Display:

- Provider
- Used frequency (down- and upstream)

LTE parameters

Frequency band

[MHz]

1800 MHz

EARFCN

d/u

130019300

LTE

GCID: 26937601

RSRP:..

RSRQ:..

Signal

LTE signal infor.

RSRP [dBm]

-105

RSRQ [dB]

-7.0

SINR [dB]

+6.0

LTE

GCID: 26937601

RSRP:..

RSRQ:..

Reset

- Display:
- Used frequency band
 - EARFC (down-/upload)
 - Current signal strength in dBm (RSRP)
 - Current signal quality in dB (RSRQ)
 - Current signal attenuation in dB (SINR)
 - Codecs in IDs

- Open LTE signal information:
- Display:
- Current signal strength in dBm (RSRP)
 - Current signal quality in dB (RSRQ)
 - Current Signal to noise ratio in dB (SINR)
- The maximum determined for the parameter is indicated by a marker.
- <Reset> Resets the maximum marker.


 




For establishing virtual lines and displaying and controlling data tests, e.g. IP ping on page 85 und page 127.

 





Disconnect from the LTE connection and saving test results







You can disconnect and save the results from an LTE connection as described for VDSL, see page 71

Saving test results without terminating the LTE connection

  You can save your results of the LTE connection without disconnecting in the same way as for VDSL, see page 72

Meaning of the displayed colours of the LTE parameters:		
RSRP	Signal strength	Colour scheme
0 bars	< -125 dBm	red 
1 bars	-125 dBm up to -105 dBm	red 
2 bars	-105 dBm up to -95 dBm	yellow 
3 bars	-95 dBm up to -80 dBm	yellow 
4 bars	-80 dBm up to -65 dBm	green 
5 bars	>-65 dBm	green 


RSRQ	Signal quality	Colour scheme
0 bars	< -15 dB	red 
1 bars	-15 dB up to -11 dB	red 
2 bars	-11 dB up to -8 dB	yellow 
3 bars	-8 dB up to -5 dB	yellow 
4 bars	-5 dB up to -3 dB	green 
5 bars	>-3 dB	green 

SINR	Signal to noise ratio	Colour scheme
	-12 dB up to -5 dB	red 
	-5 dB up to -1 dB	red 
	-1 dB up to 4 dB	yellow 
	4 dB up to 9 dB	yellow 
	9 dB up to 19 dB	green 
	19 dB up to 40 dB	green 

12.3 LTE scan

The LTE scan scans all available carriers and frequency bands.

12.3.1 Start LTE scan

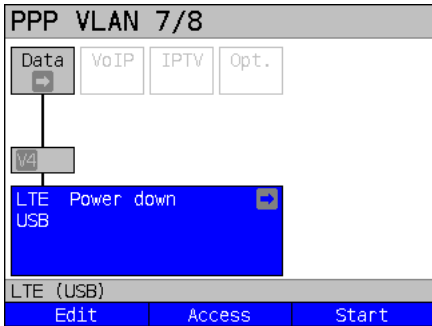

ARGUS status screen.

Establishing LTE connection.


<Start> Activates LTE



<Info> Displays the LTE connection parameters, see page 115.


<Test> Displays the available tests.

<Stop> Stops LTE connection.

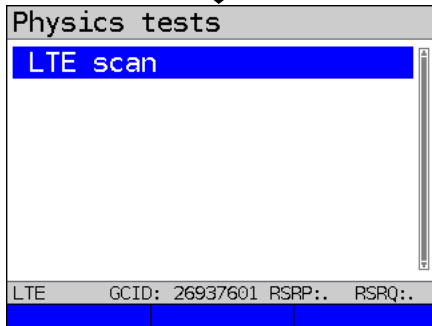


Continued on
next page



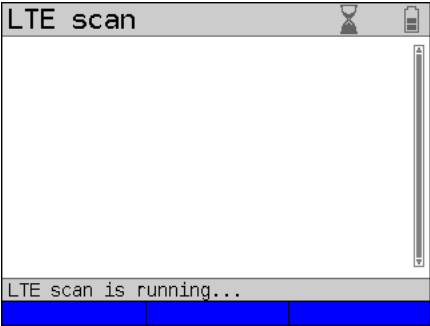


The LTE scan executes.
This can take a few seconds. The scan is completed when the hourglass disappears from the status display.

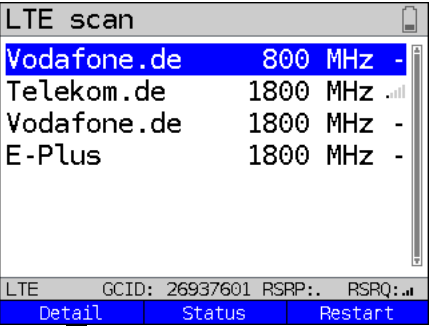

ARGUS displays all available carriers and frequency bands.

The detail information such as signal strength, signal quality and signal-to-noise ratio can only be displayed for the carriers enabled for that SIM card.

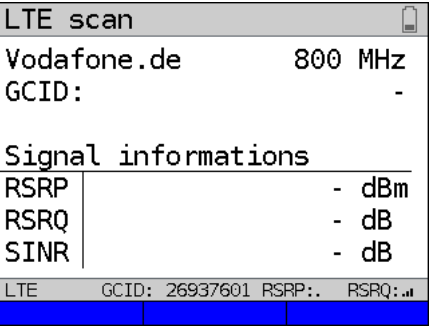

For details and evaluation of the connection parameters, see page 115 and the following.



Exits results.



Saves the LTE scan results (see also IP ping on page 132).

13 Loop

A loop can only be created on Ethernet.

In a loop, all incoming Ethernet frames on layer 1 (L1) are returned to the sender unchanged.


In a loop on layer 2 (L2) of the OSI model, ARGUS swaps the source MAC address for the destination MAC address and then returns all Ethernet frames.


The loop requires the following parameters:


Protocol-independent parameters

The opening of test parameters is described in the chapter "Configuring accesses", see page 31.

Setting	Description
Test parameter:	
Loop	
Layer 1	<div>This setting determines what layer of the OSI model the loop runs on.</div> <div><div>- L1: all incoming Ethernet frames on a loop on layer 1 (L1) are returned to the sender unaltered.</div><div>- L2: on a loop on layer 2 of the OSI model, ARGUS exchanges the source MAC address with the destination MAC address and returns all incoming Ethernet frames.</div><div>- L3: on a loop on layer 3 (L3) of the OSI model, ARGUS exchanges the destination and own IP address as well as the MAC addresses and then returns all incoming Ethernet frames.</div></div> <div>Default: L2</div>

Layer 2	MAC mode			<p>You can use the loop MAC mode to determine what gets looped.</p> <ul style="list-style-type: none">- For own MAC only (promiscuous mode off) L1: only packets for the own MAC address and broadcast packets are looped. L2: only packets for the own MAC address are looped. Broadcasts are rejected. L3: only packets for the own MAC address and own IP address are looped. Broadcasts are rejected.- Loop everything (promiscuous mode on) L1: all packets (including broadcast) are looped. L2: all packets - except broadcasts - are looped. Broadcasts are rejected. L3: all packets for which the IP address has been recognised are looped. <p>Default: for own MAC only</p>
	own VPI/ VCI			Determines whether the loop is to be executed using a separate VPI/VCI pair.
	own VLAN			Determines whether the loop is to be executed using a separate VLAN.
	VLAN mode			Determines whether VLAN may be used. Up to two VLANs can be used concurrently. Default: no VLAN
	1. VLAN (C-VLAN)		ID	Identifier for the VLAN to which the frame belongs. Every VLAN is assigned a unique number, the VLAN ID. A device that belongs to the VLAN with ID = 2 can communicate with every other device in the same VLAN but not with devices in other VLANs. Range: from 0 to 4095 Default: 2
			The IDs 0, 1 and 4095 are reserved for management purposes and should preferably not be used.	


			<div>Priority</div> <div>User priority information: One of eight (3-bit) priorities can be specified for each frame. This makes it possible e.g. to give priority to transmitting speech data while treating HTTP data with lower priority. Range: 0 to 7 Default: 0</div>
		<div>TPID</div>	<div>8100 Hex</div> <div>The VLAN TPID 8100 hex is a 16-bit field that identifies frames according to IEEE 802.1Q (VLAN-tagged frame). It also makes it possible to use all network paths actively according to IEEE 802.aq (shortest path bridging, SPB).</div> <div>88A8 Hex</div> <div>VLAN TPID 88A8 supports provider bridging according to IEEE 802.ad. It also makes it possible to use all network paths actively according to IEEE 802.aq (shortest path bridging, SPB).</div> <div>Default: 8100 Hex</div>
	2. VLAN (S-VLAN)	<div>ID</div>	<div>Identifier for the VLAN to which the frame belongs. Every VLAN is assigned a unique number, the VLAN ID. A device that belongs to the VLAN with ID = 2 can communicate with every other device in the same VLAN but not with devices in other VLANs. Range: from 0 to 4095 Default: 2</div> <div><div></div><div>The IDs 0, 1 and 4095 are reserved for management purposes and should preferably not be used.</div></div>

			<p>Priority User priority information: One of eight (3-bit) priorities can be specified for each frame. This makes it possible e.g. to give priority to transmitting speech data while treating HTTP data with lower priority. Range: 0 to 7 Default: 0</p>
			<p>TPID 8100 Hex The VLAN TPID 8100 hex is a 16-bit field that identifies frames according to IEEE 802.1Q (VLAN-tagged frame). It also makes it possible to use all network paths actively according to IEEE 802.aq (shortest path bridging, SPB).</p> <p>88A8 Hex VLAN TPID 88A8 supports provider bridging according to IEEE 802.ad. It also makes it possible to use all network paths actively according to IEEE 802.aq (shortest path bridging, SPB).</p> <p>Default: 88A8 Hex</p>
Layer 3	IP version	<p>Determines which IP version is to be used. IPv4: Internet Protocol version 4 acc. to RFC 791 IPv6: Internet Protocol version 6 acc. to RFC 2460 Default: IPv4</p>	
	Own IP mode	<p>For IP address assignment, this determines whether a static IP address is to be used or whether a server (remote station) issues the IP address (DHCP client). Default: Static IP</p>	
	Own IP address	<p>Own ARGUS IP address Range: Range 0.0.0.0. to 255.255.255.255 Default: 0.0.0.0 (assignment see RFC 3330)</p>	
		<p>The layer-2 settings are also relevant when conducting a layer-3 loop. Even if only layer 3 is selected, you may need to configure layer-2 settings.</p>	

Notes for the use of VLANs

	Contains received Ethernet packets:		
VLAN mode	no VLAN	one VLAN	two VLANs
No VLAN	x	x	x
1. VLAN tag (C-VLAN)	-	ARGUS loops when the VLAN IDs and TPIDs contained in Ethernet packets agree with the VLAN 1 settings.	ARGUS loops when the first VLAN ID (also called outer or service ID) and TPID contained in Ethernet packets agree with the VLAN 1 settings.
1. VLAN tag (C-VLAN) and 2. VLAN tag (S-VLAN)	-	-	ARGUS loops when the first VLAN ID (also called outer or service ID) and TPID contained in Ethernet packets agree with the VLAN 2 settings and the second VLAN ID (also called the inner or customer ID) and TPID agree with the VLAN 1 settings.
- = ARGUS does not loop.			
x = ARGUS loops regardless of whether the received Ethernet packets contain VLANs.			

Starting the loop

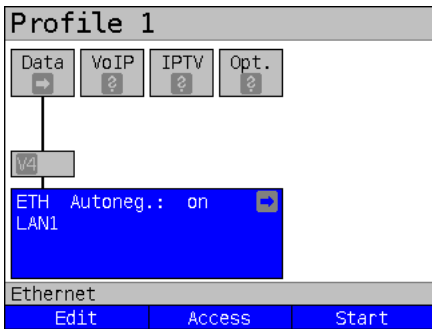


ARGUS in status screen.

Establishing the Ethernet connection

The profile shown in the display (profile 1 in this example) is used for the loop.


<Start> Activates Ethernet.

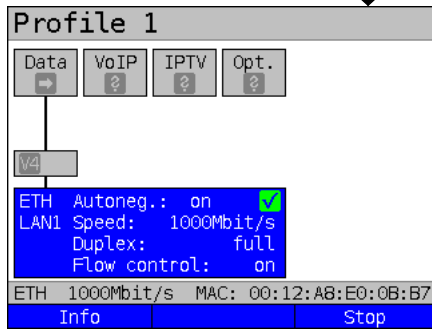

<Info> Displays Ethernet connection parameters.

<Test> Displays the available tests.

<Stop> Stops Ethernet connection.

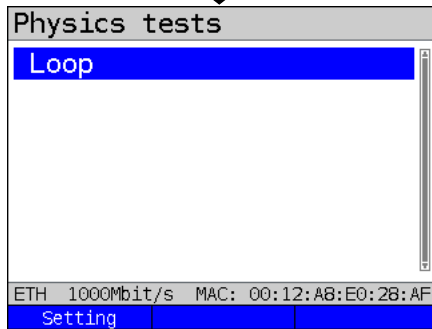

<Setting> Changes loop parameters, see page 120.

Continued on
next page



Loop		
Duration:	0:01:14	
Looped:	807025	
Looped in 1s:	2143	
Loop rate:	41.568 Mb/s	
ETH 1000Mbit/s MAC: 00:12:A8:E0:28:AF		
	Status	



Loop		
Loop stopped		
Duration:	0:01:23	
Looped:	228083	
avg.:	5940/s	
ETH 1000Mbit/s MAC: 00:12:A8:E0:28:AF		
	Status	



The loop is started:

Duration	Current duration of test
Looped	Number of packets looped so far
Looped in 1s	Number of packets looped in the current second
Loop rate	Displays the current data rate per second.
MAC address	Own MAC address of looping device (e.g. for entry in the traffic generator).

<Status>	Displays status screen without ending the test.
Duration	Overall duration of test.
Looped	Number of looped packets.
avg.	Number of looped packets per second.
<Status>	Display of status screen.

Saving the results

You can save the results for the loop test in the same way as for VDSL, see page 71.

14 IP tests

14.1 IP ping

In IP ping, ARGUS tests whether a connection exists via Ethernet, G.fast or xDSL using a DSLAM and whether the ATM/IP network to the internet service provider (ISP) or another computer or server address is possible. ARGUS sends a test packet to a specified IP address (remote station) and waits for a response packet. On the basis of the received response packet, is it possible to draw conclusions as to the availability and delay of the ATM/IP network. It is also possible to measure the maximum data packet size of the path.

The IP ping the following parameters:

Protocol-independent parameters

The opening of test parameters is described in the chapter "Configuring accesses", see page 31.

Setting	Description
Test parameters:	
IP ping:	
IP address	Address of remote station. ARGUS can store up to 10 IP addresses. The stored IP addresses are available in all profiles.

IP address 1/10

•www.argus.info

ipv6.argus.info

0. 0. 0. 0

0. 0. 0. 0

0. 0. 0. 0

0. 0. 0. 0

0. 0. 0. 0

VDSL 80000/15996 kb/s CRC: FEC:

Edit

• as name, IPv4 or IPv6 number

Continued on next page

ARGUS displays the ten available slots for IP addresses. Mark the line with the IP address you wish to edit using the cursor keys (in this example the first slot is marked (1/10)).

<Edit> Edits the selected IP address.

The address can be saved in the form of an IPv4 number, IPv6 number or a name.
Default: **www.argus.info**

<div>IP address as IPv4 number</div> <div><div>IPv4 address:</div><div><div>192.168.0.1</div><div>(min=0, max=255)</div></div><div><div>VDSL 80000/15996 kb/s CRC: FEC: </div><div>Delete</div></div></div> <div>IP address as IPv6 number</div> <div><div>IPv6 address:</div><div><div>0000:0000:0000:0000</div><div>0000:0000:0000:0000</div><div>(*1=A, ..., *6=F)</div></div><div><div>VDSL 80000/15996 kb/s CRC: FEC: </div><div>Delete</div></div><div> You can use square brackets to include port information with IPv6 addresses in "IP address as name".</div></div>		<div>Enter the IPv4 or IPv6 address as a number. The editable area is highlighted in blue. Enter the address using the number keys.</div> <div><div><Delete></div><div>Deletes the place in front of the cursor.</div></div> <div><div> </div><div>to</div><div> </div><div>When entering an IPv6 address, the letters A-F are available using these key combinations.</div></div> <div><div></div><div>Adopts the marked IP address as the default.</div></div> <div>Toggle entry using the softkey (right softkey changes the meaning when pressed). Enters the address as name, see user name page 97.</div> <div><div><Ab>AB</div><div>Entry begins with upper-case letters and continues in lower-case.</div></div> <div><div><AB>12</div><div>Entry of upper-case letters.</div></div> <div><div><12>ab</div><div>Numerical entry.</div></div> <div><div><ab>AB</div><div>Entry of lower-case letters.</div></div> <div><div> or </div><div>Entry of special characters, e.g. @, /, -, . or _ , ; , ~ , + , ...</div></div> <div><div> </div><div>Moves the cursor in the display line</div></div>
Number of pings	Enter the number of pings that ARGUS sends to the IP address. When 0 is set ARGUS sends continuously until the test is cancelled manually. Range: 1 to 99999 Default: 10	
Pause	Defines a pause between two test packets. Range: 0.1 - 9.9 seconds Default: 1 second	
Packet size	Sets the size of the test packet. You can determine the maximum packet size and the response time as as function of size by varying the packet size. Range: 36 to 55,555 bytes Default: 84 bytes	

Fragmentation	Sets the fragmentation Default: on
	on Test packets may be fragmented into multiple packets depending on the network (or router).
	off Fragmentation prohibited, i.e. the test packets may be rejected by the network (or routers) (ARGUS does not receive a response packet).
	auto ARGUS determines the maximum packet size of the path to the destination address (path MTU) and fragments the test packets so that the packets are transmitted with minimum delay (no fragmentation by the network/router necessary).

Starting IP ping (example access mode VTU-R, already active):

Profile 1

Data

VoIP

IPTV

Opt.

V4

VDSL VTU-R Profi. 17a

kb/s: 80000/ 15996

CRC: 0/ 0

U: 0.0V

VDSL 80000/15996 kb/s

CRC:

FEC:

Edit

Start

Profile 1

Data

VoIP

IPTV

Opt.

V4

VDSL VTU-R Profi. 17a

kb/s: 80000/ 15996

CRC: 0/ 1

U: 0.0V

VDSL 80000/15996 kb/s

CRC:

FEC:

Info

Test

Stop

Establishing the service

The profile shown in the display (profile 1 in this example) is used for the IP ping.

<Edit> A virtual line is allocated to the service Data.

If no xDSL or Ethernet connection is established, ARGUS automatically connects at this point using the default profile (see page 48).


The service Data and the VDSL connection are active.

<Info> Duration of activation.

<Test> Opens test selection.


<Stop> Deactivates the service.

Continued on next page

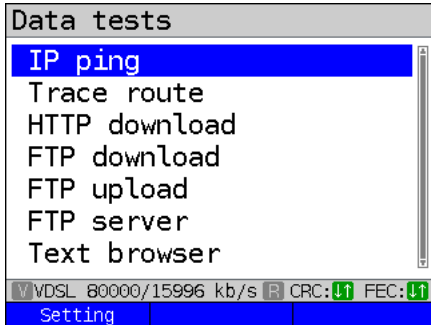

e.g. select IP ping

<Setting> Changes IP ping parameters, see page 127.

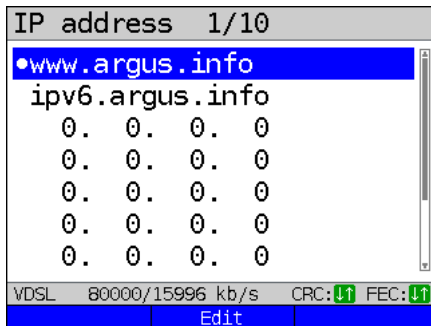

ARGUS displays the addresses stored in the protocol.



Select the address for the ping; the default is indicated with ●.

<Edit> Edits the address, see page 127.




In this example a ping test is conducted with IP version IPv4. Use with IPv6 is analogous.

The IP ping starts automatically.

Initialisation

IP ping

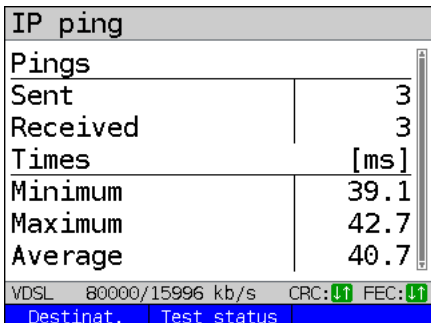

Display during the IP ping test:

- Number of test packets sent
- Number of response packets
- Minimum time in ms
- Maximum time in ms
- Average time in ms

<Destination address> Display of URL and IP address.

<Test status> Displays test status without ending the test or starting a new test, see page 222.



Cancels test
ARGUS displays the test results acquired up to this point and offers you the option of saving them (automatic prompt); see page 132.

IP ping result

IP ping	
Pings	
Sent	10
Received	10
Repeated	0
Checksum error	0
Error	0
VDSL 80000/15996 kb/s CRC: FEC:	
Destinat.	Test status New



IP ping	
Times	[ms]
Minimum	41.7
Maximum	42.8
Average	42.4
Packet size	[byte]
	84
VDSL 80000/15996 kb/s R CRC: FEC:	
Destinat.	Test status Restart



Test status	
IP ping	
Sent:	10
Rec.:	10
Avg.:	46 ms
Max:	56 ms
Data	
↓	0 kb/s
↑	0 kb/s
CRC:	0/ 0
FEC:	0/ 0
VDSL 80000/16000 kb/s CRC: FEC:	
New	Start

2x

Continued on
next page

ARGUS displays the results when the test is finished:


- Number of packets sent
- Number of packets received
- Number of packets repeated
- Checksum errors
- Number of packets received with error
- Minimum packet response time in ms
- Maximum packet response time in ms
- Average packet response time in ms

- <Desti-
nation
address> Displays the URL and the IP address.
- <Test
status> Displays test status without ending the test or starting a new test, see page 222.
- <New> Starts a new IP ping test.

Display of test status:


You can observe the running test or start a new test here, see page 222.

- <New> Selects a new single test.
- <Stop> Stops the IP ping test.
- Press shift:
- <Stop all> Stops all active tests.
- <Finish all> Finishes all test.

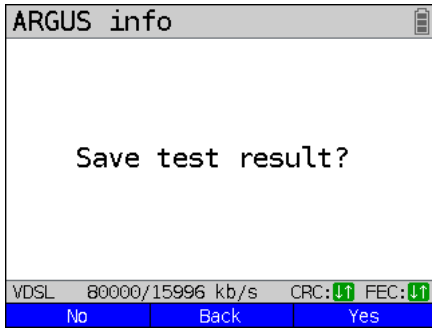

- <Yes> ARGUS saves the result of the IP ping test to the first free storage slot in internal memory (see page 265).
- <Back> ARGUS returns to the test result without saving results.
- <No> ARGUS returns to the last selection menu without saving results.

Sends trace file to PC, see page 102

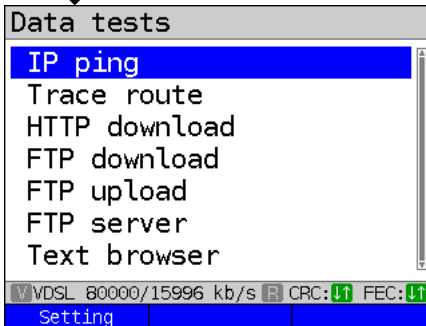

A new test can be started as needed. The xDSL link and the service are still connected (the connection can be disconnected in the status screen with <Stop>).



Error messages in IP ping

ARGUS displays an error message as soon as an error occurs.

- <Test status> Display of status screen.

For a description of error messages, see the Appendix, page 302 et seq.

14.2 Traceroute

In IP traceroute, ARGUS sends test packets and displays all hops and their response times on the way to the destination address. This data enables precise localisation of possible delays in the network.

The following parameters must be saved in the profile for the IP traceroute:


Protocol-independent parameters:

The opening of test parameters is described in the chapter "Configuring accesses", see page 31.

Setting	Description
Test parameters:	
Traceroute:	
IP address	The IP address of a destination node can be entered as either an IP number or a name (URL), see IP ping/IP address for instructions, page 128. Default: <i>www.argus.info</i>
Maximum hops	Maximum number of hops over which the path to the destination address node is tracked. Range: 1 to 25 Default: 25
Probes	Number of attempts to address a network node. Range: 1 to 10 Default: 3
Timeout	Maximum wait time for the response of a network node. Range: 0.05 - 9.9 seconds Default: 3 seconds

Starting traceroute

(Example: access mode VTU-R, already active)

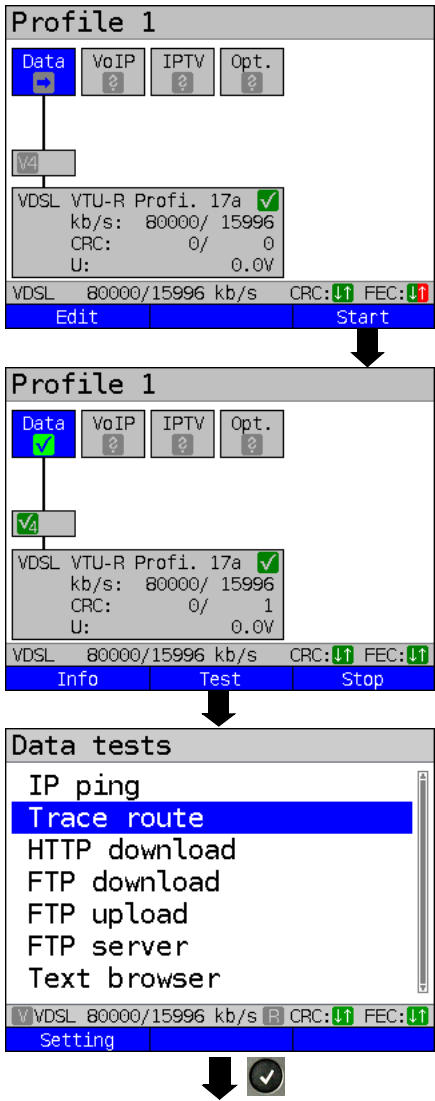

Continued on next
page

Connecting the service.

The profile shown in the display
(profile 1 in this example) is used for the
traceroute test.

<Edit> A virtual line is assigned to the
service Data.

If no xDSL or Ethernet connection is
established, ARGUS automatically
connects at this point using the default
profile (see page 48).

The service Data and the VDSL
connection are active.

<Info> Duration of activation.

<Test> Opens test selection.

<Stop> Deactivates the service.



e.g. select Trace route

<Setting> Changes traceroute
parameters, see
page 133.

IP address 1/10

• **www.argus.info**

ipv6.argus.info

0. 0. 0. 0

0. 0. 0. 0

0. 0. 0. 0

0. 0. 0. 0

0. 0. 0. 0

VDSL 80000/15996 kb/s CRC: FEC:

Edit



Initialisation

Traceroute

Trace route

Hop	3- 3
Time	0.015s
IP	192.168.111. 1
Name	fritz.box

VDSL 80000/15996 kb/s CRC: FEC:

Destinat. **Test status**



Test status

Tracer.

Hop: 9- 1

Time: 0.043 s

core23.fsn1.

hetzner.com

Data

↓	28 kb/s	<input type="text"/>	%
↑	15 kb/s	<input type="text"/>	%
CRC:	0/	0	
FEC:	0/	189	

VDSL 80000/15996 kb/s R CRC: FEC:

New **Stop**

ARGUS displays the IP addresses or URLs saved in the protocol.



Select the address for the traceroute test; the default is indicated with ●.

<Edit>

Edits the address, see page 127 for instructions.



In this example a traceroute test is conducted with IP version IPv4. Use with IPv6 is analogous.

The traceroute test starts automatically.

Display during the traceroute test:

- Current hop and attempt ("probe"), in this example:
3 - 3: i.e. 3 hops and 3rd attempt.
- Response time of hop for current attempt (0.015 seconds).
- IP address of current hop, in this example 192.168.111.1 with name where applicable.

<Destinat.>

Display of URL and IP address.

<Test status>

Displays test status without ending the test or starting a new test, see page 222.



Cancels test
Displays the test results up to this point, with possibility of saving (automatic prompt).

Display of test status:

You can observe the running test or start a new test here, see page 222.

<New>

Selects a new single test.

<Stop>

Stops the traceroute test.

<Stop all>

Stops all active tests.

<Finish all>

Finishes all test.

Traceroute result

Trace route			
1	192.168. 15. 99	0.014s	
2	192.168. 4.253	0.014s	
3	192.168.111. 1	0.016s	
4	217. 5. 98. 14	0.033s	
5	217.237.152. 70	0.033s	
6	62.154. 74. 38	0.039s	
7	62.154. 74. 90	0.037s	
VDSL 80000/15996 kb/s CRC: FEC:			
Destinat. Test status Detail			

Display after end of traceroute:

- All hops and their response times are displayed.

<Detail> Displays the name of the IP address of the hop (if possible). The details of the hop at the top of the list are displayed (in this example hop 1).

Trace route	
Hop	1
Time	0.014s
IP	192.168. 15. 99
Name	- - -
VDSL 80000/15996 kb/s CRC: FEC:	

<↓> Switches to next hop, in this example hop 2.

<↑> Switches to previous hop.



Exits results.

Save result?

Saves the traceroute results (see also IP ping, page 132).
Sends trace file to PC, see page 102.

14.3 HTTP download

In HTTP download, ARGUS downloads the data of a website or file. ARGUS displays the current "net download rate", the usable data of the IP packets, and following conclusion of HTTP download the average speed (for multiple download attempts).

The following parameters must be saved in the profile for the HTTP download:



It is not possible to obtain meaningful speed values for download tests with a duration of less than 10 seconds; therefore you should download as large a file as you can (depending on the access speed). If the duration of the test is less than 10 seconds, ARGUS does not display any data rate or time.

Protocol-independent parameters:

The opening of test parameters is described in the chapter "Configuring accesses", see page 31.

Setting	Description
Test parameters:	
HTTP download:	
Server profile:	You can create up to 15 user-defined server profiles that can be used for HTTP and FTP download and FTP upload. The profiles contain all parameters for HTTP and FTP download and FTP upload.
Server address	Entry of server address or URL of the server from which ARGUS downloads the file. For upload test: entry of upload destination address (server address) to which ARGUS sends the file. See page 127 for information on using the softkeys.
Download file name	Name of the file with the data that ARGUS downloads for tests (HTTP download and FTP download). Observe the notes for www alias addresses! (see page 138). If a specific port is required please enter it into the server address. See page 127 for information on using the softkeys.
Upload file name	Entry of the file name under which the file sent to the server in the FTP upload test is stored. Default: <i>file</i>
Upload file size	Sets the size of the file that ARGUS sends in FTP upload. Range: 0 to 1000 Mbyte Default: <i>100 MByte</i>

User name	Name of the user for the (FTTP, HTTP) file server. See page 127 for instructions
Password	Password entry for the (FTTP, HTTP) file server (max. 40 characters). See page 127 for instructions
Number	Number of times ARGUS downloads the file in the download test. For upload test: number of times ARGUS uploads the file in the upload test. "Zero" means infinite: the test continues until stopped manually. Range: 0 to 9,999 bytes (0=infinite) Default: 3
No. parall. down.	Number of packets into which the requested download is fragmented and simultaneously downloaded (see below). Range: 1 to 10 Default: 3
Profile name	Enters a name for the profile.



If a www alias address is entered as the "Source/destination address", ARGUS downloads "only" the HTML page in HTML download. ARGUS does not evaluate the HTML code, so that any link to a "real" www address is not considered. In this case, ARGUS does not indicate an error, as the HTML page of the specified "Source/destination address" was loaded without error.



When entering the "Source" address (server address and download file name), be sure to observe the correct capitalisation; otherwise ARGUS will return error 301 (Moved Permanently) or 404 (Not Found).




When requesting multiple download components, ARGUS may reduce the number of downloads depending on the server support, which can cause deviations from the set parameters. This can occur e.g. as soon as the size of the requested file is unknown.



If the download file name exceeds the maximum permissible length, you can work around this limit by fragmenting the address and additionally using the "Server" field.

The server name may be up to 80 characters long, the file name 60 characters long.

Starting HTTP download (example: access mode VTU-R, already active)

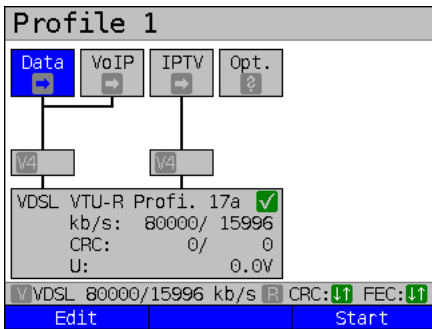


Connecting the service.

The profile shown in the display (profile 1 in this example) is used for HTTP download.

<Edit> A virtual line is added to the service Data.


If no connection is established, ARGUS automatically connects at this point using the default profile (see page 48).

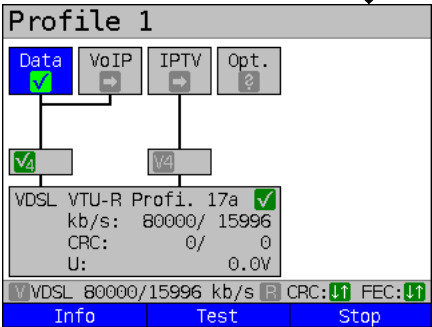

<Info> Duration of activation.

<Test> Opens test selection.

<Stop> Deactivates the service.

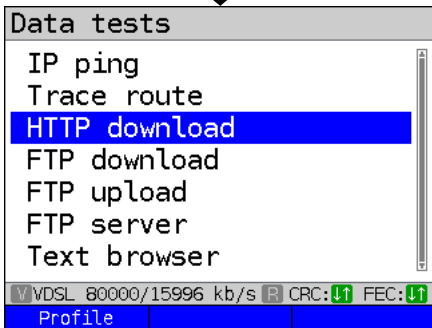

e.g. select HTTP download

<Profile> Displays the available HTTP download profiles.

Continued on
next page



HTTP-DL profiles

- **Server profile 1**
- Server profile 2
- Server profile 3
- Server profile 4
- Server profile 5
- Server profile 6
- Server profile 7

VDSL 80000/15996 kb/s CRC: U1 FEC: U1

Edit



Initialisation

HTTP download

HTTP download

Progress

Test	1/3
Cur./Ove.	006 %/002 %

Bitrate

Current	72.787 Mb/s
Average	62.434 Mb/s

VDSL 80000/15996 kb/s R CRC: U1 FEC: U1

Destinat. Test status



HTTP download

File size

Current	181.980 MB
Overall	953.673 MB

Transferred data

Current	181.980 MB
Overall	2.793 GB

VDSL 80000/15996 kb/s R CRC: U1 FEC: U1

Destinat. Test status



Mark the server profile:
(default is indicated with ●).

The server profiles are also used for FTP download and FTP upload.

<Edit> Edits the marked profile, see page 137 for changes to the individual settings.

HTTP download starts automatically.


Display during HTTP download:

- Current download/total number of downloads, in this example the first download attempt out of three (1/3) is displayed.
- Data already transferred (current / overall) (in this example 6 % / 2 %).
- Current net download rate (in this example 72,787 Mbit/s).
- Current net average download rate (in this example 62,434 Mbit/s).
- Bytes transferred so far (in this example 181,980 MB).
- Size of file to be downloaded (in this example 953,673 MB).
- Current and overall transferred data
- Transfer time so far in h:min:s.
- Remaining transfer time in h:min:s.
- Number of parallel downloads.

<Test status> Displays test status without ending the test or starting a new test, see page 222.




Cancels test.

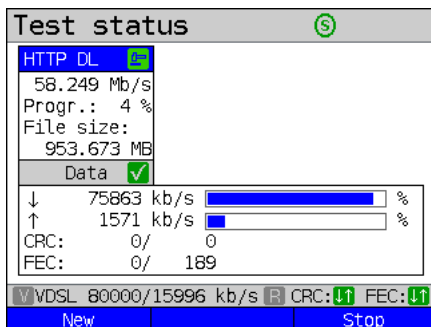


Display of test status:

 You can observe the running test or start a new test here, see page 222.

- <New> Selects a new single test.
- <Stop> Stops HTTP download test.
-  Press shift:
- <Stop all> Stops all active tests.
- <Finish all> Finishes all test.


HTTP download result

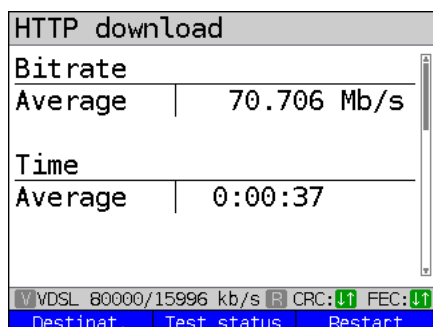


- <Test status> Displays test status without ending the test or starting a new test, see page 222.
- <New> Starts a new HTTP download.

Display of results:

- Calculated average speed of all downloads (in this example 70,706 Mbit/s).
- Average time required for a download in h:min:s.
- Transferred file size (in this example 953,673 MB).
- Maximum parallel downloads.
- Configured parallel downloads.

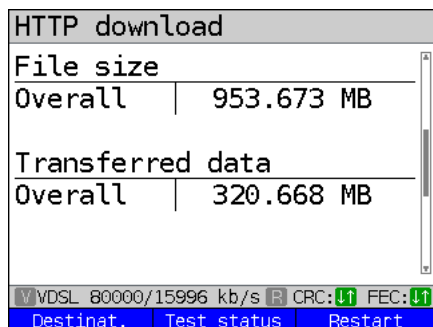

Exits results.

 


Saves HTTP download result, see page 131.

Sends trace file to PC, see page 102

14.4 FTP download


In FTP download, ARGUS downloads data in the form of a file. ARGUS displays the current net download rate, the usable data of the IP packets, and following conclusion of test the average speed (for multiple download attempts).

 No meaningful evaluations are possible for download tests with a duration of less than 10 seconds. Therefore, the download file should be as large as possible (depending on the access speed). If the duration of the test is less than 10 seconds, ARGUS does not display any data rate or time.

Protocol-independent parameters:

The opening of test parameters is described in the chapter "Configuring accesses", see page 31. See page 137 HTTP download for an explanation of the test parameters.

Starting FTP download (example: access mode VTU-R, already active)

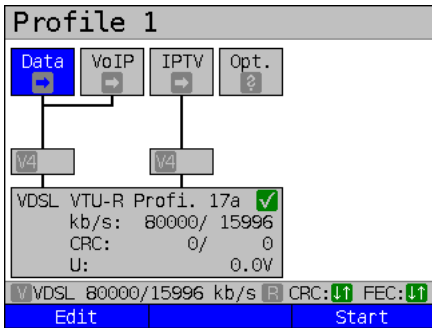


Connecting the service.

The profile shown in the display (profile 1 in this example) is used for FTP download.

<Edit> A virtual line is added to the service Data.

If no connection is established, ARGUS automatically connects at this point using the default profile (see page 48).

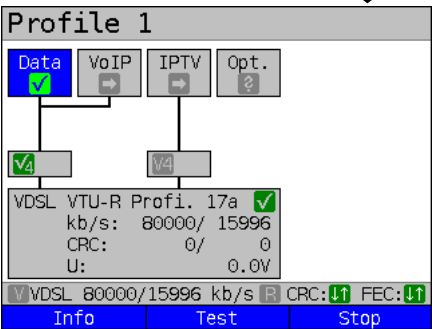


<Info> Duration of activation.

<Test> Opens test selection.


<Stop> Deactivates the service.

Continued on next page

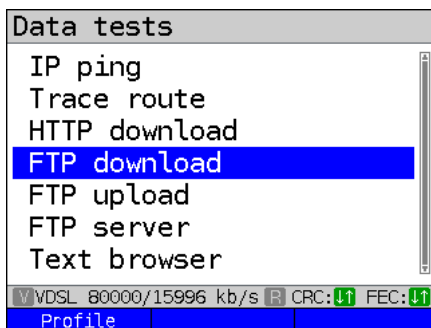

e.g. FTP download

<Profile> Displays the available FTP download profiles.

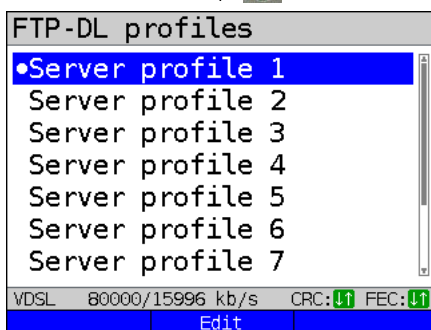

Mark the server profile (default is indicated with ●).

The server profiles are also used for HTTP download and FTP upload.

<Edit> Edits the marked profile, see page 137 for changes to the individual parameters.



Initialisation

FTP download starts automatically.

FTP download

FTP download	
Progress	
Test	1/3
Cur./Ove.	005 %/001 %
Bitrate	
Current	72.641 Mb/s
Average	60.534 Mb/s
V VDSL 80000/15996 kb/s R CRC: FEC:	
Destinat.	Test status



FTP download	
File size	
Current	95.309 MB
Overall	952.153 MB
Transferred data	
Current	95.309 MB
Overall	2.789 GB
V VDSL 80000/15996 kb/s R CRC: FEC:	
Destinat.	Test status



Test status	
FTP DL	
72.703 Mb/s	
Progr.: 18 %	
File size:	
952.153 MB	
Data	
↓	75907 kb/s
↑	1549 kb/s
CRC:	0/ 0
FEC:	0/ 189
V VDSL 80000/15996 kb/s R CRC: FEC:	
New	Stop

Display during FTP download:

- Current download/total number of downloads, in this example the first download out of three (1/3) is displayed.
- Data already transferred so far (current / overall (in this example 5 % / 1 %).
- Current net download rate (in this example 72,641 Mbit/s).
- Current net average download rate (in this example 60,534 Mbit/s).
- Bytes transferred so far (in this example 95,309 MB).
- Total download file size (in this example 952,153 MB).
- Current and overall transferred data
- Duration of test so far (in h:min:s).
- Remaining transfer time.
- Number of parallel downloads.

<Test status> Displays test status without ending the test or starting a new test, see page 222.



Cancels test.

Display of test status:

You can observe the running test or start a new test here, see page 222.

<New> Selects a new single test.

<Stop> Stops FTP download test.

FTP download result


FTP download	
Bitrate	
Average	70.371 Mb/s
Time	
Average	0:00:31
VDSL 80000/15996 kb/s R CRC:↑↑ FEC:↑↑	
Destinat.	Test status Restart



FTP download	
File size	
Overall	952.153 MB
Transferred data	
Overall	268.732 MB
VDSL 80000/15996 kb/s R CRC:↑↑ FEC:↑↑	
Destinat.	Test status Restart



Save result?

- <New>** Selects a new single test.
- <Stop>** Stops FTP download test.
-  Press shift:
- <Stop all>** Stops all active tests.
- <Finish all>** Finishes all test.

Display after end of FTP download:


- Calculated average speed of all downloads (in this example 70,371 Mbit/s).
- Average time required for a download in h:min:s.
- Transferred file size (in this example 952,153 MB).
- Overall Transferred data (in this example 268,732 MB).
- Maximum parallel downloads.
- Configured parallel downloads.

Exits results.

For saving results, see IP ping page 131.
Sends trace file to PC, see page 102.

14.5 FTP upload

In FTP upload, ARGUS sends the data of a file to a server. Among other information, ARGUS displays the current net upload rate, the usable data of the IP packets, and following conclusion of test the average net speed (for multiple download attempts).



No meaningful evaluations are possible for upload tests with a duration of less than 10 seconds. Therefore, the upload file should be as large as possible (depending on the access speed). If the duration of the test is less than 10 seconds, ARGUS does not display any data rate or time.

Protocol-independent parameters:

The opening of test parameters is described in the chapter "Configuring accesses", see page 31. See page 137 HTTP download for an explanation of the test parameters.

Starting FTP upload (example: access mode VTU-R, already active)

Profile 1

DataVoIPTVOpt.

V4V4

VDSL VTU-R Profi. 17a
kb/s: 80000/ 15996
CRC: 0/ 0
U: 0.0V

V VDSL 80000/15996 kb/s R CRC: U1 FEC: U1

EditStart

Profile 1

DataVoIPTVOpt.

V4V4

VDSL VTU-R Profi. 17a
kb/s: 80000/ 15996
CRC: 0/ 0
U: 0.0V

V VDSL 80000/15996 kb/s R CRC: U1 FEC: U1

InfoTestStop

Connecting the service.


The profile shown in the display (in this example profile 1) is used for FTP upload.

<Edit> A virtual line is assigned to the service Data.

If no connection is established, ARGUS automatically connects at this point using the default profile (see page 48).


- <Info> Duration of activation.
- <Test> Opens test selection.
- <Stop> Deactivates the service.

Continued on next page

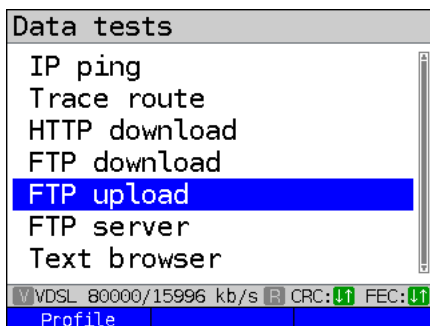

e.g. FTP upload

<Profile> Displays the available FTP upload profiles.

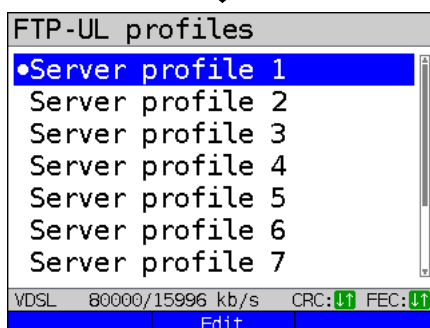

Mark the server profile (default is indicated with ●).

The server profiles are also used for HTTP download and FTP download.



<Edit> Edits the marked profile, see page 137 for changes to the individual parameters.

FTP upload starts automatically.

FTP upload

FTP upload	
Progress	
Test	1/3
Cur./Ove.	013 %/004 %
Bitrate	
Current	15.030 Mb/s
Average	14.935 Mb/s
VDSL 80000/15996 kb/s R CRC:U1 FEC:U1	
Destinat.	Test status



FTP upload	
File size	
Current	22.062 MB
Overall	100.000 MB
Transferred data	
Current	22.062 MB
Overall	300.000 MB
VDSL 80000/15996 kb/s R CRC:U1 FEC:U1	
Destinat.	Test status



Test status	
FTP UL	
14.927 Mb/s	
Progr.: 52 %	
File size:	
100.000 MB	
Data	
↓	321 kb/s
↑	15665 kb/s
CRC:	0/ 0
FEC:	0/ 194
VDSL 80000/15996 kb/s R CRC:U1 FEC:U1	
New	Stop

Display during FTP upload:

- Current upload/total number of uploads, in this example the first upload out of three (1/3) is displayed.
- Data already transferred (current / overall) (in this example 13 % / 4 %).
- Current net upload rate (in this example 15,030 Mbit/s).
- Current net average upload rate (in this example 14,935 Mbit/s).
- Bytes transferred so far (in this example 22,062 MB).
- Overall file size (in this example 100,000 MB).
- Current and overall transferred data
- Current upload time in h:min:s.
- Remaining transfer time.

<Test status> Displays test status without ending the test or starting a new test, see page 222.



Cancels test.

Display of test status:

You can observe the running test or start a new test here, see page 222.

<New> Selects a new single test.

<Stop> Stops FTP upload test.



Press shift:

<Stop all> Stops all active tests.

<Finish all> Finishes all test.

FTP upload result

FTP upload	
Bitrate	
Average	14.991 Mb/s
Time	
Average	0:00:53
V VDSL 80000/15996 kb/s R CRC:↑↑ FEC:↑↑	
Destinat.	Test status Restart

Display of results

- <Test status> Display of test status.
- <New> Starts a new FTP upload test.



Save result?

For information on saving results, see IP ping page 131.
Sends trace file to PC, see page 102.

14.6 FTP server


In FTP server mode, ARGUS behaves like a server for FTP requests. In this mode, ARGUS serves FTP download and FTP upload requests. These requests can be sent from a second terminal device (e.g. another ARGUS unit) via an Ethernet access. This makes it possible to test end-to-end throughput and determine the maximum possible data rate for this access.

In the following, the throughput test is explained using the Ethernet interface as an example. This example uses two ARGUS units. One serves as the FTP server while another requests the FTP download.

ARGUS 1 - FTP server

No settings need to be configured on the ARGUS used as the FTP server. The FTP server test just needs to be started on the selected interface.


Starting FTP server (example: Ethernet, already active)

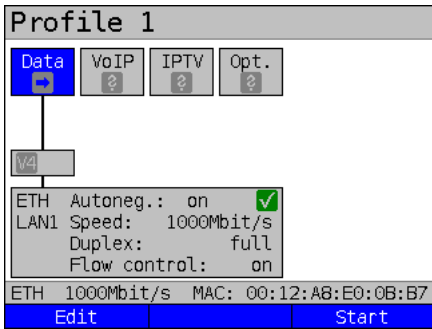

Connecting the service.


The profile shown in the display (profile 1 in this example) is used for the FTP server.

<Edit> A virtual line is assigned to the service Data.

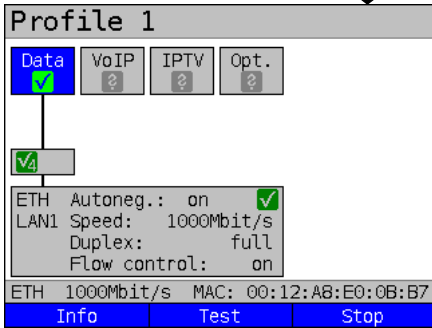

If no connection is established, ARGUS automatically connects at this point using the default profile (see page 48).


Continued on next page

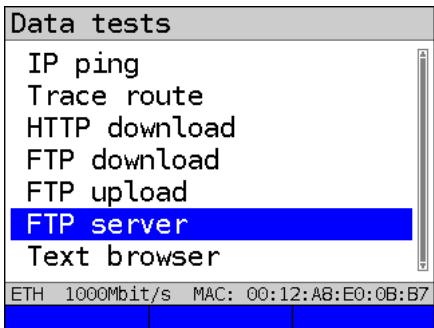

e.g. FTP server



Initialisation

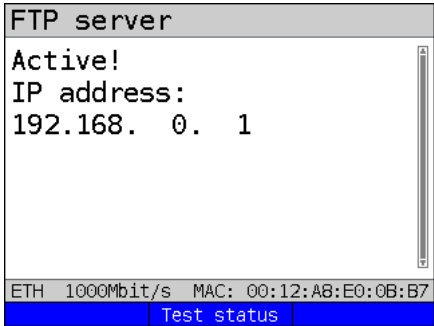

ARGUS uses the IP address configured under "own IP address" as the destination address (server) for the second ARGUS unit.

<Test status>


Displays test status without ending the test or starting a new test, see page 222.

ARGUS 1 now waits for an FTP request from a second terminal device (in this example the second) ARGUS).
The IP mode in this example is "static", the default IP netmask configuration is used.

ARGUS 2 - FTP down/upload

In principle, you can adopt the same configuration for the ARGUS unit sending the FTP request (FTP download in this example) as in an FTP download test.
The netmask and IP address (IP mode: static) should match the settings on ARGUS 1.


Starting FTP download:

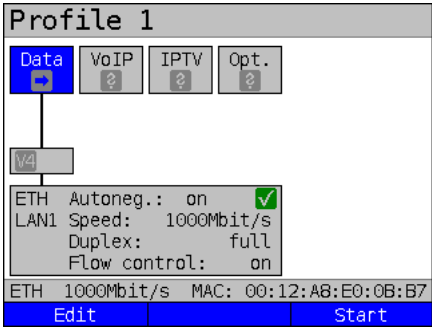

Connecting the service.

The profile shown in the display (profile 1 in this example) is used for the FTP server.

<Edit> A virtual line is assigned to the service Data.

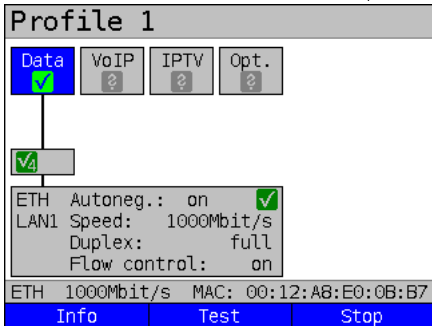


If no connection is established, ARGUS automatically connects at this point using the default profile (see page 48).

<Info> Duration of activation.

<Test> Opens test selection.

<Stop> Deactivates the service.

Continued on
next page

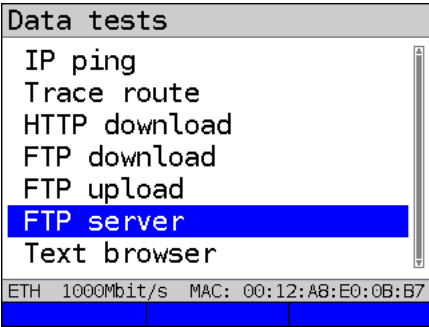


Test selection




e.g. FTP server

<Profile> Edits FTP parameters, see page 137.

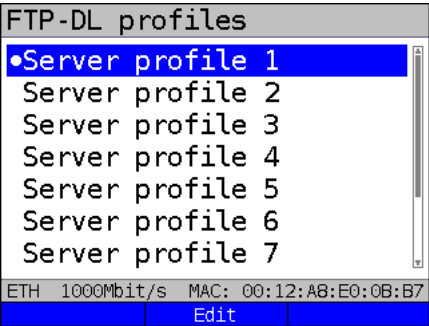

Mark the server profile (default is indicated with ●).

<Edit> Edits the marked profile, see page 137 for changes to the individual parameters.

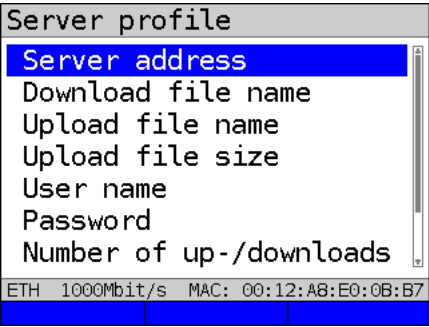

See page 137 HTTP download for an explanation of the test parameters.



Continued on next page

Server address:		
192.168.4.156		
13/79 signs		
ETH 1000Mbit/s	MAC: 00:12:A8:E0:0B:B7	
	Delete	ab>Ab

Enter the address of ARGUS 1 in the server profile of ARGUS 2 as the server IP address, see page 151.

<Delete> Deletes the place in front of the cursor.

<12>AB> see page 97.



Download file name



File name:		
10000000000		
10/59 signs		
ETH 1000Mbit/s	MAC: 00:12:A8:E0:0B:B7	
	Delete	ab>Ab

In this case too the download file name is the size of file to be downloaded. The file size is specified in bytes.

Download file name: 1,000,000,000 results in a file size of: 1 GB.



No meaningful evaluations are possible for download tests with a duration of less than 10 seconds. Therefore, the upload file should be as large as possible (depending on the access speed). If the duration of the test is less than 10 seconds, ARGUS does not display any data rate or time.

Server profile

FTP-DL profiles

- Server profile 1
- Server profile 2
- Server profile 3
- Server profile 4
- Server profile 5
- Server profile 6
- Server profile 7

ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:B7

Edit

<Edit> Edits the marked profile, see page 137 for changes to the individual parameters.

Initialisation

FTP download

FTP download

Progress

Test	1/3
Cur./Ove.	005 %/001 %

Bitrate

Current	72.641 Mb/s
Average	60.534 Mb/s

ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:B7

Destinat. Test status

FTP download starts automatically.

Display during FTP download:

- Current download/total number of downloads, in this example the first download out of three (1/3) is displayed.
- Data already transferred (current / overall) (in this example 5 % / 1 %).
- Current net download rate (in this example 72,641 Mbit/s).
- Current net average download rate (in this example 60,534 Mbit/s).
- Bytes transferred so far (in this example 95,309 MB).
- Total download file size (in this example 952,153 GB).
- Current and overall transferred data
- Current upload time in h:min:s.
- Remaining transfer time.
- Number of parallel downloads.

FTP download

File size

Current	95.309 MB
Overall	952.153 MB

Transferred data

Current	95.309 MB
Overall	2.789 GB

ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:B7

Destinat. Test status

<Test status> Displays the test status without ending the test.

 Cancels test.

FTP download result


FTP download	
Bitrate	
Average	70.371 Mb/s
Time	
Average	0:00:31
ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:B7	
Destinat.	Test status Restart



FTP download	
File size	
Overall	952.153 MB
Transferred data	
Overall	268.732 MB
ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:B7	
Destinat.	Test status Restart



Save result?

- <New> Selects a new single test.
- <Stop> Stops FTP download test.
-  Press shift:
- <Stop all> Stops all active tests.
- <Finish all> Finishes all test.

Display after end of FTP download:

- Calculated average speed of all downloads (in this example 70,371 Mbit/s).
- Average time required for a download in h:min:s.
- Transferred file size (in this example 952,153 MB).
- Transferred data overall (in this example 268,732 MB).
- Maximum parallel downloads.
- Configured parallel downloads.

Exits results display.

For saving results, see IP ping page 131.
Sends trace file to PC, see page 102.

14.7 Textbrowser


The text browser can display the first 50 lines of text of an HTML web page.

Protocol-independent parameters:

The opening of test parameters is described in the chapter "Configuring accesses", see page 31

Setting	Description
Test parameter:	
Textbrowser:	
Settings	The IP address of a destination node can be entered as either an IP number or a name (URL), see IP ping/IP address, see page 128 for instructions. Default: www.argus.info/textbrowser/

Starting Textbrowser:

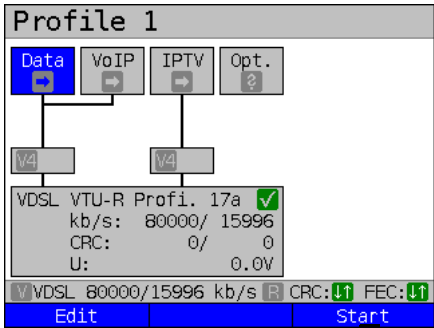

Establishing the service

The profile shown in the display (profile 1 in this example) is used for the text browser.

<Edit> A virtual line is allocated to the service Data.


If no xDSL or Ethernet connection is established, ARGUS automatically connects at this point using the default profile (s. page 48).

The service Data and the VDSL connection are active.


<Info> Duration of activation.

<Test> Opens test selection.

<Stop> Deactivates the service.

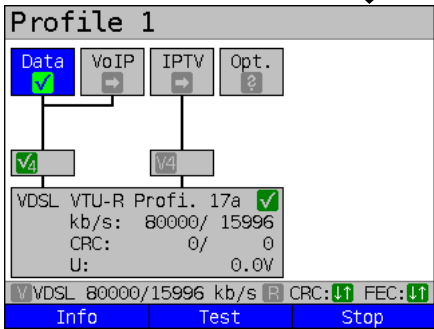


Continued on next page.

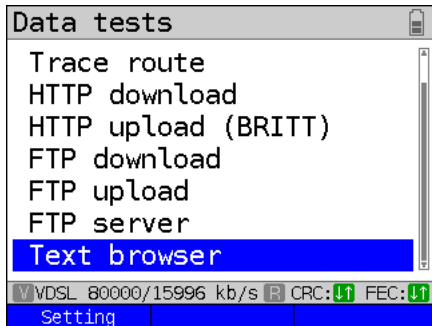


e. g. text browser

<Setting> Changes text browser parameters, see page 133.

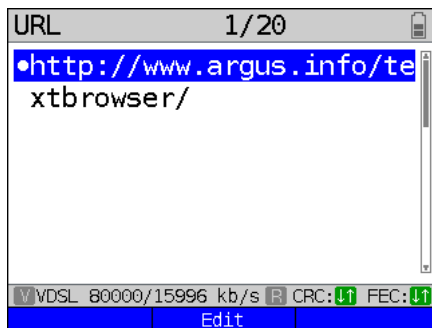

Select URL.

You can configure up to 20 URLs, see „Access name“ on page 26.

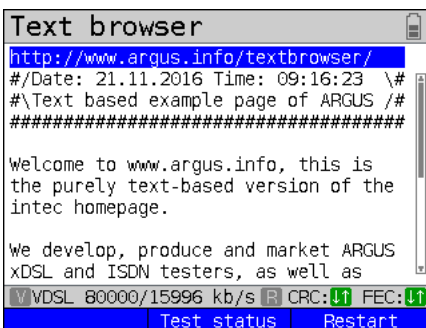

<Destination> Displaying the URL and the IP address.

<Test status> Displays test status without ending the test or starting a new test, see page 222.



Cancels test

Displays the test results up to this point, with possibility of saving (automatic prompt).



Continued on next page

Test status

Browser

#/Date: 21.1
1.2016 Time: 09:16:23
##\Text base

Data

↓	0 kb/s		%
↑	0 kb/s		%
CRC:	0/	0	
FEC:	0/	0	

VDSL 80000/15996 kb/s | CRC: 0/0 | FEC: 0/0

New Finish Restart



Save result?

Display of test status:

You can observe the running test or start a new test here, see page 222.

<New> Selects a new single test.

<Stop> Stops text browser.



Press shift:


<Stop all> Stops all active tests.

<Finish all> Finishes all test.

For saving results, see IP ping page 131.
Sends trace file to PC, see page 102.

15 Network scan

In a network scan, ARGUS identifies and displays all hosts, services and servers in a pre-configured subnet. The network scan can only be executed on an Ethernet interface. Scanning via DSL or G.fast is not possible.


 When scanning a network, please observe the applicable legal and data protection requirements.


The network scan requires the following parameters.

Protocol-independent parameters:


The opening of test parameters is described in the chapter "Configuring accesses", see page 31

Setting	Description
Test parameter:	
Network scan:	
Mode	In "Manual" mode, the network scan uses the stored network address and netmask. In "Automatic" mode, the instrument reads the parameters from the connected DHCP server. Default: Manual
Network address	The network address specifies the subnet to be searched for hosts and services. Range: 0.0.0.0 to 255.255.255.255 Default: 192.168.1.0
Netmask	The netmask is a part of the network address and describes the size of the subnet. Range: 0.0.0.0 to 255.255.255.255 Default: 255.255.255.0

 ARGUS only scans a limited number of hosts, services and servers. The subnet to be scanned should thus always be sized as small as possible; otherwise ARGUS will not show any results.

 ARGUS still communicates with the DHCP computer even when Manual is selected. When the server returns an IP address that is not in the same subnet as the manually configured one, the test fails.

Starting network scan (example: access mode Ethernet, already active)

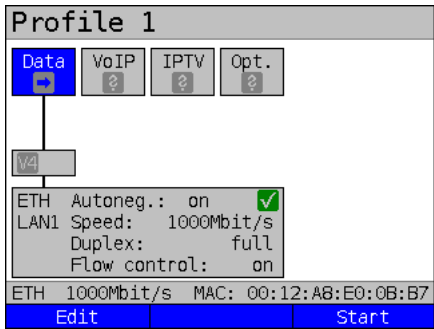


Connecting the service

The profile shown in the display (profile 1 in this example) is used for network scan.

<Edit> A virtual line is added to the service Data.



If no connection is established, ARGUS automatically connects at this point using the default profile

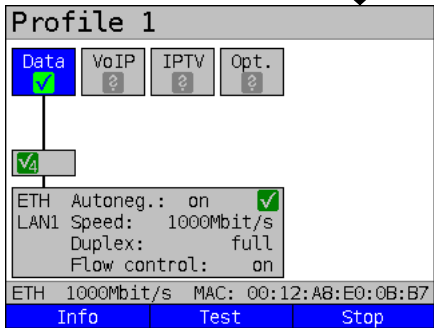

<Infos> Duration of activation.


<Test> Opens test selection.
 
<Stop> Deactivates the service.

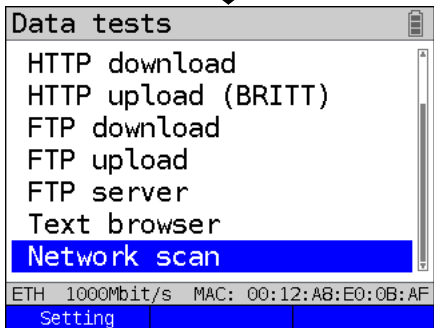

e. g. Network scan

 
<Setting> Changes network scan parameters, see page 161.



The network scan starts automatically.

Continued on next page

Network scan

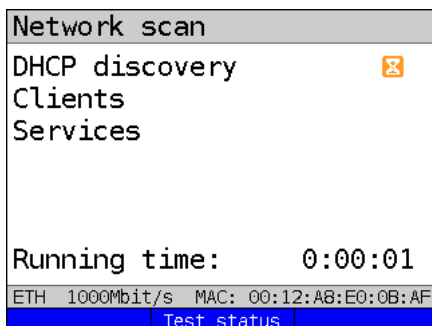

Display during the network scan:

- Display the status of:
 - DHCP discovery
 - Clients
 - Services
- Running time in h:min:s


In this example, a request to the DHCP server is running.



Information that is unavailable is grayed out.



The duration of the scan depends on the size of the network (netmask) and the number of hosts found.

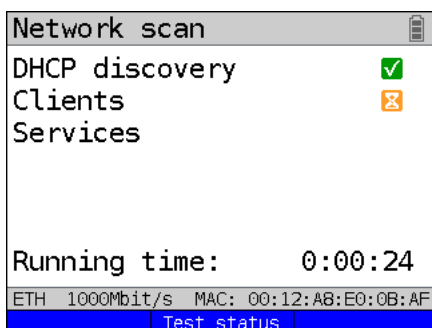


In this example, DHCP discovery was terminated, and the instrument scans for all available clients.

<Test status>

Displays test status without ending the test or starting a new test, see page 222.




A maximum of 50 entries per test are saved.

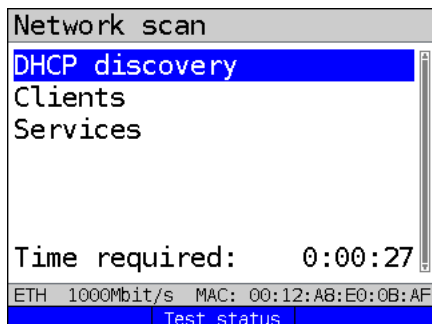

The network scan was completed. You can now view the results using the corresponding menu options.

Continued on next page

Network scan result

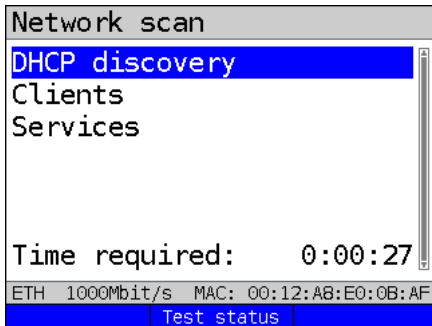

Network scan

DHCP discovery

Clients

Services


Time required: 0:00:27

ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:AF

Test status



Selection of
- DHCP discovery
- Clients or
- Services
by using the cursor keys.

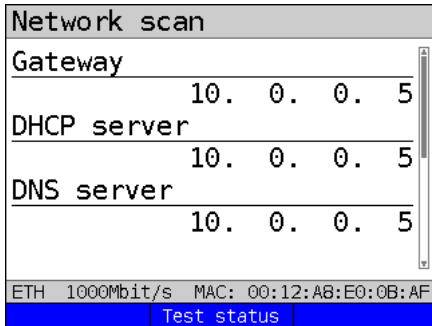

Network scan

Gateway

10.	0.	0.	5
-----	----	----	---

DHCP server

10.	0.	0.	5
-----	----	----	---

DNS server

10.	0.	0.	5
-----	----	----	---


ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:AF

Test status

DHCP discovery:


- Current Gateway
- Current DHCP server
- Current DNS server
- Current netmask
- Number of detected clients

To access the clients, close the results of

DHCP Discovery with  and select "Clients".



Clients

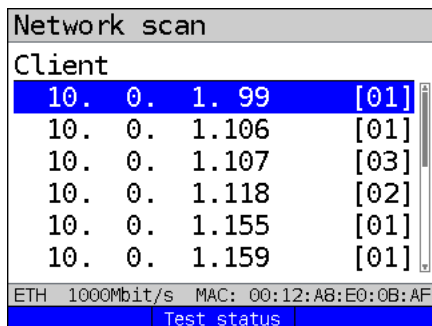

Network scan

Client

10.	0.	1.	99	[01]
10.	0.	1.	106	[01]
10.	0.	1.	107	[03]
10.	0.	1.	118	[02]
10.	0.	1.	155	[01]
10.	0.	1.	159	[01]

ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:AF

Test status

Identified clients

In this example, all clients in the same subnet are displayed. The number of ports for each client (IP) is also shown in square brackets.

<Test status> Displays test status without ending the test or starting a new test, see page 222.

Select a client.



Continued on
next page

Network scan	
IP address	10. 0. 1. 99
MAC address	08:00:27:61:ED:65
Computer name	
ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:AF	
Test status	



Services



Network scan	
Services	
Mail server	[00]
Web server	[03]
Printer server	[00]
File server	[11]
Database server	[00]
ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:AF	
Test status	




Network scan	
Web server	
10. 0. 1.107	
10. 0. 1.208	
10. 0. 1.250	
ETH 1000Mbit/s MAC: 00:12:A8:E0:0B:AF	
Test status	



Save results?

Tests results of the selected client:

- IP address
- MAC address
- Computer name
- NetBIOS name
- Open ports

To access the services, close the results of clients with  and select "services".

Identified services:

Display of services present in the scanned network. The number of servers for each service found is also shown in square brackets.

<Test status> Displays test status without ending the test or starting a new test, see page 222.



Select of server type.

In this example: list of web servers in this network.


Exits results

For saving results, see IP ping page 131.

16 VoIP tests


ARGUS operates as a VoIP terminal device with active acoustics, enabling voice links. Session Initiation Protocol (SIP) is available as a VoIP signalling protocol. Calls can be established both with and without registrar/proxy. ARGUS can be used to establish VoIP connections (DSL telephony) via xDSL, G.fast and Ethernet. To assess voice quality, ARGUS determines and displays the MOS/R-factor and the RTP datastream. You can configure three VoIP "accounts" (profiles):

Protocol-independent parameters:

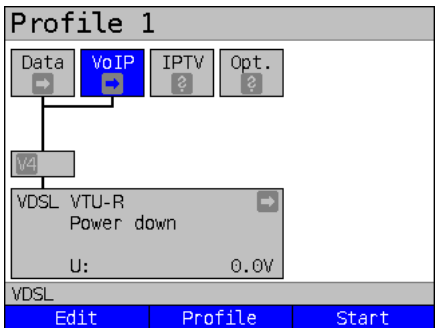


ARGUS in status screen.

- <Edit> A virtual line is assigned to the service VoIP.
- <Profile> See page 31 for profile settings.
- <Start> Starts the service.

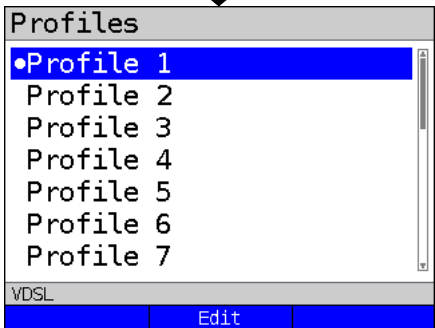

Select the profile you wish to edit. The selected profile appears in the display in blue. The default profile is indicated with a ● in the display. ARGUS adopts the parameters from the default profiles for establishing the Ethernet or xDSL connection and conducting the VoIP test.

ARGUS uses the marked profile as the default profile and switches to the menu Settings.

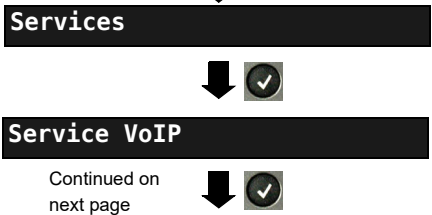

VoIP account**VoIP profile**

•VoIP profile 1
VoIP profile 2
VoIP profile 3

A total of three user-defined VoIP profiles are available.

VDSL

Edit

<Edit> Edits the VoIP profile.

Edits the marked profile.

VoIP service

SIP settings
Phone settings
STUN server
MOS threshold
Profile name

VDSL




Edit the marked
parameters.




Setting	Description
VoIP account settings:	
VoIP:	You can create a total of three VoIP profiles. <Edit> Activates the profile you wish to edit.
SIP	User name User name for registrar, see page 97 for instructions.
	Password Password for the registrar, see page 97 for instructions.
	Authentication Additional xTU-R password for legitimate authentication. See page 97 for instructions
	Caller ID Optional entry of a user-definable text which then appears in the display of the called party in place of the caller's originating number. See page 97 for information on using the softkeys.
	Registrar Server Use registrar: select yes or no If an internet telephony service provider (ITSP) is used (in this case you dial a normal telephone number), a registrar must be used as well. If a VoIP telephone is dialled directly, e.g. via the IP address or SIP URL, no registrar is needed. You can edit and use an IPv4 or IPv6 address as well as a name for the registrar server. The address is edited in the same way as for the IP ping test, see page 127. Default: no
	Outbound proxy/SBC Use proxy (SBC = session border controller) Determines whether an outbound proxy is to be used. Default: no Outbound proxy/SBC: address of proxy server. The outbound proxy/SBC is configured in the same way as for the IP ping test, see page 127. Outbound proxy/SBC port: port of proxy server. Range: 0 to 65535 Default: 5060
	DNS resolution You can define the type of DNS resolution here. Choose SRV Record or A/AAA Record. Default: SRV Record

SIP trunking	Use trunking	SIP trunk makes it possible to manage multiple different numbers, each with its own extensions, using a single access account. Default: no
	CLIR	The setting CLIR (calling line identification restriction) can be used to suppress the originating caller ID. Default: no
	Own basic number	The trunk number is a telephone number with no extension. Default: 4923519070
	Own extension (DDI)	DDI enables the desired access to be dialled directly. You can edit the extension using <Edit> (up to 4 characters). Default: 0
Transport protocol	Determines which transport protocol is to be used. Choose between UDP and TCP. For the setting "TCP fallback", ARGUS attempts to use the TCP protocol instead of the UDP protocol for a data stream with large packets. The TLS protocol (formerly SSL) is a hybrid encryption protocol for secure data transmission. Default: TCP fallback	
SIP domain	Configuration of the domain name for the "from" field in the SIP message (when using an ITSP).	
Listen port	Port used for incoming SIP signalling. Range: 0 to 65535 Default: 5060	
Remote port	Port used at the remote station: When a registrar is used (see "registrar server" setting on page 168), entry of the port number of the registrar/proxy server, otherwise entry of the port number at the remote station. Range: 0 to 65535 Default: 5060	
User agent	ID string/terminal device type is transmitted to the called party. Default: Argus153	

	Reg. expire	Determines the period of validity of registration with the registrar. Range: 10 - 6000 seconds Default: 3600 seconds
	Qualify	Determines whether the availability of the proxy service is to be continuously verified. Default: no
	Retry-after	Following a failed registration, the standard calls for a 100 second delay before attempting to register again (standard). When "ignore" is set, registration is repeated in increasing intervals (1 second several times, then 2 s, 4s, etc.). Default: standard
	Delete exist. registrar	The current registration is cancelled at the registrar. If this is set to "yes", exclusive registration of ARGUS at the registrar server. Otherwise inclusion in the list of existing registration. Default: yes
Phone settings	RTP port range	SIP signalling and RTP data are transmitted via different ports. The port range used can be adjusted for RTP, e.g. to match a router. Range: 0 to 65535 Default: Start: 10000 End: 20000
	Silence detection	When this setting is "on", ARGUS does not transmit voice packets during pauses in speech. However, this can cause problems in port assignment behind a NAT router. When the setting "not used" is selected, the feature "silence detection" is not communicated to the remote station. However, it remains set. Default: off

Jitter buffer	<p>Determines whether the size of the jitter buffer is static or adaptive. Default: static</p> <p>static: Entry of a static jitter buffer size. Range: 20 to 200 ms nominal: 60 ms</p> <p>adaptive: Entry of the minimum (min) and maximum (max) jitter buffer size and the initial value (init). Range: 20 to 600 ms Default: min: 60 ms init: 60 ms max: 120 ms</p>
Codecs	<p>Prepares a list of the speech codecs to be used. For multiple codecs, the order determines the priority.</p> <p> Switches to softkey assignment.</p> <p><↓> The selected codec is moved down one place in the list.</p> <p><↑> The selected codec is moved up one place in the list.</p> <p><Insert> A display with the available voice codecs opens. A voice codec marked with  in this selection menu is inserted in the voice codec list (via the voice codec marked in the list).</p> <p><Delete> Deletes the marked codec from the list.</p> <p> Adopts the codec priorities.</p> <p>Supported Codecs G.729 A/B, G.726-40, G.726-32, G.726-24, G.726-16, G.722, G.711 A law, G.711 μ law, G.723.1</p>


Phone settings (continued)	<div>DTMF settings</div> <div>Dual-tone multi-frequency (DTMF) is a multifrequency dialling method. Mode: Sets DTMF mode You can choose between "Automatic", "SIP info", "RFC 2833" and "Inband". Default: Automatic Duration: Sets the VoIP DTMF timer Range: 40 to 1000 ms. Up to 200 ms in steps of 10, up to 300 ms in steps of 20, up to 1000 ms in steps of 100. Default: 80 ms</div> <div>Increases or decreases the VoIP DTMF duration.</div>												
STUN server	<div>Use STUN</div> <div>Use STUN: select yes or no If a NAT router is located between ARGUS and the nearest remote station (gateway), STUN must be used so that ARGUS can determine under which IP address the remote station sees ARGUS. Default: no</div>												
	<div>STUN server</div> <div>STUN server: address of a STUN server, which must be in the same network (on the same level) as the remote station.</div>												
Rated/threshold value	<div>MOS rates value</div> <div>Entry of MOS setting: The mean opinion score (MOS) assesses the quality of voice data. The MOS quality scale ranges from 5 (excellent) to 1 (bad). On the basis of the set MOS value, ARGUS rates the current VoIP voice link as "OK" (current MOS value achieves MOS setting) or "FAIL". Range: 1.0 to 5.0 Default: 4.0</div> <table><tr><td>value</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>Voice quality</td><td>excellent</td><td>good</td><td>fair</td><td>poor</td><td>bad</td></tr></table> <div>The MOS value here is stated as MOS_{CQE} (conversational quality estimated). The use of a specific codec has a significant influence on this.</div>	value	5	4	3	2	1	Voice quality	excellent	good	fair	poor	bad
	value	5	4	3	2	1							
	Voice quality	excellent	good	fair	poor	bad							
<div>Jitter threshold</div> <div>Determines the threshold for the jitter. Range: 0 to 200 ms Default: * (off)</div>													

	<p>RTP loss threshold</p> <p>Determines the threshold for the RTP loss threshold. Range: 0 to 100 % Default: * (off)</p>
Profile name	Enter/modify name of edited VoIP profile.

VoIP QoS (Quality of Service)	
Layer 3 DiffServ	Differentiated services: Classification/prioritisation of IP packets (L3)
RTP (ToS/DSCP)	<p>ToS</p> <p>Type of service Field for setting the priority in the IP header of the usable data (RTP), see page 128 for further details. Range: 0 to 0xFF Default: 18</p>
	<p>DSCP</p> <p>Differentiated services codepoint Field for setting the priority in the DS field (6 bits) of the usable data (RTP), see page 128 for further details. Range: 0 to 0x3F Default: 00</p>
SIP (ToS/DSCP)	<p>ToS</p> <p>Type of service Field for setting the priority in the IP header of SIP data (signalling), see page 128 for further details. Range: 0 to 0xFF Default: 18</p>
	<p>DSCP</p> <p>Differentiated services codepoint Field for setting the priority in the DS field (6 bits) of the SIP data (signalling), see page 128 for further details. Range: 0 to 0x3F Default: 00</p>
Layer 2 VLAN Prio	The VLAN prioritisation on layer 2 is an extension of the Ethernet header.
RTP VLAN Prio	<p>VLAN prioritisation of usable data (RTP) Range: 0 to 7 Default: 0</p>
SIP VLAN Prio	<p>VLAN prioritisation of SIP data (signalling) Range: 0 to 7 Default: 0</p>

16.1 Starting VoIP telephony


(Example: VDSL access, already active)

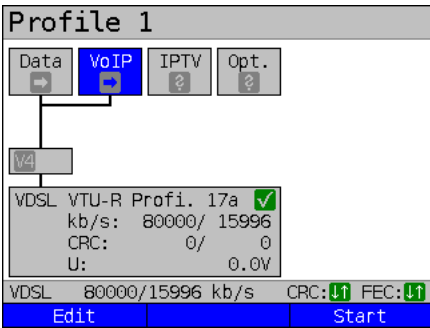

Connecting the service.

The profile selected for xDSL connection (in this example profile 1) is also used for VoIP telephony.

<Edit> Edits the default virtual line profile.

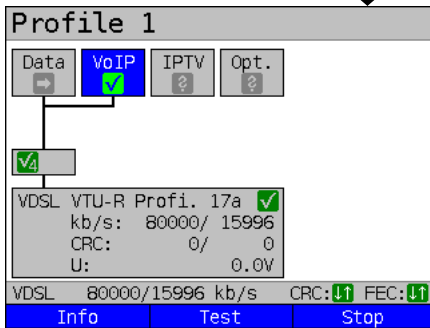



If no xDSL or Ethernet connection is established, ARGUS automatically connects at this point using the default profile (see page 48).


<Info> Duration of activation, page 179.


<Test> Opens test selection.

<Stop> Deactivates the service.

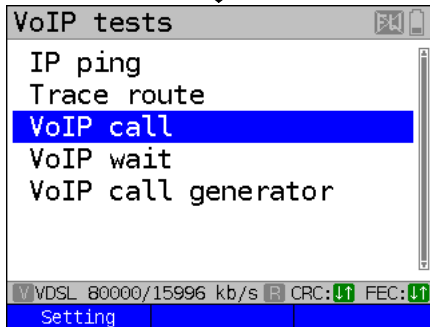

 e.g. select VoIP call

Continued on next page 

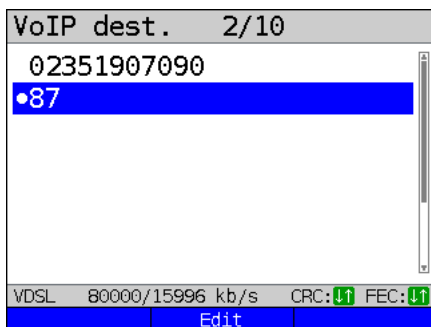


Mark the VoIP destination (default is indicated with ●).

Scroll down with the cursor, mark a blank line and add a new VoIP destination using <Edit>.

<Edit> Edits the VoIP destination number.




Initialisation

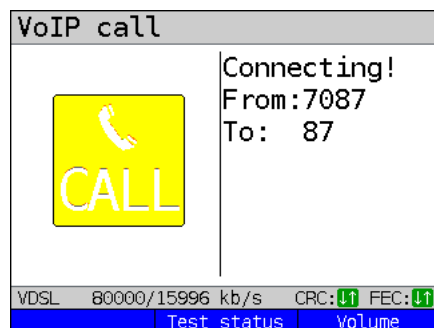

Connecting

ARGUS displays "own number" (from: 7087) and the number of the called subscriber (to: 87). The called subscriber has not yet accepted the call: display shows "Connecting!" and yellow CALL symbol.

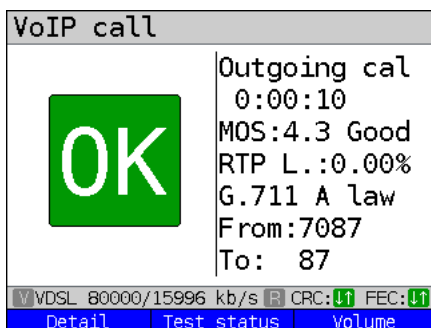

The called subscriber has taken the call ("Connected!"): ARGUS determines the MOS value and displays whether the set MOS voice quality value (see page 172) is reached ("OK" or "FAIL"). ARGUS also displays the classification of the MOS value according to ITU-T P.800 (in this example "good"), the duration of the connection and the currently used voice codec (in this example G.711 A law, see page 171) are also displayed.

<Detail> Displays the VoIP parameters.

<Test status> Displays test status without ending the test or starting a new test, see page 222.

<Volume> Opens volume control.

Continued on next page

Continued on next page, second screenshot

Volume

VoIP internal:
quiet-----loud
▲

VDSL 80000/15996 kb/s CRC: U1 FEC: U1

 
ExternOK

Volume control settings:

<External> Headset mode

<Internal> Earpiece mode

<OK> Adopts settings

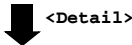

VoIP overview

State: OK

RTP	Tx	Rx
MOS (G.107)	---	4.3 ✓
Jitter (ms)	---	0
Loss (%)	---	0.0
VLAN (Prio)	---	---
TOS (hex)	00	B8 !

VDSL 80000/15996 kb/s R CRC: U1 FEC: U1

QoSInfo

VoIP overview display (for transmitted and received packets including assessment)

- Status of MOS value (FAR-MOS/MOS)
- Jitter in ms
- RTP loss rate
- VLAN (prio) in hexadecimal
- TOS (hex) in hexadecimal



The FAR-MOS value is only displayed when the remote station supports RTCP.



MOS info

MOS G.107

Current	4.3
Average	4.3
Minimum	4.3
Maximum	4.3
Ideal	4.3

VDSL 80000/15996 kb/s CRC: U1 FEC: U1

RTP

Displays MOS information:

- Current MOS
- Average MOS
- Min./max. MOS value
- Ideal MOS (possible MOS without interference, codec-dependent)
- Current and average R-factor according to ITU-T G.107



Back to previous display.

Continued on
next page

RTP info	
Packets	
Received	2254
Sent	2233
Error counter	
RTP drop	0
RTP error	0
VDSL 80000/15996 kb/s CRC: FEC:	
RTCP	

Display of further VoIP results:

Packet statistics:

- Received packets (Rx)
- Transmitted packets (Tx)
- Error counter:
 - RTP drop
 - RTP error
- RTP jitter Rx:
 - Current jitter
 - Average jitter
 - Minimum jitter
 - Maximum jitter
- Lost RTP packets (Rx)
 - Total, current, average, min. and max.



Back to display "Outgoing call"

Content of RTCP	
RTP jitter far [ms]	
Current	0
Average	0
Minimum	0
Maximum	0
VDSL 80000/15996 kb/s CRC: FEC:	
Codec	

RTCP content

Displays the statistics returned by the remote station.

- Current jitter at remote station Rx (far)
- Average jitter at remote station
- Maximum and minimum jitter of remote station
- Lost RTP packets at remote station Rx (far): total, current, average, min. and max.
- Delay calculated from transmission time of RTCP packets (network delay): current, average, min., max.



If the message "no data" appears, that means that the remote station does not support RTCP.

ARGUS displays the available codecs of the remote station.



Continue to display "Outgoing call"

<MOS>

Back to display "MOS info", ring navigation

Codec info	
G.711 A law	
G.711 μ law	
G.723.1	
VDSL 80000/15996 kb/s CRC: FEC:	
MOS	

Continued on next page



Return to status screen without ending the test.

VoIP overview		
State: OK		
RTP	Tx	Rx
MOS (G.107)	---	4.3 ✓
Jitter (ms)	---	0
Loss (%)	---	0.0
VLAN (Prio)	---	---
TOS (hex)	00	B8 !
V VDSL 80000/15996 kb/s R CRC: U1 FEC: U1		
QoS		Info

- VoIP overview display (for transmitted and received packets including assessment)
- Status of MOS value (FAR-MOS/MOS)
 - Jitter in ms
 - RTP loss rate
 - VLAN (prio) in hexadecimal
 - TOS (hex) in hexadecimal

QoS info		
	Tx	Rx
VLAN ID	---	---
VLAN prio RTP	---	---
VLAN prio SIP	---	---
RTP TOS (hex)	00	B8 !
SIP TOS (hex)	00	00 ✓
V VDSL 80000/15996 kb/s R CRC: U1 FEC: U1		

- VoIP overview display (for transmitted and received packets including assessment)
- VLAN ID
 - VLAN prio RTP
 - VLAN prio SIP
 - RTP TOS in hexadecimal
 - RTP TOS in hexadecimal



Back to the status screen without stopping the test.

Profile 1			
Data	VoIP	IPTV	VoD
→	✓	?	?
✓			
VDSL VTU-R Profi. 17a ✓			
kb/s: 80000/ 15996			
CRC: 0/ 0			
U: 0.0V			
VDSL 80000/15996 kb/s CRC: U1 FEC: U1			
Info			

ARGUS in status screen.
Another test is still running using the service VoIP (indicated by the green hammer symbol).



Using the cursor keys, select the service VoIP.

Continued on next page

Profile 1

Data VoIP IPTV VoD

✓

VDSL VTU-R Profi. 17a ✓
 kb/s: 80000/ 15996
 CRC: 0/ 0
 U: 0.0V

VDSL 80000/15996 kb/s CRC:↑↑ FEC:↑↑

Info Test

<Test> Displays the overview of results.

<Info> or  Displays the VoIP calling parameters.

Service VoIP

Active: 0:01:05

VoIP profile 1

Protocol	SIP
ID	7087

VDSL 80000/15996 kb/s CRC:↑↑ FEC:↑↑

Log. SIP

ARGUS displays the duration of the active VoIP service, the protocol used and the user name.

<SIP> Display of registration details: status codes, registrar IP, registrar used, outbound proxy/SBC and URI used and more.

<Log.> Displays the VoIP service SIP commands, see page 180.

Service VoIP

Register state

Registered
SIP code
OK
Registrar
10. 0. 0. 5

VDSL 80000/15996 kb/s CRC:↑↑ FEC:↑↑

Before, during and after the connection, ARGUS displays the registration details. The setting "Use register" must be set to "yes".

Continued on next page

```

Service VoIP
> SIP register

< Code:401
Unauthorized
> SIP register

< Code:200
VDSL 80000/15996 kb/s CRC:↑↑ FEC:↑↑
Time

```

ARGUS displays the SIP commands in the service VoIP.

For more information ((s. chapter G) VoIP SIP status codes page 307).

<Time> Puts a timestamp on all events.

```

Service VoIP
> SIP register
09:33:00:000
< Code:401
09:33:00:010
> SIP register
09:33:00:010
< Code:200
VDSL 80000/15996 kb/s CRC:↑↑ FEC:↑↑

```



The timestamp uses the ARGUS-internal system time, see page 285.

Incoming call:

```

Incom. VoIP call
Incom. call!
From:87
To: 7087
VDSL 80000/15996 kb/s CRC:↑↑ FEC:↑↑
Reject Accept

```

ARGUS can be called while the service VoIP is active. An incoming call is indicated by the yellow CALL symbol. The call can be accepted or refused. For automatic call acceptance, you need to start the specific test "VoIP wait", see page 184.

<Reject> Refuses the call.
Switches to status screen.

<Accept> Accepts the call.
Switches to ARGUS status.

Overview of VoIP results

During/after registration:

	Display /description
SIP log	Log showing the exchanged SIP methods and status codes.
Register status	In the "Register status" result screen, ARGUS displays all important registration and registrar information.

During call/connection:

	Display/ Description
MOS value, voice codec	Current MOS value , currently used voice codec.
SIP log:	Log showing the exchanged SIP methods and status codes.
INFO: MOS results:	Threshold: indicates whether the preconfigured MOS threshold is complied with. P.800: Evaluation according to ITU-T P.800 MOS value: current/average/min./max. R-factor: current/average/min./max.
INFO: RTP results	RTP packets: received/sent RTP drop: received packets rejected by the jitter buffer. RTP error: received but defective RTP packets. RTP jitter Rx: current/average/min./max. <i>(Calculated according to RFC 3550 per sec.)</i> RTP packet loss Rx: current/average/minimum/maximum in percent RTP packet loss total: <i>(RTP packets not received)</i>
INFO: RTCP results: <i>(The contents of the RTCP packets are displayed, provided this is supported by the remote side!)</i>	IP jitter remote side: current/average/minimum/maximum RTP packet loss remote side: current/average/minimum/maximum in percent RTP packet loss remote side Total Network delay: current/average/maximum/minimum <i>(calculated on the basis of RTCP packets)</i>

16.1.1 VoIP back-to-back

ARGUS permits a VoIP call to a second terminal device, e.g. another ARGUS unit. To enable calling, both ARGUS instruments must be configured as follows:

	ARGUS 1	ARGUS 2
Access, s. page 23	Ethernet IP based	
Protocol, s. page 95	IP	
IP version, s. page 98	IPv4	
IP mode, s. page 99	Static	
Own IP address, s. page 99	In example 10.0.0.1	In example 10.0.0.2

ARGUS 1



ARGUS 2




Now enter the IP address of ARGUS 2 in ARGUS 1 as the target telephone number to initiate a VoIP call. The IP address of ARGUS 1 must be entered as the target telephone number in ARGUS 2. The call is connected just as for VoIP-call/VoIP-wait, see page 174.

16.2 VoIP wait

In the test "VoIP wait", ARGUS behaves like a VoIP telephone.


The VoIP call (see page 168) and the VoIP wait parameters must be configured for the VoIP wait test.

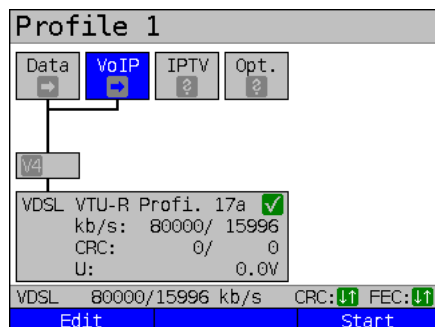


Connecting the service.

The profile selected for connecting the service (in this example profile 1) is also used for VoIP wait.

<Edit> Edits the default virtual line profile.

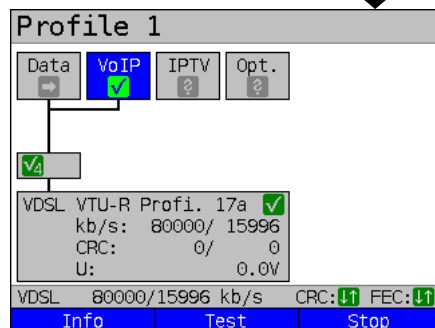


If no xDSL, G.fast or Ethernet connection is established, ARGUS automatically connects at this point using the default profile (see page 48).

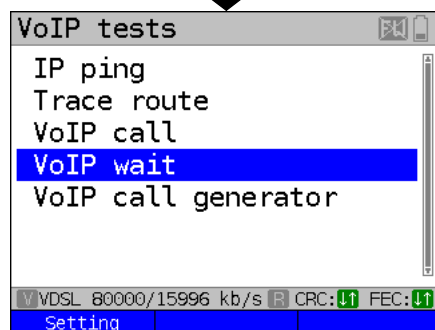

<Setting> Opens call acceptance mode for VoIP wait.

Continued on
next page

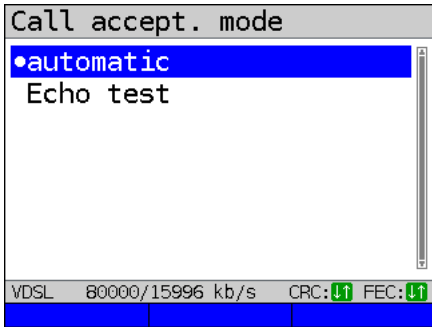


The test VoIP wait offers the following configuration options:

- Automatic
 - Echo test
- Default: **Automatic**




ARGUS uses the user name entered under SIP parameters (see page 168) as its own number.

Start VoIP wait

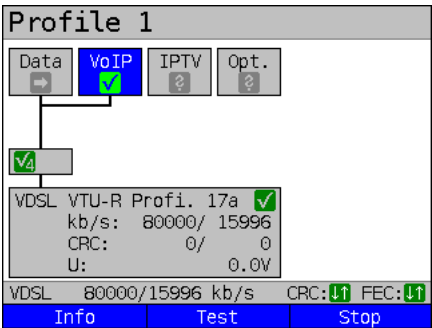


The service VoIP and the VDSL access are active.

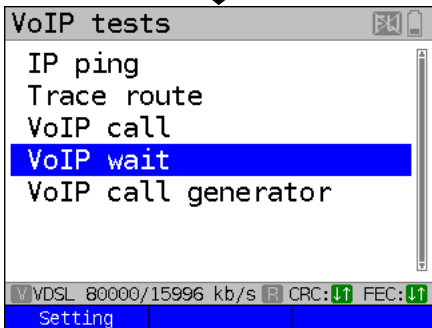

Select VoIP wait.


Initialisation

Continued on
next page

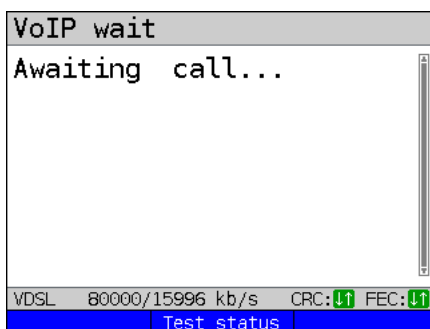

ARGUS waits for a VoIP call.

<Test status> Switches to test status, see page 175.

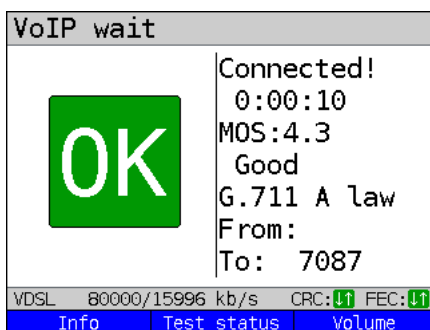

ARGUS accepts the call automatically (see setting page 184).

The connection parameters are the same as for VoIP call and are explained on page 175 and following.


Connecting:



The connection is established as for IP ping. However, pressing "Cancel" initially only disconnects (if a connection existed). ARGUS remains registered with the registrar (service VoIP active) and remains available for the caller (an incoming call can be refused or accepted). Deactivate the service VoIP to terminate registration. However, the established access remains active.

16.3 VoIP call generator


(Example: VDSL access, already active)

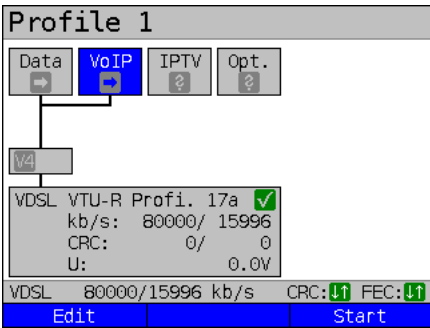


Connecting the service.

The profile selected for connecting the service (in this example profile 1) is also used for the VoIP call generator..

<Edit> Edits the default virtual line profile.

 The service VoIP is greyed out when the VoIP option is not set..

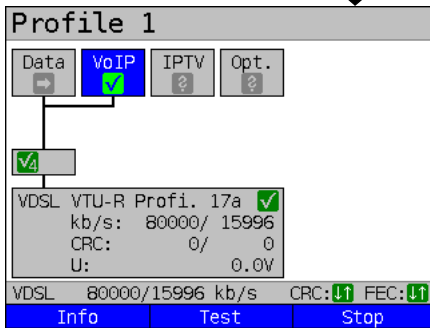



If no xDSL, G.fast oder Ethernet connection is established, ARGUS automatically connects at this point using the default profile (s. page 48).

<Info> Duration of activation, page 179.


<Test> Opens test selection.

<Stop> Deactivates the service.

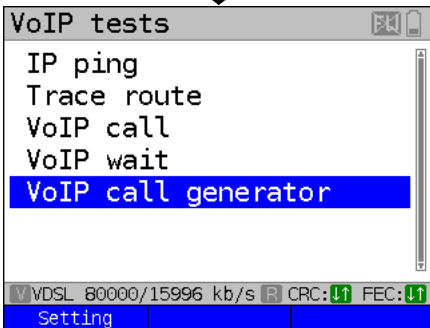

 Select VoIP call generator.


Continued on next page. 

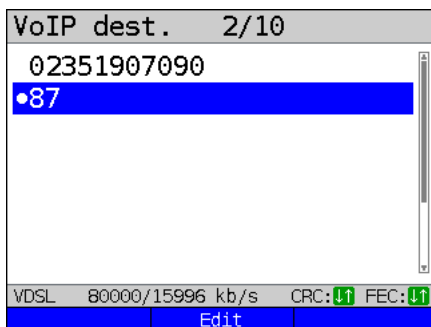

Mark the VoIP destination
(default is indicated with ●).

Scroll down with the cursor, mark a blank line and add a new VoIP destination using **<Edit>**.

<Edit> Edits the VoIP destination number.

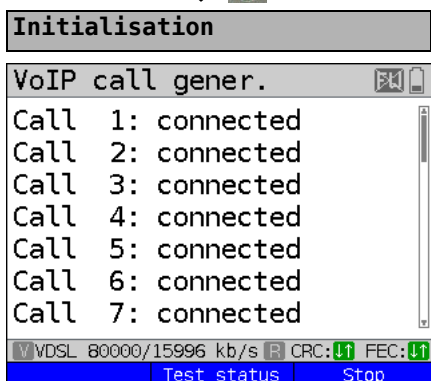


Connecting

Up to 30 consecutive VoIP calls to a configured VoIP destination are established. The connection is maintained until the test is stopped.

As soon as a call is refused, ARGUS stops establishing further calls. Existing calls remain connected. If the remote station hangs up a call, this is indicated for that call. The test remains active until you press the "Stop" softkey – even if the remote station has terminated all calls.

<Stop> Deactivates the call generator.

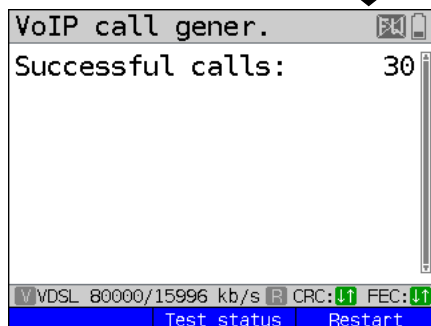

The number of successful calls is displayed. These are the calls that were still connected when the test was stopped. Calls that were refused or terminated by the remote station are not displayed.

<Test status> Displays the test status without ending the test, s. page 222.

<Restart> VoIP call generator is restarted.

Continued on
next page.

Test status

Call gen.

Successful calls: 30

VoIP

↓ 1 kb/s

↑ 0 kb/s

CRC: 0/ 0

FEC: 0/ 0

VDSL 80000/15996 kb/s

CRC: 01

FEC: 01

New

Finish

Restart

Displays the number of successful calls.

- <New>

Selects a new single test.
- <Finish>

Saves the result.
- <Restart>


VoIP call generator is restarted.

17 IPTV tests

17.1 IPTV

ARGUS requests a datastream from a server (depending on the access type, ARGUS replaces the set-top box (STB) or modem plus STB) and checks the regularity of the incoming packets, packet loss and the switch-on/switch-over time of the program. You can configure three user-defined IPTV profiles (where the xDSL, G.fast or Ethernet connection is already established, the connection parameters, e.g. the target value, are locked):

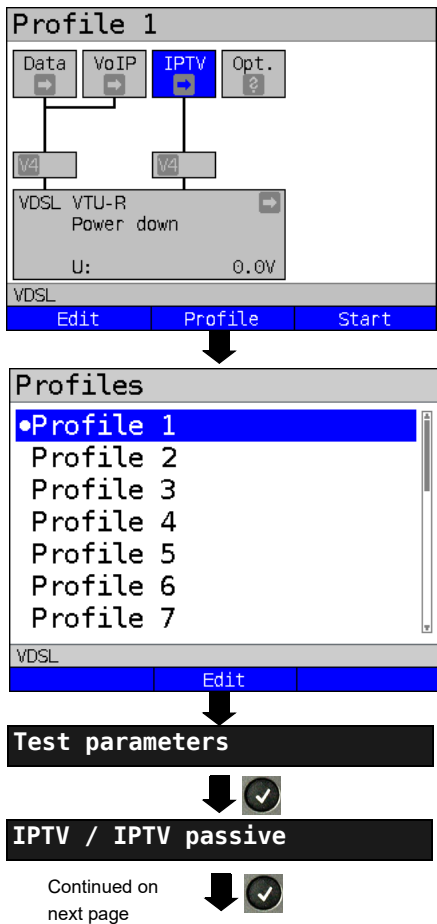

Protocol-independent parameters




ARGUS in status screen.


The IPTV-STB emulation is realised using the service IPTV.
The following example illustrates the procedure and its special features.

- <Edit>** Assign virtual lines to the service IPTV.
- <Profile>** See page 31 for profile settings.
- <Start>** Starts the service.

-  Select the profile you wish to edit. The selected profile appears in the display in blue. The default profile is indicated with a ● in the display. ARGUS adopts the parameters from the preset profiles for establishing the Ethernet, G.fast or xDSL connection and conducting the IPTV test.
-  ARGUS uses the marked profile as the preset profile and switches to the menu Settings.

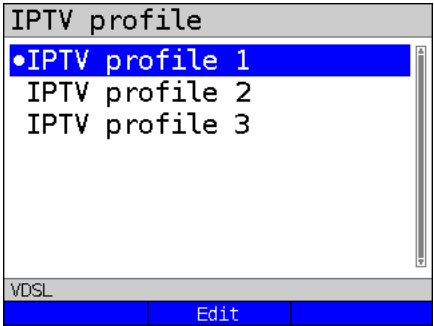

A total of three user-defined IPTV profiles are available.

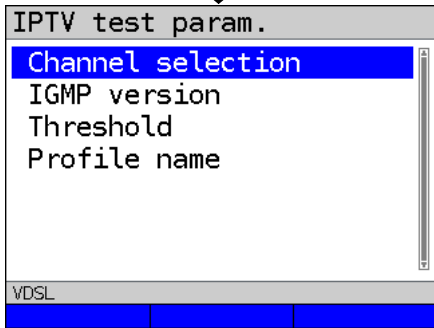

Edits the marked IPTV profile.

Edits and modifies the marked parameters



Setting	Description
Test parameters:	
IPTV:	You can create a total of three IPTV profiles. <Edit> Activates the profile you wish to edit.
Channel selection	The channel list can be used and edited in all profiles. You can store up to 250 channels. Using the software WINplus you can also create a configuration conveniently using the PC and load it to ARGUS. Selecting the TV channels for the IPTV test. <Edit> Edits channel

Multicast address	Specifies the multicast IP and source IP (SSM). Multicast IP range: 0.0.0.0. to 224.0.0.0/ Default: 224.0.0.0 Source IP range: 0.0.0.0 to 0.0.0.255 Default: 0.0.0.0
Port	Specification of port. Range: 0 to 65535 Default: 0
TV station	Enters a TV station name for the IPTV channel.
IGMP version	Version of the management protocol for joining/quitting a multicast group. Range: 2 to 3 Default: 3
Thresholds	Establishes the limit values for the IPTV test. When these values are exceeded during the IPTV test, the display shows the test result "FAIL", otherwise "OK". Specifying "*" deactivates the respective limit value check.
IGMP latency	Sets the limit values for the latency (switch-on delay of the program). Range: 0 to 25,000 ms Default: 500 ms
Sync error	Establishes the limit values for the sync error. Range: 0 to 10,000 Default: 0
PCR jitter	Establishes the limit values for PCR jitter. Range: 0 to 2000 ms Default: 100 ms
Error indication	Establishes the limit values for error indication. Range: 0 to 10,000 Default: 0
CC error	Establishes the limit values for CC errors. Range: 0 to 10,000 Default: 0
CC error rate	Establishes the limit values for the CC error rate. Range: 0.00 % to 100.00 % Default: 0.00 %


Audio bytes	Sets the target value for audio bytes. When the measurement falls below this threshold during the IPTV test, the display shows the test result "FAIL", otherwise "OK". Range: 0 to 6,553,600 Default: 0
Video bytes	Sets the target value for video bytes. When the measurement falls below this threshold during the IPTV test, the display shows the test result "FAIL", otherwise "OK". Range: 0 to 6,553,600 Default: 0
RTP jitter	Establishes the limit values for RTP jitter. Range: 0 to 2000 ms Default: 100 ms
RTP sequence errors	Establishes the limit values for sequence errors. Range: 0 to 10,000 Default: 0
Current RTP loss rate	Establishes the limit values for the current RTP loss rate. Range: 0.00 % to 100.00 % Default: 0.00 %
Total RTP loss rate	Sets the limit values for the RTP loss rate for the entire test. Range: 0.00 % to 100.00 % Default: 5.00 %
Profile name	Enters a name for the IPTV profile. See page 26 for details.


IPTV QoS (Quality of Service)	
Layer 3 DiffServ	Differentiated services: classification/prioritisation of IP packets (L3)
RTP (ToS/DSCP)	ToS Type of service Field for setting the priority in the IP header of the usable data (RTP), see page 128 for further details. Range: 0 to 0xFF Default: 18
	DSCP Differentiated services codepoint Field for setting the priority in the DS field (6 Bits) of the usable data (RTP), see page 128 for further details. Range: 0 to 0x3F Default: 00
Layer 2 VLAN Prio	The VLAN prioritisation on layer 2 is an extension of the Ethernet header.
VLAN Prio	VLAN prioritisation of usable data. Range: 0 to 7 Default: 0

17.1.1 Multiple virtual lines

ARGUS can use up to 4 virtual lines for the service IPTV. The IGMP virtual lines are used for transmission of the IGMP protocol and virtual lines 1-3 for receiving the video/audio streams.

Overview: selected virtual line profiles

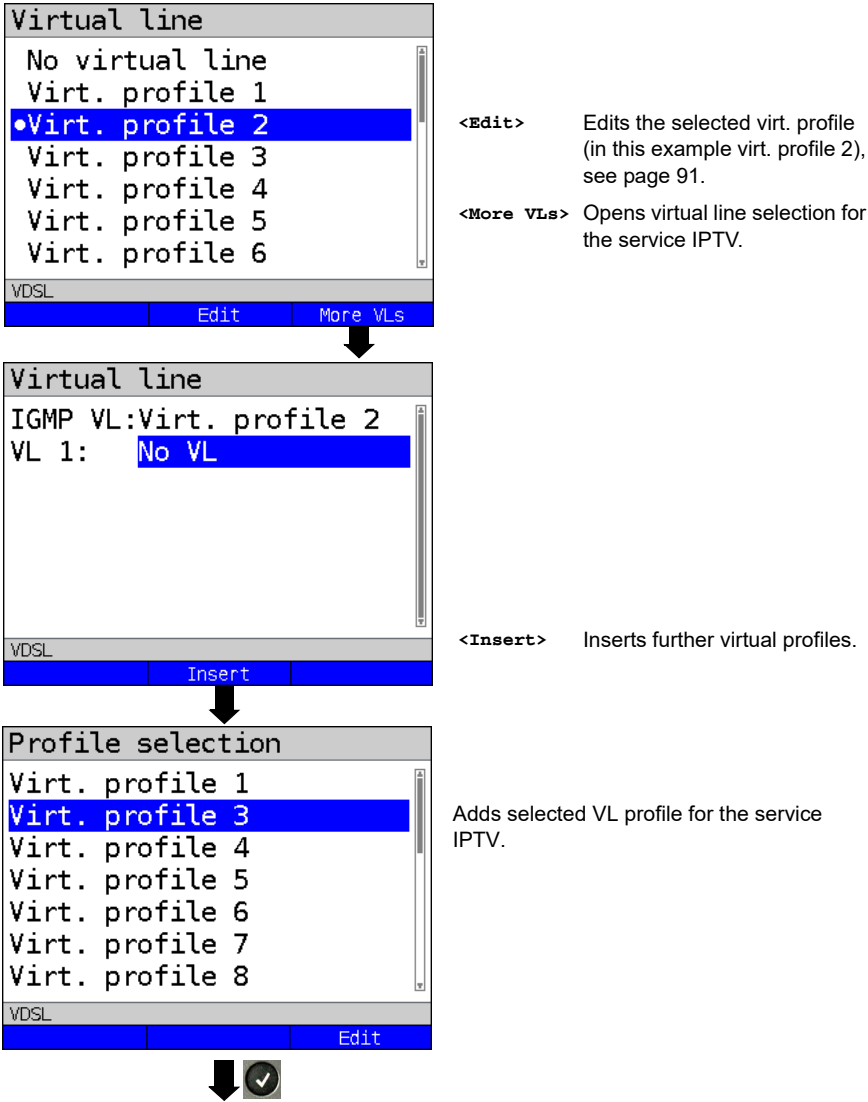


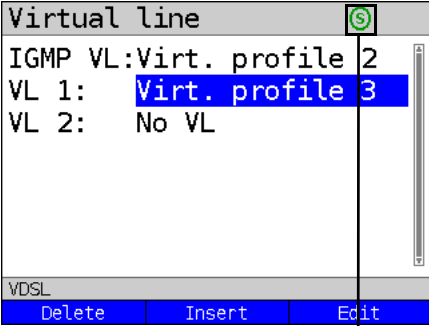

- <Delete> Deletes the selected virt. profile (in this example profile 3) from the selection list.
- <Insert> Inserts a further virtual profile.
- <Edit> Deletes the selected virt. profile (in this example profile 3), see page 91.




Switches to softkey assignment.

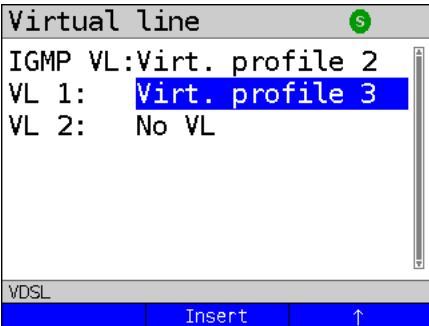

- <↓> The marked profile is moved down one place in the list.
- <↑> The marked profile is moved up one place in the list.

Starting IPTV

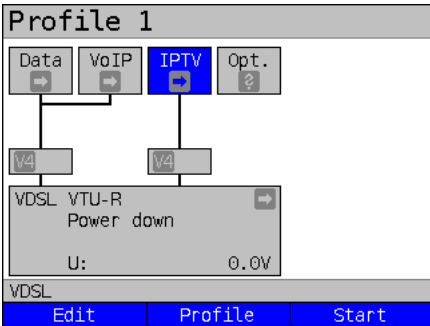


Connecting the service.

The profile selected for xDSL connection (in this example profile 1) is also used for IPTV.

<Edit> Assigns a virtual line is assigned to the service IPTV or edits it.

Activating the service IPTV.

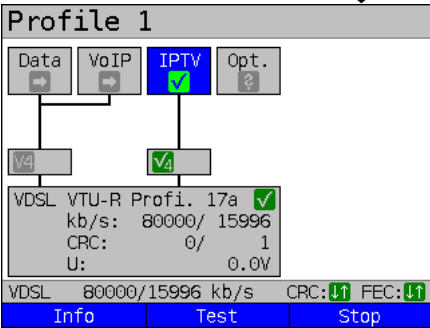


If no xDSL connection is established, ARGUS automatically connects at this point using the default profile (see page 48).

<Info> Duration of activation.

<Test> Opens test selection.


<Stop> Deactivates the service.

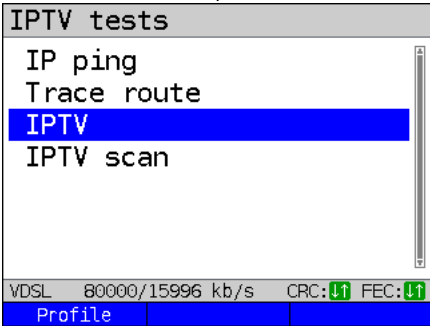

<Profile> Displays the IPTV profiles, see page 190.

Continued on
next page



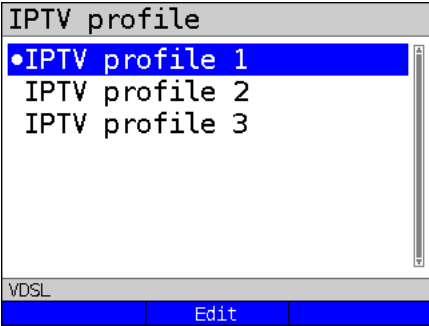


Marks the IPTV profile (default is indicated with ●).

<Edit> Edits the marked profile, see page 190 for changes to the individual parameters.



The IPTV test starts automatically.

IPTV test

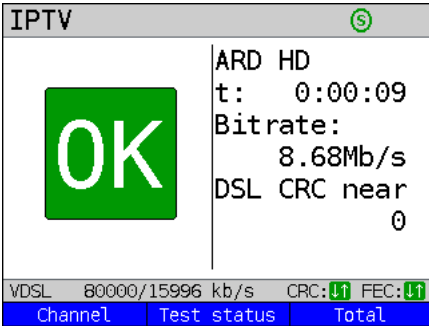


During the test, ARGUS displays the selected IPTV channel, the duration of the test and the current bitrate. If the set limits are exceeded, the IPTV test shows "FAIL" in the display, otherwise "OK". ARGUS displays "FAIL" until the values fall below the threshold again.

<Channel> Selects a new channel.

<Test status> Displays test status without ending the test or starting a new test, see page 222.

<Total> Displays all IPTV statistics.

 Cancels test.

Continued on next page

IPTV overall	
Bitrate	
Current	8.73Mb/s
Packet loss	
Sum	0
Packet loss ratio	[%]
Average	0.00
VDSL 80000/15996 kb/s CRC:U1 FEC:U1	
Detail	

Display:

- Current bitrate
- Number of packets lost during the test
- Display of packet loss rate in percent

<Detail> Switches to the IPTV details.



IPTV	
	ARD HD
	t: 0:00:09
	Bitrate:
	8.68Mb/s
	DSL CRC near 0
VDSL 80000/15996 kb/s CRC:U1 FEC:U1	
Channel	Test status

<Channel> Selects a new channel.

<Test status> Displays test status without ending the test or starting a new test, see page 222.



Cancels test.



Toggles softkey assignment.

IPTV	
	ARD HD
	t: 0:00:44
	Bitrate:
	8.66Mb/s
	DSL CRC near 0
VDSL 80000/15996 kb/s CRC:U1 FEC:U1	
Channel	Test status
OK/FAIL	

<Channel> Selects a new channel.

The IPTV test runs until a new channel is selected.

<Test status> Displays test status without ending the test or starting a new test, see page 222.


<OK/FAIL> OK/FAIL overview of the IPTV test.

Continued on next page

IPTV OK/FAIL		
c.loss rat	0.00	OK
f.loss rat	0.00	OK
Sequ.error	0	OK
Latency	3	OK
Audio byt.	23368	OK
Video byt.	908408	OK
Sync error	0	OK
VDSL 80000/15996 kb/s CRC: FEC:		

Display:

 - Current loss rate in %
- Total loss rate in %
- Sequence errors
- Latency (in ms)
- Audio bytes (in Byte)
- Video bytes (in Byte)
- Sync error
- Error indication
- PCR jitter (in ms)
- CC error
- CC error rate (in %)



IPTV OK/FAIL		
Error ind.	0	OK
PCR jitter	3	OK
CC error	0	OK
CC e.ratio	0.00	OK
VDSL 80000/15996 kb/s CRC: FEC:		

Stop IPTV



Stop IPTV test.


IPTV result

IPTV overall		
Packet loss		
Sum		0
Packet loss ratio		[%]
Average		0.00
VDSL 80000/15996 kb/s CRC: FEC:		
Detail		

Displays how many packets were lost during the IPTV test and how high the loss rate is.

Display of further information:

 - Minimum delay factor
- Maximum delay factor
- Average delay factor
- Media loss rate (MLR) during the test



<Detail> Displays IPTV test detail information, see page 201 and following.

IPTV overall	
Delay factor [ms]	
Minimal	16
Maximal	43
Average	25
MLR [%]	
Sum	0.00000
VDSL 80000/15996 kb/s CRC: 01 FEC: 01	
Detail	



Save result?

Exits results.

For saving results, see IP ping page 132.
Sends trace file to PC, see page 102.

Overview of IPTV results

	Display / Description
Bitrate, packet losses, packet loss rate	Bitrate: current bitrate Packet losses: number of packet losses during the test Packet loss rate: Displays the packet loss rate in percent
Info: Delay factor, MLR	Current: Displays the current delay factor in ms Minimal: Displays the minimum delay factor in ms Maximal: Displays the maximum delay Factor in ms Average: Displays the average delay Factor in ms MLR sum: Displays the media loss rate (MLR) in percent
Info: channel	Test duration: Duration of test Name: Displays the name of the selected channel IP: Display of channel's IP address Port: Display of channel's port
IGMP latency, protocol, DSL CRC	IGMP latency: Displays the IGMP latency (switch-on time of program) in ms Protocol: Displays the selected IPTV protocols DSL CRC: Display of DSL-CRC error counter
Info: Packet loss	Current: Number of current packet losses Minimal: Number of minimum packet losses Maximal: Number of maximum packet losses Average: Number of average packet losses Sum: Number of packets lost during the test <MPEG2> Switches to MPEG2 details
Info: Packet loss rate	Current: Display of current packet loss rate Minimal: Display of minimum packet loss rate Maximal: Display of maximum packet loss rate Average: Display of average packet loss rate
RTP, DSL CRC	Error: Display of RTP errors Seq.error: Display of RTP sequence errors DSL CRC: Display of DSL CRC error (n/f)
Info: MPEG2 bitrate	Current: Display of current MPEG bitrate Minimal: Display of minimum MPEG bitrate Maximal: Display of maximum MPEG bitrate Average: Display of average MPEG bitrate
Info: MPEG2 packets	Current: Display of current MPEG packets Minimal: Display of current MPEG packets Maximal: Display of maximum MPEG packets Average: Display of average MPEG packets Sum: Sum of MPEG packets


Info: MPEG2 bytes	Current: Number of current bytes Minimal: Number of minimum bytes Maximal: Number of maximum bytes Average: Number of average bytes Sum: Sum of bytes
Info: MPEG2 PCR jitter	Current: Current PCR jitter in ms Minimal: Minimum PCR jitter in ms Maximal: Maximum PCR jitter in ms Average: Average PCR jitter in ms
Info: MPEG2 CC errors	Current: Number of current CC errors Minimal: Number of minimum CC errors Maximal: Number of maximum CC errors Average: Number of average CC errors Sum: Sum of CC errors
Info: MPEG2 CC error rate	Current: Number of current CC error rate Maximal: Number of maximum CC error rate
Error Sync, Indicat, DSL CRC	Sync: Display of error sync Indicat.: Display of error indication DSL CRC: Display of DSL CRC error(n/f)
Info: PID bitrate	Current: Number of current PIDs Minimal: Number of minimum PIDs Maximal: Number of maximum PIDs Average: Number of average PIDs

17.2 IPTV scan

ARGUS checks the availability of TV channels. Additionally, ARGUS displays the switchover time between TV channels.

You can create three user-defined scan profiles. The following settings must be saved in the profile for the IPTV scan (when the xDSL, G.fast or Ethernet connection is already established, the connection parameters, e.g. target value, are locked):

Protocol-independent parameters:

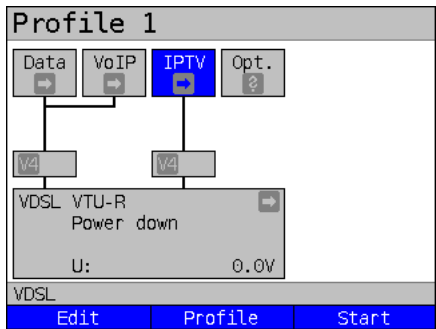

ARGUS in status screen.


- <Edit>** Assign virtual lines to the service IPTV.
- <Profile>** See page 31 for profile settings.
- <Start>** Starts the service.



Select the profile you wish to edit. The selected profile appears in the display in blue. The default profile is indicated with a ● in the display. ARGUS adopts the parameters from the default profiles for establishing the Ethernet or xDSL connection and conducting the IPTV scan.




ARGUS uses the marked profile as the default profile and switches to the menu Settings.

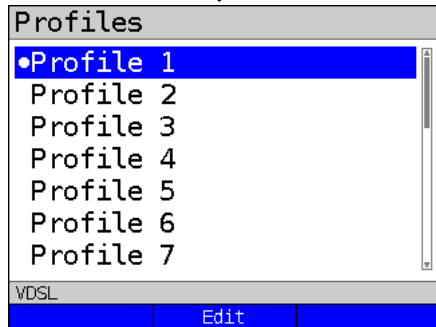

Continued on
next page




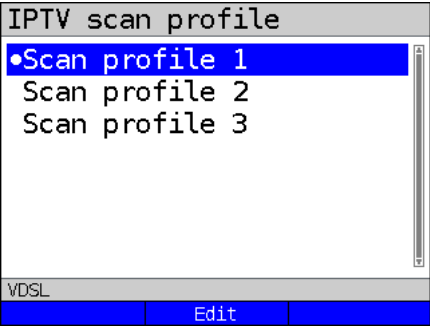

A total of three user-defined scan profiles are available.



Edits the scan marked profile.

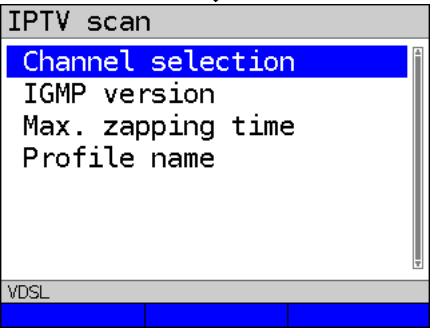

Edits and modifies the marked parameters

IPTV scan settings

Setting	Description
Test parameters:	
IPTV scan	You can create a total of three scan profiles. <Edit>Activates the profile you wish to edit.
Channel selection	The channels list can be used and edited in all profiles. You can store up to 250 channels. Using the software WINplus you can also create a configuration conveniently using the PC and load it to ARGUS. Selecting the TV channels for the IPTV scan:

Channel list

1:ARD HD

2:ZDF

3:WDR

4:

VDSL

DeleteInsertEdit

Channel selection

IPTV channel 4

IPTV channel 5

IPTV channel 6

IPTV channel 7

IPTV channel 8

IPTV channel 9

IPTV channel 10

VDSL

Edit

ARGUS initially displays the TV channels already selected in the set order that was tested for the IPTV scan. If no channels have been selected yet, the list is empty. The list slots can be filled one after another. You can select up to 250 channels.

<Insert> Opens the list with the available channels.

Marks the channel
Channels already selected do not appear in the channel list (see channel selection display).

<Edit>

Edits the marked channel, see page 190 and following.

- Enter (multicast IP and port number) of TV channel.
- Enter any alias name for the TV channel (e.g. name of broadcaster).

Continued on next page


ARGUS 153

205

<div><div><div>Channel list</div><div><div>1:IPTV channel 4</div><div>2:ARD HD</div><div>3:ZDF HD</div><div>4:WDR</div><div>5:</div></div><div>VDSL</div><div><div>Delete</div><div>Insert</div><div>Edit</div></div></div><div><div>Continued on next page</div><div><div></div><div>Shm</div></div></div></div> <div><div>Add the marked TV channel (in this example IPTV channel 4), then add the next channel (in this example IPTV channel 5).</div><div>Once at least two channels have been added to the list, you can change their position in the list using the following softkeys.</div><div><div><Delete></div><div>Deletes the marked TV channel from the list.</div></div><div><div><Insert></div><div>Opens the channel list with the available channels.</div></div><div>Toggles softkey assignment.</div></div>	
<div><div><div>Channel list</div><div><div>1:IPTV channel 4</div><div>2:ARD HD</div><div>3:ZDF HD</div><div>4:WDR</div><div>5:</div></div><div>VDSL</div><div><div>↓</div><div>Insert</div><div></div></div></div><div><div></div><div>✓</div></div><div>Accepts the channel selection in the order shown.</div></div> <div><div><↓></div><div>The selected channel is moved down one place in the list.</div></div> <div><div><↑></div><div>The selected channel is moved up one place in the list.</div></div>	
IGMP version	Version of the management protocol for joining/quitting a multicast group (for broadcast TV only). Range: 2 to 3 Default: 3

Max. switch-over time	Entry of max. switchover time (IPTV timeout): This is the time between the request and receipt of an IPTV channel. If the measured timeout exceeds the value set here, ARGUS rates this test as "FAIL". Range: 1 - 25 seconds Default: 5 seconds
Profile name	Entry of a name for the IPTV scan profile, see page 26 for details.

Starting the IPTV scan

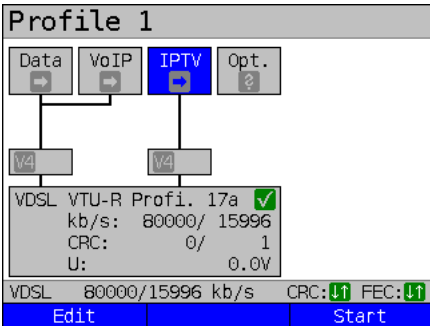


Connecting the service.

The profile selected for xDSL connection (in this example profile 1) is also used for IPTV.

<Edit> Assigns a virtual line to the service IPTV or edits it.

Activating the service IPTV.

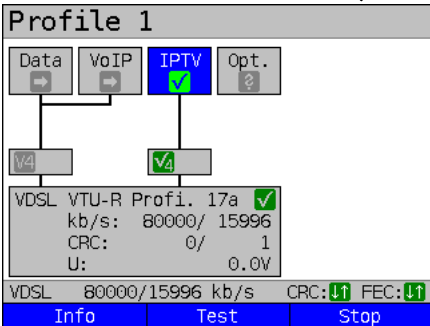


If no xDSL connection is established, ARGUS automatically connects at this point using the default profile (see page 48).


<Info> Duration of activation.

<Test> Opens test selection.

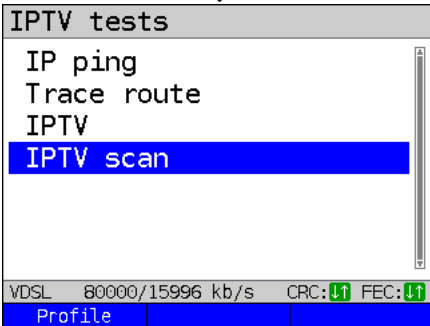

<Stop> Deactivates the service.

 

<Profile> Displays the IPTV scan profiles, see page 204.



IPTV scan

IPTV scan	
Zapping time [ms]	
ARD HD	21
ZDF	263
WDR	1972
Minimum	21
Maximum	1972
Average	752
VDSL 80000/15996 kb/s CRC:  FEC: 	
Test status	

The IPTV scan starts automatically.

Displays the time needed to switch between channels. If a TV channel cannot be received within the set interval, ARGUS displays "FAIL".

<Test status> Displays test status without ending the test or starting a new test, see page 222.

Exits results display.




Save result?

For saving results, see IP ping page 132.
Sends trace file to PC, see page 102.

17.3 IPTV passive


ARGUS listens for transmitted TV channels without requesting a channel. ARGUS lists the TV channels it detects in a list of multicast IPs and/or channel names.

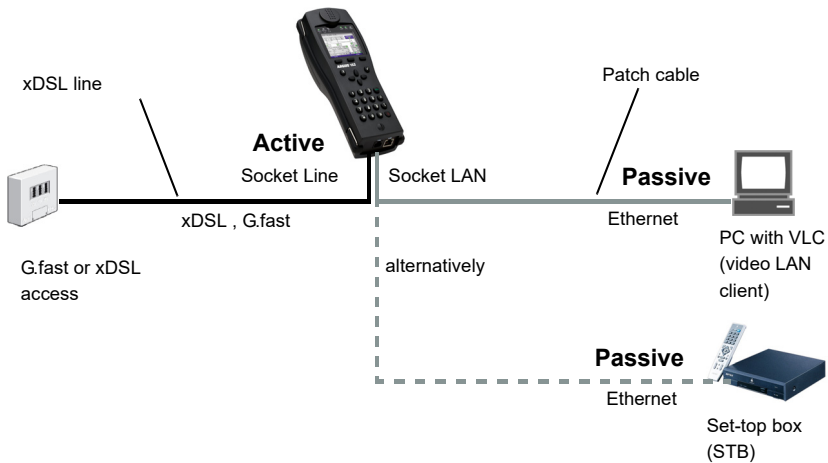

A second ARGUS in STB mode can be connected in place of a PC or STB.

See page 189 and following for protocol-independent parameters and test parameters for IPTV passive.

Starting IPTV passive

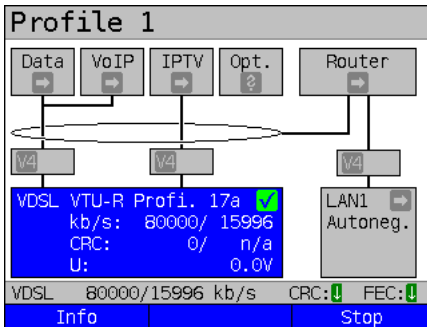

Select the router using the cursor and start the test.




Connecting the service.

The profile selected for xDSL connection (in this example profile 1) is also used for IPTV passive.



IPTV passive can also be run in bridge mode. However, the bridge must be activated first.

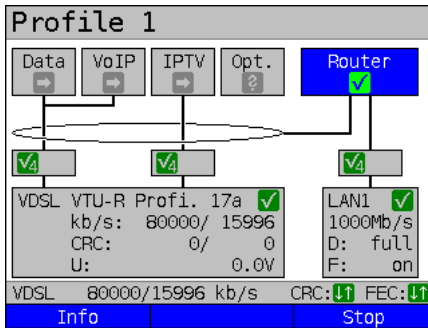


Select the service IPTV using the cursor and activate it.



Router mode is started.

- <Info> The duration of router activity is displayed.
- <Stop> Stops router mode.

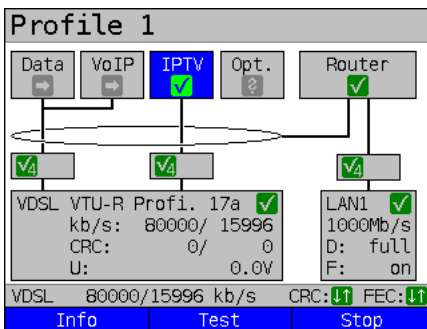


The service IPTV and the router mode are active and the VDSL access is synchronous.




To access the softkey <Test> in bridge mode, switch to the bridge box and activate it. The services are not available in bridge mode.

Continued on next page

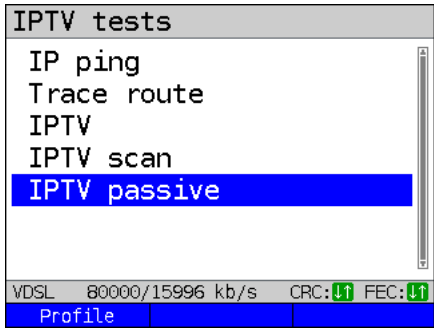

<Profile> Displays the IPTV passive settings, see page 190.

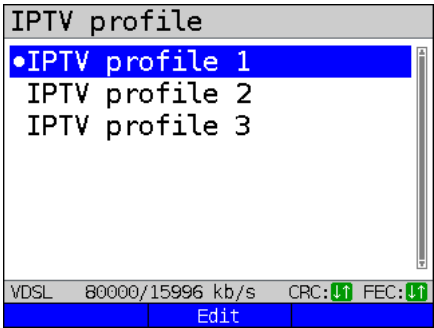


Marks the IPTV profile (default is indicated with ●).

<Edit> Edits the marked profile, see page 190 for changes to the individual parameters.

Initialisation

ARGUS automatically checks whether IPTV streams are available and displays these.

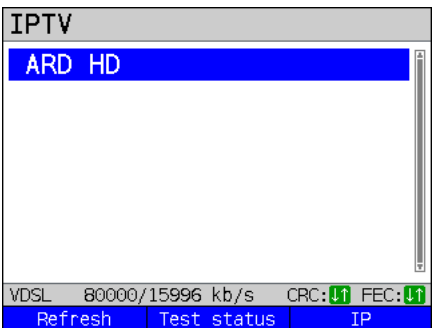

In this example, one possible stream is displayed.


<Refresh> Updates the channel list.

<Test status> Displays test status without ending the test or starting a new test, see page 222.

<IP> Displays the multicast IP of the selected channel.

Waiting for stream

Continued on
next page

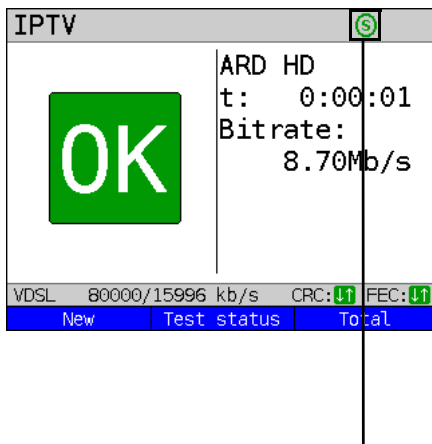


During the test, ARGUS displays the selected IPTV channel, the duration of the test and the current bitrate. If the set limits are exceeded, the IPTV test shows "FAIL" in the display, otherwise "OK". ARGUS displays "FAIL" until the values fall below the threshold again.

- <New>** Starts a new IPTV test or selects another available channel, see page 212.
- <Test status>** Displays test status without ending the test or starting a new test, see page 222.



Toggles softkey assignment.

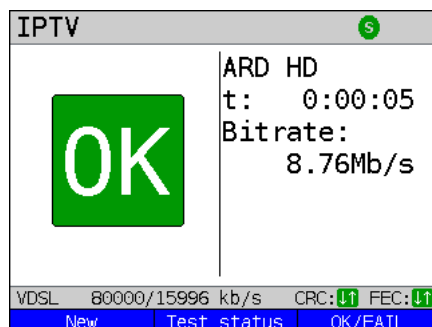

- <OK/FAIL>** OK/FAIL overview of the IPTV test, see page 199.



Cancels test.

The IPTV result statistics are explained starting on page 199.

17.4 Video on demand (VoD)


In VoD mode, ARGUS requests a datastream from a VoD server. Depending on the access type, ARGUS replaces the STB or the modem and the STB.

VoD services are often provided using RTSP, as this control protocol additionally supports control functions. However, ARGUS also supports the protocols FTP, HTTP and MMS where needed. During the test, ARGUS monitors the regularity of the incoming packets, the loss of packets, packet and PCR jitter and other possible errors.

Depending on the preset limit values, ARGUS performs an OK/FAIL assessment and shows important metadata regarding the received VoD stream.

You can configure three user-defined VoD profiles (where the connection is already established, the connection parameters, e.g. the target value, are locked):

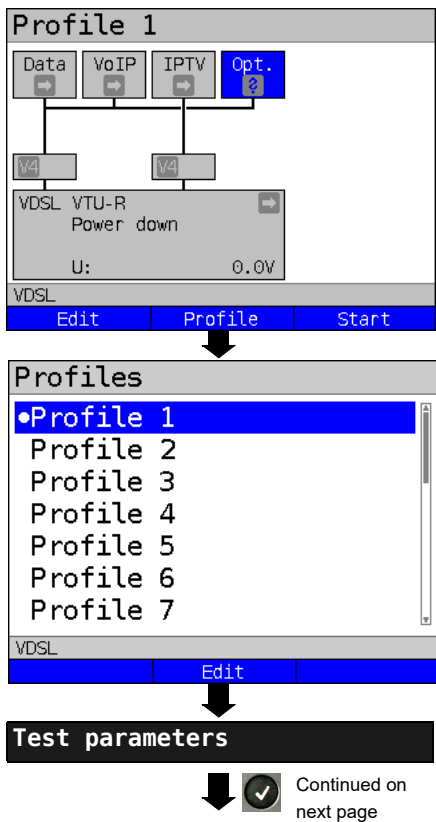

Protocol-independent parameters:



ARGUS in status screen.

The VoD test is performed using the service of that name.

The following example illustrates the procedure and its special features.

- <Edit>** A virtual line is assigned to the service VoD.
 - <Profile>** See page 31 for profile settings.
 - <Start>** Starts the service.
-  Select the profile you wish to edit. The selected profile appears in the display in blue. The default profile is indicated with a ● in the display. ARGUS adopts the parameters from the default profiles for establishing the Ethernet, G.fast or xDSL connection and conducting the VoD test.
-  ARGUS uses the marked profile as the default profile and switches to the menu Settings.

Video on demand



VoD profile

- VoD profile 1
- VoD profile 2
- VoD profile 3

VDSL

Edit

A total of three user-defined VoD profiles are available.

Edits the scan marked VoD profile.



VoD test param

- Type of stream
- Server address
- Port
- File name
- RTSP type
- RTSP server type
- Jitter buffer

VDSL


Edits and modifies the marked parameters.



Setting	Description
Test parameters:	
VoD:	You can create a total of three VoD profiles. <edit>Activates the profile you wish to edit.
Type of stream	Select the type of stream. You can select one of the following types: RTSP, HTTP, FTP, MMS Default: RTSP
Server address	Enter the server address from which the stream is to be downloaded. Enter the address using the number keys. Toggle entry using the softkey (meaning of right softkey changes when pressed), see page 128.

Port	Specification of port. Range: 0 to 65535 Default: 0
File name	Name of the file to be downloaded from the server, see page 128 for information on using the softkeys.
RTSP type	Type of control protocol: TCP or UDP. Default: TCP
RTSP server type	If the remote station is a standard-compliant VoD server, always set the field "RTSP server type" to "standard". If the remote station uses proprietary features, you can use a different setting (e.g. Kasenna). Default: Standard
Jitter buffer	Size of jitter buffer. Ideally, enter the value from the upstream STB. Range: 0 to 5000 ms Default: 300 ms
Threshold values	Sets the limit values for PCR jitter and continuity error (assessment of picture quality). When these values are exceeded during the IPTV test, the display shows the test result "FAIL", otherwise "OK". PCR jitter: - Range: 0 to 10,000 ms - Default: 8 ms Continuity error: - Range: 0.0 - 100 percent. - Default: 0.1 %
Profile name	Enter a name for the VoD profile. See page 26 for details.

Starting VoD

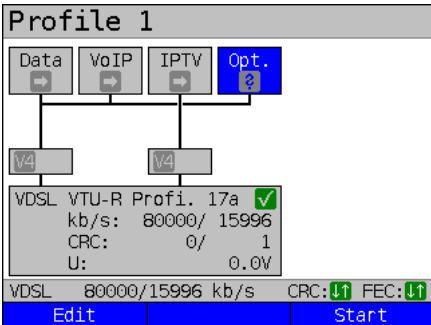


Connecting the service.

The profile selected for xDSL connection (in this example profile 1) is also used for VoD.

<Edit> Assigns a virtual line to the service VoD or edits it.

Start the service VoD.

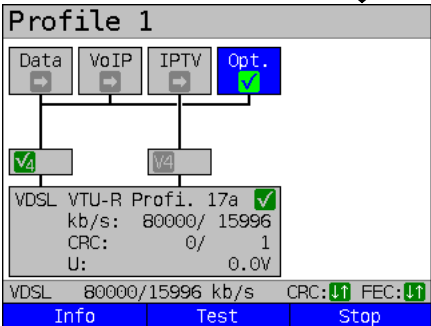


If no xDSL connection is established, ARGUS automatically connects at this point using the default profile (see page 48).

<Info> Duration of activation.

<Test> Opens test selection.


<Stop> Deactivates the service.

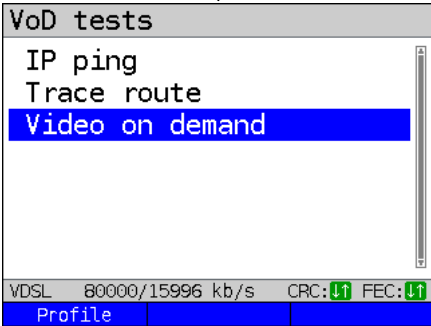

<Profile> Displays the VoD profiles, see page 215.

Continued on
next page



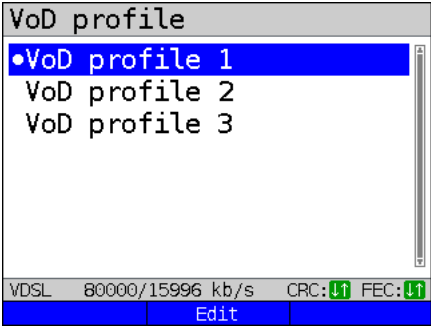


Marks the VoD profile
(default is indicated with ●).

<Edit> Edits the marked profile, see
page 190 for changes to the
individual parameters.



The VoD test starts automatically.

VoD test

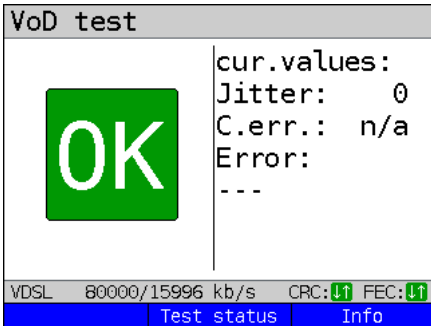

During the test, ARGUS displays the
current PCR jitter and the continuity
errors. If the set limits are exceeded, the
VoD test shows "FAIL" in the display,
otherwise "OK".
ARGUS displays "FAIL" until the values
fall below the threshold again.

**<Test
status>** Displays test status without ending
the test or starting a new test, see
page 222.

<Info> Displays the video on demand test
statistics.



Cancels test.

Continued on
next page



Video on demand	
Error code	

PCR jitter [ms]	
Current	0
Maximum	0
VDSL 80000/15996 kb/s CRC: ↑↑ FEC: ↑↑	
UDP	

Display:

- Displays the current error status
- Displays the current and maximum PCR jitter

<UDP> Switches to UDP information, see page 220.



Video on demand	
Continuity error [%]	
Current	n/a
Maximum	n/a
Container type	
	No container
VDSL 80000/15996 kb/s CRC: ↑↑ FEC: ↑↑	
UDP	

Display:

- Displays the current and maximum continuity error in %
- Display of container type



Video on demand	
Stream	
Packets	12194
Bytes	76452086
Cont.error	0
VDSL 80000/15996 kb/s CRC: ↑↑ FEC: ↑↑	
UDP	

Display:

- Display of stream packets
- Display of stream bytes
- Display of stream cont. errors



Continued on
next page

Video on demand	
Stream bit rate	
Current	8.185 Mb/s
Average	7.461 Mb/s
Minimum	3.848 Mb/s
Maximum	8.552 Mb/s
VDSL 80000/15996 kb/s CRC: U1 FEC: U1	
UDP	

Display:

- Current stream bitrate
- Average stream bitrate
- Minimum stream bitrate
- Maximum stream bitrate

VoD RTP/UDP/TCP	
Packets	
Rx	98316
Packet jitter [ms]	
Maximum	0
Current	0
VDSL 80000/15996 kb/s CRC: U1 FEC: U1	
Stream	

Display:

- Received packets
- Maximum packet jitter
- Current packet jitter

<stream> Switches to stream information, see page 221.

VoD RTP/UDP/TCP	
RTP	
Lost	0
OOS	0
Error	n/r
VDSL 80000/15996 kb/s CRC: U1 FEC: U1	
Stream	

Display:

- Lost RTP packets
- OSS RTP packets
- Number of errored RTP packets

Continued on
next page

VoD stream	
Video codec	mpgv
Video resolution	---
Video codec name	MPV
Audio codec	
VDSL 80000/15996 kb/s CRC:↑↑ FEC:↑↑	
Info	

Stop VoD test



Display:

- Video codec
- Video resolution
- Video codec name
- Audio codec
- Audio channels
- Audio sampling rate
- Audio bits/sample
- Audio bitrate
- Audio codec name
- Audio codec desc.
- Total runtime
- Author (general)
- Title
- Author (meta)
- Copyright

VoD result

Video on demand	
Time	[s]
OK	193
Fail	0
Error code	---
VDSL 80000/15996 kb/s CRC:↑↑ FEC:↑↑	
Test status	Info



Save result?

Displays the duration of the test, the result OK or FAIL, and the error status.

The further test results are described starting on page 219.

Exits results.

For saving results, see IP ping page 132.
Sends trace file to PC, see page 102.

18 Parallel tests

ARGUS permits parallel testing of different IP-based services (Data, VoIP, IPTV and Opt.) running on xDSL, G.fast or Ethernet interfaces.


The settings for each test are described in the respective chapters.

The following tests can be run in parallel. Any combination of the tests listed here is possible. Up to ten tests can be conducted concurrently.

Service	Test	Remark
Data	IP ping* ¹ , see page 127	For these tests, up to 10 tests can be conducted concurrently (incl. tests using the other services).
	Traceroute* ¹ , see page 133	
	HTTP download, see page 137	
	FTP download, see page 144	
	FTP upload, see page 146	
	FTP server, see page 150	See remark for VoIP.
	Textbrowser, see page 157	
	Networkscan* ² , see page 161	
VoIP	VoIP call, see page 166	These tests can be combined with any other test. Please note that a total of ten simultaneous VoIP connections are possible.
	VoIP wait, see page 184	
	VoIP call generator, see page 186	
IPTV	IPTV, see page 189	These tests can be combined with any other test. Note that only one IPTV test can be active at any time.
	IPTV scan, see page 203	
	IPTV passive, see page 210	

Opt.	IP ping* ¹ , see page 127	For these tests, up to 10 tests can be conducted concurrently (incl. tests using the other services).
	Traceroute* ¹ , see page 133	
	HTTP download, see page 137	
	FTP download, see page 144	
	FTP upload, see page 146	
	FTP server, see page 150	See remark for IPTV
	Textbrowser, see page 157	
	Network scan* ² , see page 161	
	VoD, see page 214	See remark for IPTV
	* ¹ Also possible via the services VoIP, IPTV and Opt. * ² only Ethernet	


The possibility of parallel testing is illustrated using HTTP download and VoIP via the services Data and VoIP. Display and operation for further parallel tests, e.g. IPTV, is performed in the same way as for Data and VoIP.

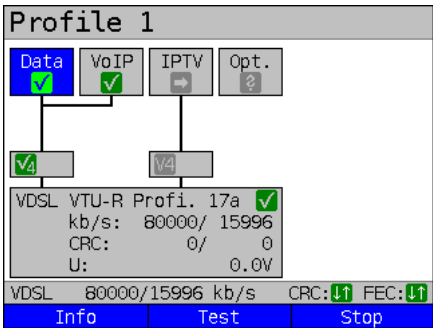

ARGUS status screen.


The VDSL VTU-R access shown in the example and the services Data and VoIP are active.

- <Info> Duration of activation
- <Test> Opens test selection.
- <Stop> Deactivates the service.

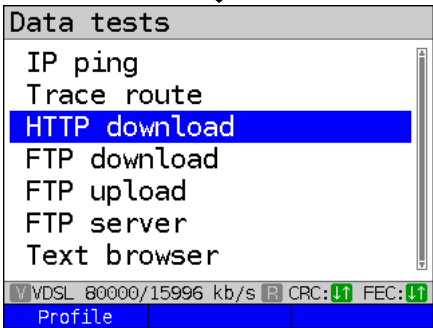

e.g. select HTTP download

- <Profile> Displays the available HTTP download profiles, see page 137.

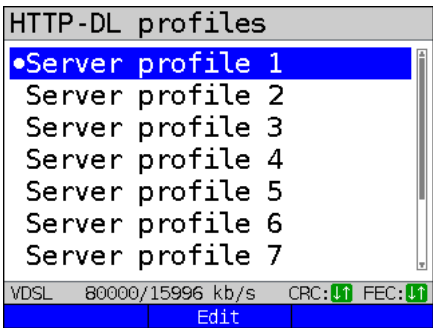



Mark the server profile:
(default is indicated with ●).

- <Edit> Edits the marked profile, see page 137 for changes to the individual settings.



HTTP download starts automatically.

HTTP download

HTTP download	
Progress	
Test	1/3
Cur./Ove.	006 %/002 %
Bitrate	
Current	72.787 Mb/s
Average	62.434 Mb/s
VDSL 80000/15996 kb/s R CRC:  FEC: 	
Destinat.	Test status

Display during HTTP download:

- Current download/total number of downloads, in this example the first download attempt out of three (1/3) is displayed.
- Current and overall Data transferred (in this example 6 % / 2 %)
- Current net download rate (in this example 72,787 Mbit/s)
- Current net average download rate (in this example 62,434 Mbit/s)

See page 140 for further result parameters.




Cancels test

Test status

Test status		
HTTP DL		
72.376 Mb/s		
Progr.: 19 %		
File size:		
1.953 GB		
Data		
↓	75857 kb/s	%
↑	1563 kb/s	%
CRC:	0/	0
FEC:	0/	149
VDSL 80000/15996 kb/s CRC: FEC:		
New	Stop	

Display of test status:

 - Currently selected test as well as test-dependent result parameters, in this example the current net download rate, the current progress and the size of the file to be transferred.
The display of results depends on the respective test. See the chapter on the individual test for more information on the result parameters.
- The current download in kbit/s is represented as a percentage of the entire downstream range.
- The current upload in kbit/s is represented as a percentage of the entire upstream range.
- Number of CRC and FEC errors in down- and upstream



Cursor down




or



Switches to the test result parameters, in this example for HTTP download.

<Stop> Stops the test, in this example HTTP download.

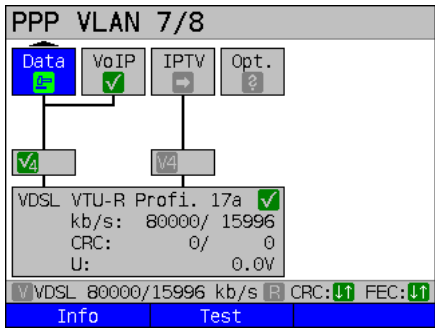

Switch to the service VoIP using the cursor keys and open test selection.

ARGUS in status screen.




Opening test status

<Info> Duration of activation.


<Test> Opens test selection.



Switches to the test result parameters, in this example for of HTTP download.

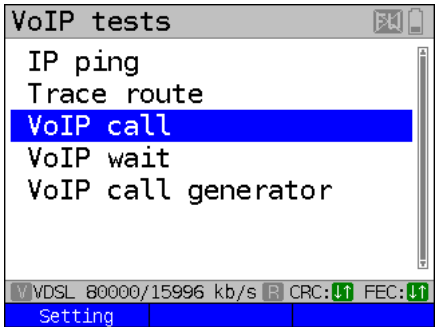

e.g. select VoIP call

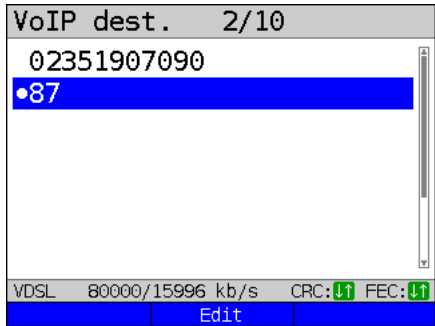


Mark the VoIP destination (default is indicated with ●).

Scroll down with the cursor, mark a blank line and add a new VoIP destination using <Edit>.

<Edit> Edits the VoIP destination number.




Connecting

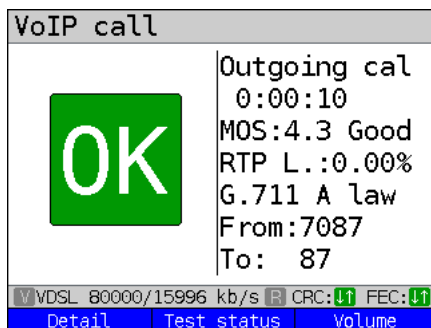

The called subscriber has taken the call ("Connected!"), see page 175.

<Info> Displays the VoIP parameters.

<Volume> Opens volume control.

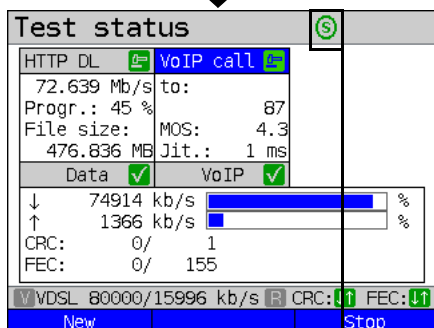

ARGUS executes an HTTP download and a VoIP call in parallel.


When more than one test is executed, you can select the tests with the left and right cursor keys. For more than three tests, the test row expands to the right.

<New> Selects a new single test.


<Stop> Stops the test, in this example VoIP call. Depending on the test, it can be reinitialised using <start>. The configuration remains unchanged.



<Finish all> Stops all tests.

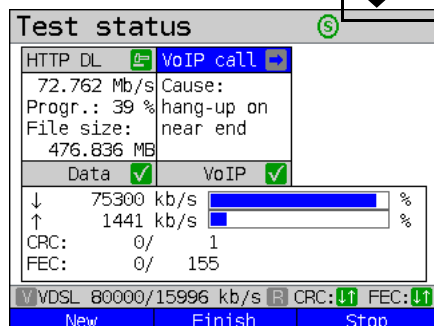Shm Toggles the softkey assignment.



The VoIP call is stopped.

To start a new VoIP call test, the old one must be cleared by pressing  twice.


 or  Switches to the test result parameters, in this example from HTTP download.

<New> Selects a new single test.

<Stop> Stops the test.


19 Auto tests

Concurrent tests (s. chapter 18 page 222) can also be executed automatically in an auto test. To do this, you can save different test scenarios in up to five auto test profiles. The same rules as for the individual tests apply for the settings, execution and control.

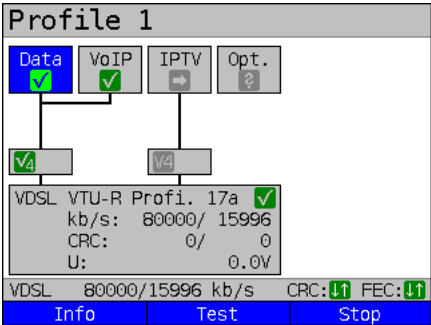


ARGUS in status screen.

 Physical layer, virtual line and two of the services are successfully activated (in this example Data and VoIP).



Cursor up

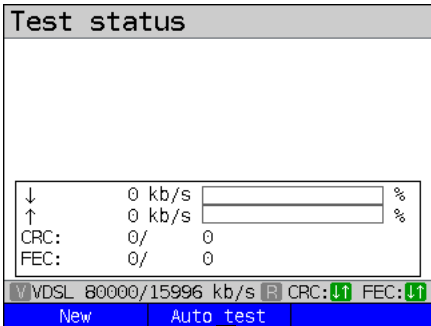


ARGUS in test status

No test has been started yet.


- <New> Selects a new individual test.
- <Auto test> Opens auto test profiles.



Continued on next page

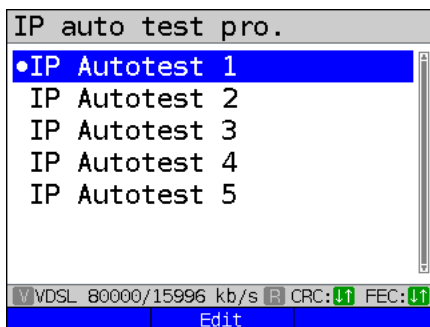


ARGUS lets you preconfigure up to five auto test profiles.

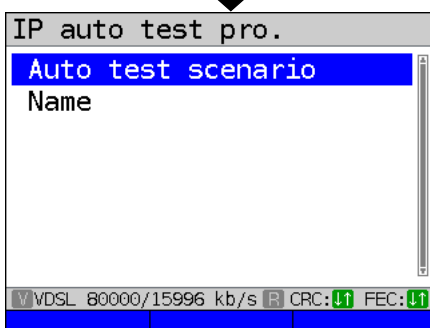

Define a scenario. You can configure up to ten individual tests (see page 222).

The number of tests (e.g. IP ping, download, VoIP ...) is limited to ten; IPTV can be selected only once (see page 222).

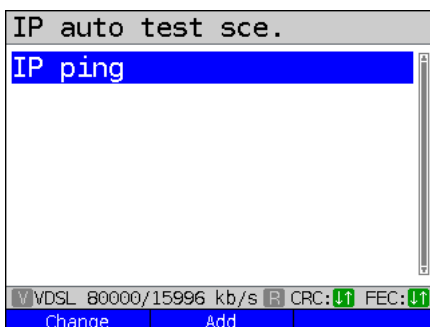


In general, at least one IP ping test is always preconfigured.


- <Change>** Replaces IP ping with a different test.
- <Add>** Adds a further test.



Continued on
next page


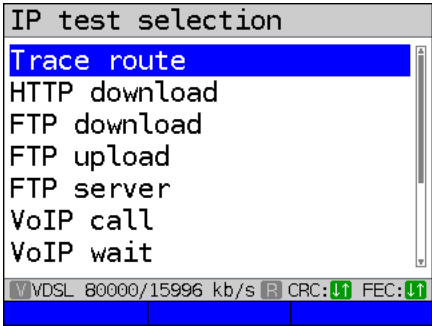


Select the desired test and confirm with

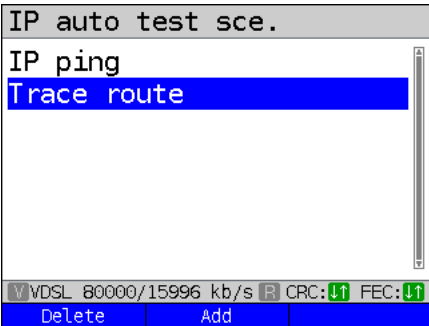

In addition to the IP ping test, a traceroute test is also started automatically and simultaneously via the auto test profile.
 
<Delete> Removes the test from the list.

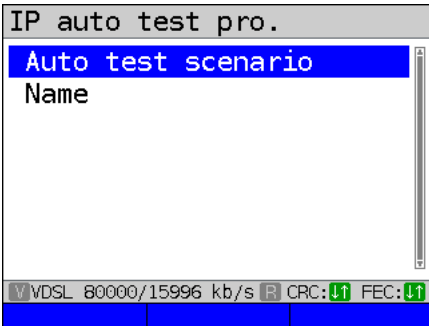

Cursor down

Continued on next page

The scenario is accepted and saved.

IP auto test pro.

Auto test scenario

Name

VDSL 80000/15996 kb/s R CRC: FEC:

Select "Name" to name the autotest.



Profile name:

IP Autotest 1


13/24 signs

VDSL 80000/15996 kb/s R CRC: FEC:

Delete ab>Ab

Give the auto test a name, like "triple-play test" or similar.
Use the alphanumeric keyboard.

Exit auto test setup by pressing twice and then start the test with . see page 225 for instructions.

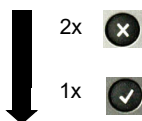

Test status

IP ping Tracer.

Sent: 1 Hop: 4- 3
Rec.: 1 Time: 0.031 s
Cur.: 38 ms ---
Max: 38 ms

Data	✓	Data	✓
↓	0 kb/s		%
↑	0 kb/s		%
CRC:	0/	0	
FEC:	0/	31	

VDSL 80000/15996 kb/s R CRC: FEC:

New Stop



The individual tests are configured as described starting on page 127.

20 Copper tests

In the Access menu, ARGUS offers the menu option "Copper tests", which enables you to investigate the physical properties of the line.

This chapter briefly describes how to use the various functions. It is not possible to describe the interpretation of the results in the customary detail here. As the results are usually provided in graph form, they can only be interpreted correctly in conjunction with a knowledge of the line being measured. ARGUS supports this using a variety of aids, such as the Zoom and Cursor functions.

Note:

The ARGUS Copper Box is described in a separate Copper Box manual.

20.1 Line scope


With the line scope, ARGUS performs a real-time analysis on the connected line. The high-ohm line scope can e.g. be patched into an existing link between modem and DSLAM. You can display the results in either the time or frequency range (FFT).



The voltage on the line may not exceed 200 V DC or 100 V_{pp} AC.


20.1.1 Starting the line scope

The chapter "Configuring accesses", page 28, explains how to set up the access type "Copper tests".

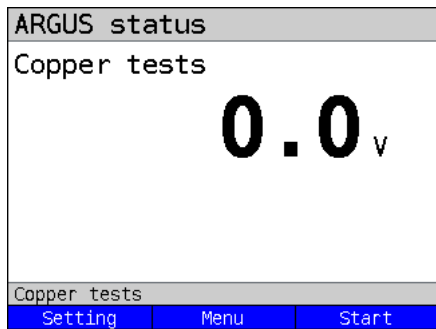

ARGUS status display.
Any DC voltage on the line is indicated here.

- <Menu> Switches to main menu.
- <Start> Directly accesses "Single tests" menu.

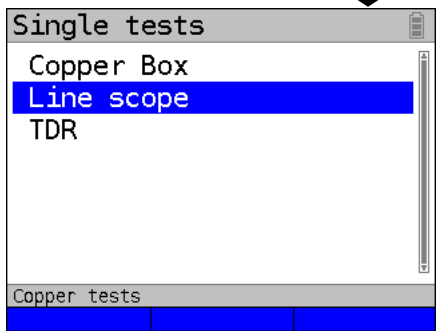



Select one of the Copper tests.
- Copper box
- Line scope
- TDR


Start the desired copper test directly by selecting it.

In this example, line scope.

Continued on
next page




Line scope status display

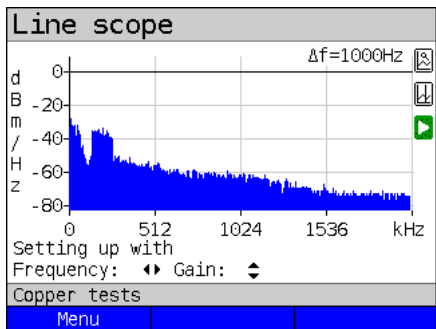

The line scope can identify a variety of states or occurrences on the line. This example shows the ADSL (Annex B) connection with ISDN-U interface established between the modem and DSLAM. The line scope is located in direct proximity to the modem, as it is particularly effective upstream in the spectrum. If the upstream were significantly less than the downstream, it would be in direct proximity to DSLAM.

<Menu> Opens the graph function, see page 236

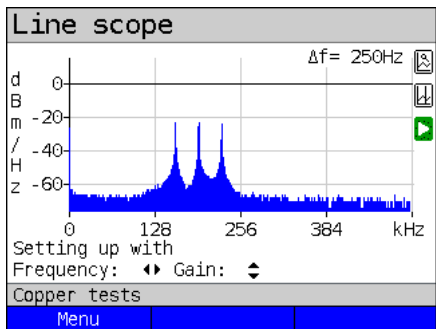

Finding the modem: In addition to the general state of the line/connection, a variety of events can be detected. In this example, we can see the handshake tones that a modem connected to the line sends periodically in order to establish a connection with the DSLAM. This also reveals whether or not an active modem is connected to the other end of the line.


In addition to the wanted signals such as the DSL spectrum or the handshake tones, the line scope can also detect unwanted signals such as temporary interference sources (real-time operation) or peculiarities in noise (with respect to background noise).

Connection example without probe:



Gain:

To ensure optimum detection of different signals, match the gain (y-axis) with the reduction of the frequency range shown (x-axis). ARGUS always begins with the lowest gain (-26 dB in the frequency range up to 3 MHz). Measuring range: -130 to -2 dBm/Hz.

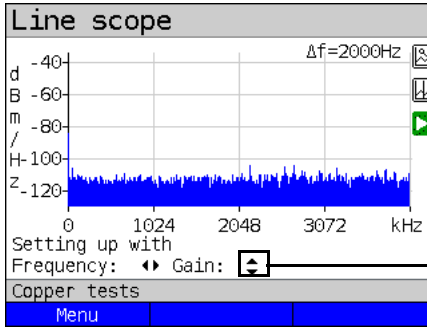


Gain-Y: Gain settings:
-26 dB, -20 dB, 0 dB, 20 dB

ARGUS displays all measurement results as dBm/Hz values. These values are only comparable with others when the resolution of the measured frequency band is taken into account, as here the total energy of the frequency band is determined "per Hz". The bandwidth ARGUS is measuring is indicated in the display as Δf .

Frequency range:


A frequency range of from 10 kHz to 35 MHz is available for measurement; the resolution varies depending on the selected range.

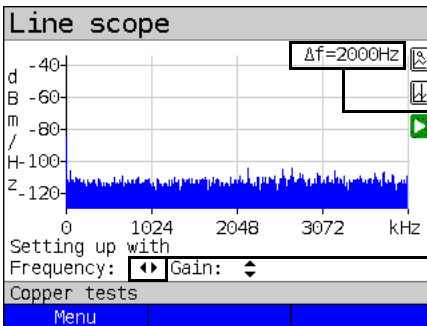

The bandwidth Δf at the top right in the display shows which frequency range is being shown in the display.




Frequency-X: Setting the displayed frequency range. Every press of the cursor key halves, respectively doubles the displayed range.

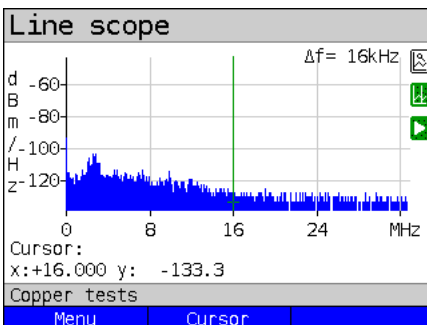Example:

In a measuring range up to 32.768 MHz, up to 2048 values can be displayed, so: $\Delta f = 32,768 \text{ MHz} / 2048 \text{ values} = 16 \text{ kHz}$. Consequently, a y-value marked by the cursor and displayed (in this example 16 MHz) is the mean (in this example -133.3 dBm/Hz) across the frequency range of 16 MHz - $\Delta f/2$ to 16 MHz + $\Delta f/2$, or 15.992 MHz to 16.008 MHz.


20.1.2 Graph functions

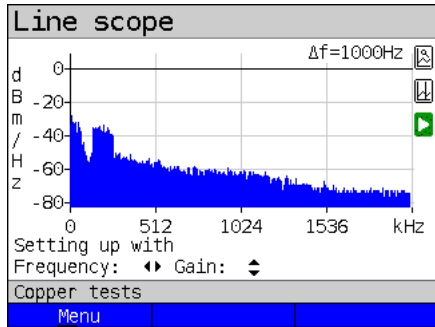


The graph functions Zoom and Cursor enable detailed analyses of the graphs.

<Menu> Opens graph functions.



Press  in the status display (in the graph) to save the results and stop the line scope.

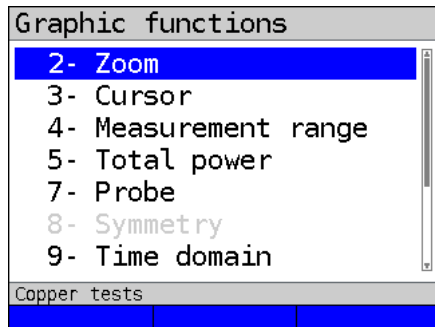

The "Graph functions" menu opens:



Exits the menu without changing.



You can also use this number key to activate the Zoom function within a graph.




The function of the cursor is described on page 237.



Accepts the selection and returns to the graph.

Zoom (2):

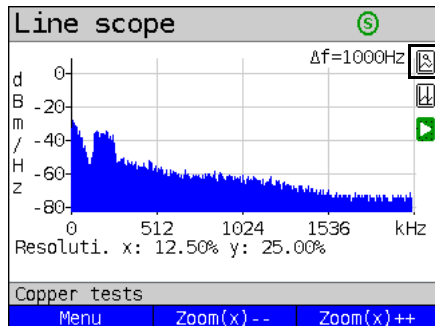


The magnifying glass shown in the display rests on a white background. It has not yet been zoomed. When the magnifier is over a dark background, the graph is zoomed.

<Zoom(x) ++> Magnifies the middle section of the graph (100%).

<Zoom(x) --> Not yet zoomed! Reverses **<Zoom(x) ++>** and resets magnification.



lets you toggle the meaning of the softkeys and choose between x-axis and y-axis zoom, see page 55.

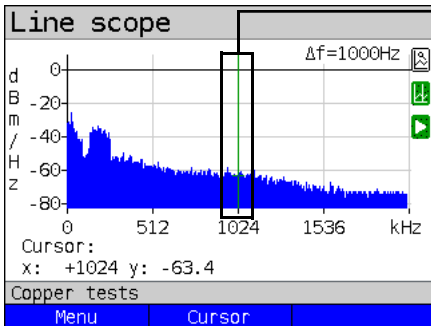Cursor (3):

When the Cursor function is started, a green cursor line appears in the middle of the graph.

<Cursor> You can toggle the cursor on and off as needed using the Cursor softkey after activating it in the menu.

The values of the graph for the position under the cursor are displayed in the graph as follows:

x: +1024 kHz (accuracy $\pm 0,1 \%$)

y: -63.4 dBm/Hz (accuracy $\pm 2 \text{ dB}$)




When the Stop function (see page 242) is activated, you can move the cursor faster.




You can use the left and right cursor keys to move the cursor to any position on the graph to measure it. Briefly pressing a cursor key causes the cursor to jump to by one position in the graph. When the cursor key is held down, the steps the cursor covers in the graph become progressively larger.

The zoom function and the cursor function can also be combined. For example, you can determine a certain value using the cursor more easily when you have previously zoomed in on a specific range. However, the starting position of the cursor can vary.

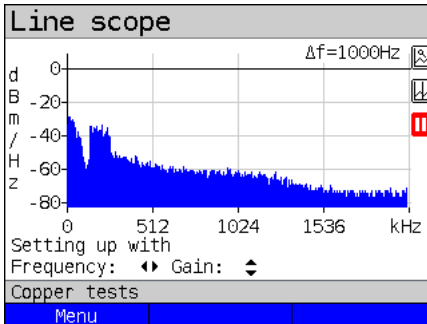
Measuring range (4):

When the line scope starts, it is in the measuring range in the status display. You can set the frequency range (x) and the gain (y) in the measuring range. If you have hidden the measuring range in order to work with the cursor or zoom, you can restore it:

<Menu>

or  Restores measuring range.

Total power (5):

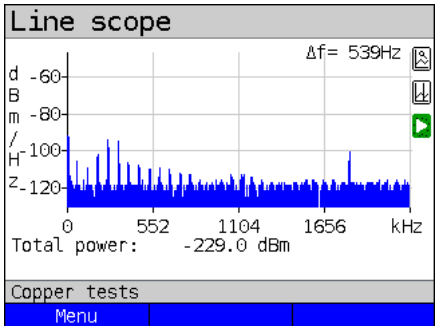


ARGUS displays the total power. The total power is the sum of all individual power measurements (Δf) over the entire visible range, in this example -299 dBm over 2.2 MHz.

<Menu>




Restores total power display

Probe (7):

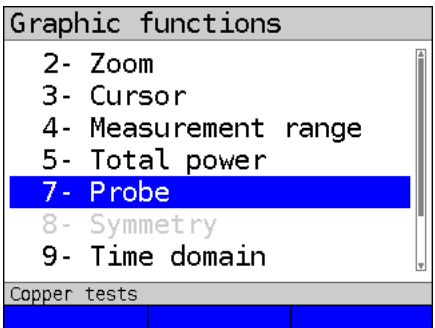

The line scope is high-ohm.
Input impedance: 2 k Ω
Input capacitance: 10 pF

However, even with the line scope you may also need to use a high-ohm probe (ARGUS Active Probe).

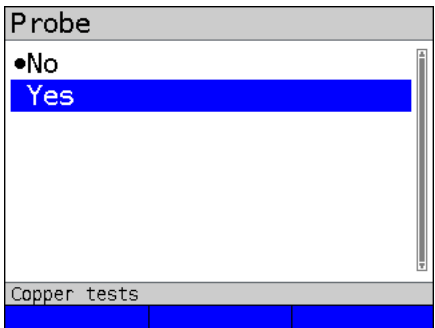


ARGUS Active Probe II:

Input impedance: 70 k Ω
Input capacitance: 1 pF
Functions: Symmetry/asymmetry toggling

After connecting the probe, you can switch it on using this menu.



To activate the probe, see page 245.

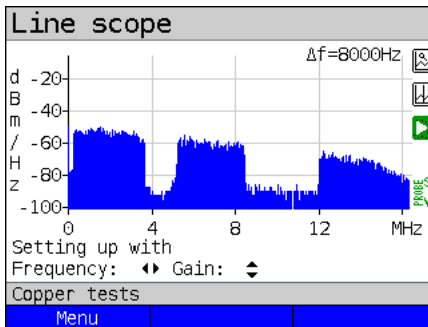
Symmetry (8):

Once the probe has been switched on and detected, you can switch between symmetric and asymmetric operation using Symmetry.

In asymmetric operation, the useful signal is hidden so that you see only noise and any interference sources (see example illustration).



Symmetry/asymmetry toggling

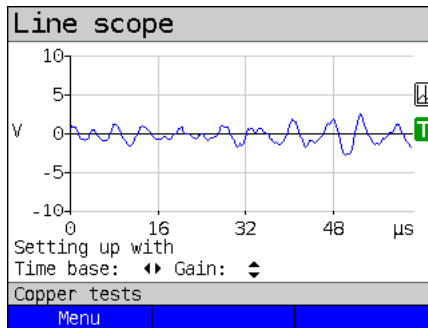Time domain (9):

<Menu>



Opens time domain

In the line scope, you can switch from the frequency range to the time domain. In this respect, the line scope operates like an oscilloscope that permits display of AC voltages from 0 to 40 V_{pp} with a resolution of 2 mV_{pp}.


This makes it easy to recognize different AC voltage signals, e.g. the square-wave signal of an E1 access.



The gain and time base can be set using the horizontal and vertical cursor keys analogous to the frequency range.



The cursor functions are also available in the time domain for analysing the signal. However, there is no zoom function.

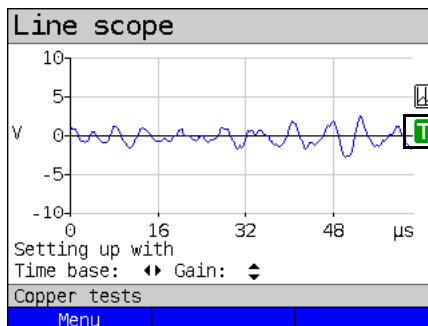



If ARGUS detects that the connected signal regularly exceeds a certain threshold, ARGUS tries to trigger automatically in response to this so as to optimally display the signal in the time domain.

The trigger symbol is green.

If no signal is present or the level is too low, the trigger symbol is red. ARGUS does not trigger.


Peak hold (min/max) (0):

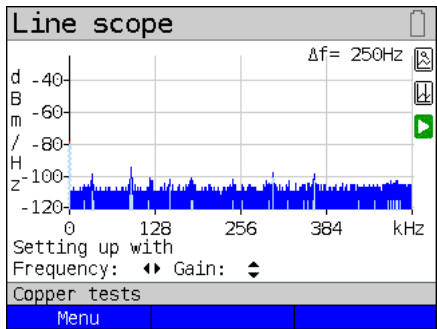



The peak-hold function can be additionally activated using the number key .

When the peak-hold function is used, positive (blue) and negative (yellow) peaks are shown graphically. The result is a blue curve of maxima and a yellow curve of minima over time. The instantaneous values continue to be displayed in red. In the maximum values in particular, sporadic fliers (interference pulses) are visible and permit comparison between different lines (e.g. particularly clearly with the aid of a suitable clip-on ammeter).

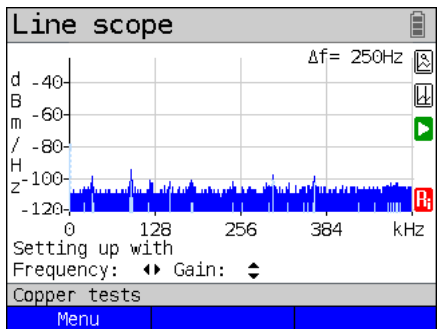
100 Ohm Input resistance (#):



Particularly when using a suitable clip-on ammeter, it may be necessary to adjust the input resistance of the line monitor (input impedance, see page 238). The red symbol  indicates that the line monitor is operating with an input resistance of 100 Ω .


 A suitable clip-on ammeter is available as an accessory for ARGUS; please ask our Support team.

Reference curve (*0):

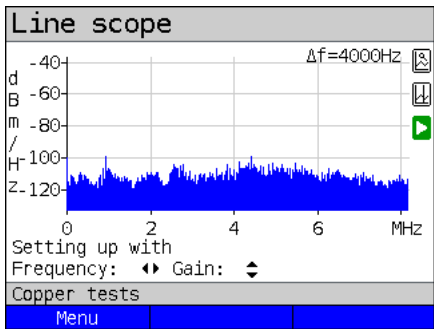


The reference curve enables e.g. comparison of the signal from one line with that from another.
To do this, start the line scope and connect it to line a. After obtaining the desired reference signal by setting the measuring range in the display, set the curve. Now switch to line b without closing the line monitor and compare the two signals.

<Menu> OR and Restores reference curve function.

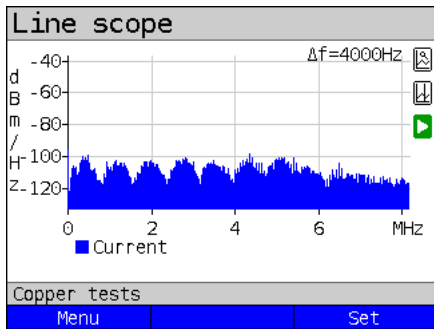


<Set> Set reference curve.

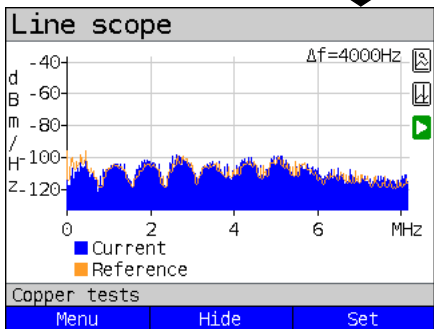



When the reference curve is set, an orange line is displayed in the graph.


<Hide> Hide reference curve.
<Set> Set a new reference curve.

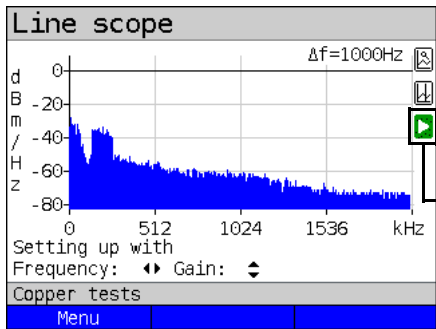

Run/Hold



You can stop and restart a running test (realtime mode) at any time.

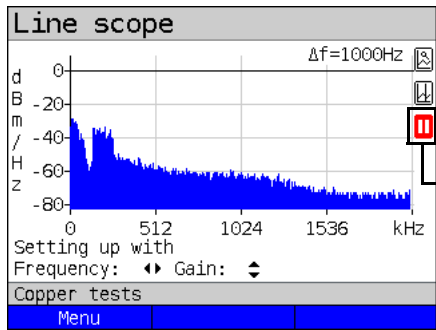
-  Test running
-  Stop test



-  Test is stopped
-  Restart test

Clipping:

Frequency range:

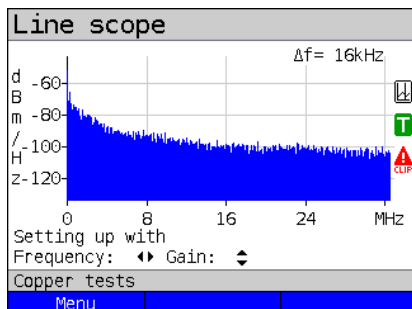


If the signal at the line scope input is too strong or the gain in the frequency range and time domain are displayed as too large, the input stage of the line scope is over-driven.

In this case, ARGUS displays the clipping

symbol .

Time domain:

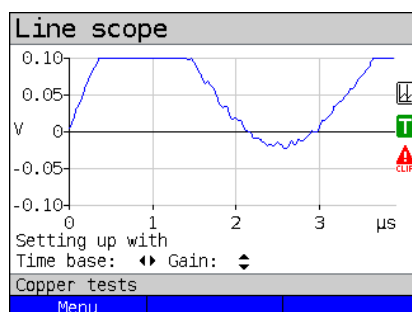

The displayed signal is clipped both in the frequency range and the time domain. You can remedy this by reducing the gain.

Saving test results without terminating the line scope

You can save your results of the measurement without disconnecting in the same way as for VDSL, see page 72.



See page 294 for the meanings of all symbols used in the line scope.

20.2 Active Probe

The ARGUS Active Probe is an active, high-impedance probe that can be passively patched into an existing connection without interfering with it.




In spite of the high impedance probe, it can cause transient losses of existing connections when it is patched in.

The ARGUS Active Probe II is designed to be used with the ARGUS line scope. The high-ohm line scope (input impedance $2\text{ k}\Omega$) can also be used without the ARGUS Active Probe II (see page 236).

20.2.1 Active Probe II

The ARGUS Active Probe II has the following technical specifications:

- Input impedance: $70\text{ k}\Omega$
- Input capacitance: 1 pF
- Frequency range: 10 kHz to 30 MHz ($\pm 1.5\text{ dB}$)
- Attenuation, symmetrical 14.5 dB
- $2 \times 4\text{ mm}$ banana plug sockets (spacing 12 mm)
- Data transmission to ARGUS via RJ45 lead (pins 4/5)
- Supply voltage: 5 V via ARGUS USB-host interface and USB cable

The Active Probe II can be operated in both symmetric and asymmetric mode. You can switch between these two operating modes using the hotkey  or via the menu. See page 239, line scope for an application example.


The Active Probe II:



20.2.2 Connecting the Active Probe II


Connect ARGUS to the Active Probe II via the Line socket and the USB-A interface (host). ARGUS supplies the Active Probe with a voltage of 5 V via the USB host interface. Connect the Active Probe to the line to be tested (in this example Active Probe II between modem and DSLAM) using a lead that is as short as possible (< 5 cm).


Connection example:

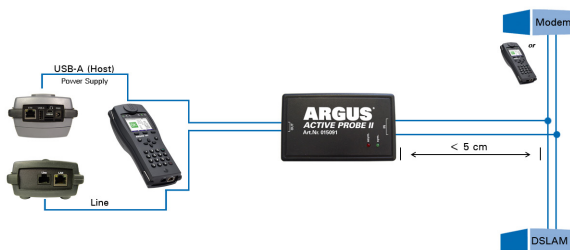




The connection cable and adapter supplied with the device have been designed to be as short as possible. The Active Probe II should be operated using leads that are as short as possible. To obtain optimum measurement results, it is important for the Active Probe to be connected in direct proximity to the line to be tested. Every extension of these connecting leads increases the input capacitance of the Active Probe, which can falsify the measurement results. Even the positions of the two leads in relation to each other can falsify the results as the lengths increase. When the Active Probe is used as supplied, ARGUS automatically subtracts the additional attenuation from the measurement results.

20.2.3 Starting Active Probe II (example with line scope)

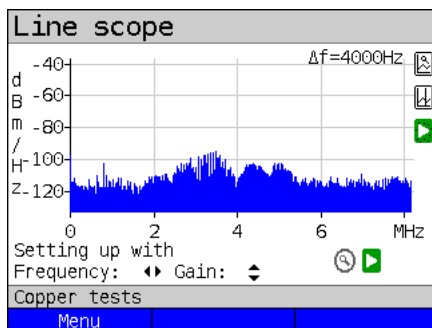

After starting a test (in this example with Line scope), you can open the Probe menu using the graph functions or the number key .

Continued on
next page

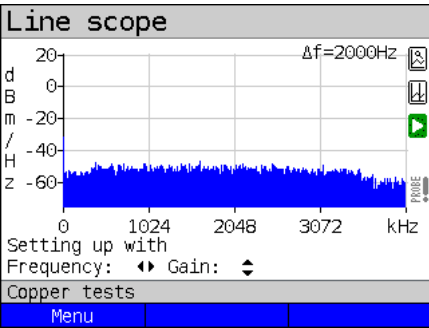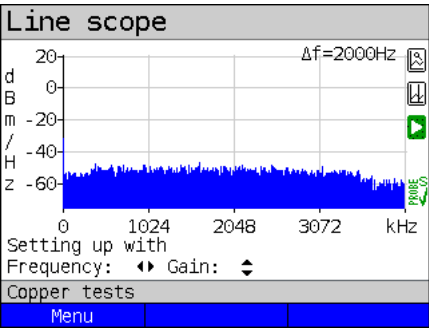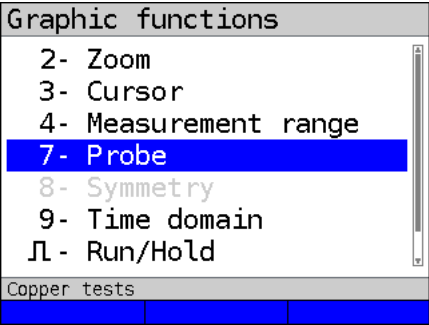

Opens the Probe menu directly.

Select "yes" to use the probe. ARGUS then switches on the supply voltage to the USB-A interface and automatically subtracts the additional damping caused by the Active Probe from the measuring results.


When the Active Probe is active and properly supplied from ARGUS, the green LED on the probe lights up.




Activation of the probe can take up to 10 seconds.


A green tick mark in the lower right of the display indicates during a test that the Active Probe is connected correctly.


If the Active Probe is not connected correctly and thus not detected by ARGUS or intentionally deactivated via the Probe menu, ARGUS displays an exclamation point in the lower right of the display.

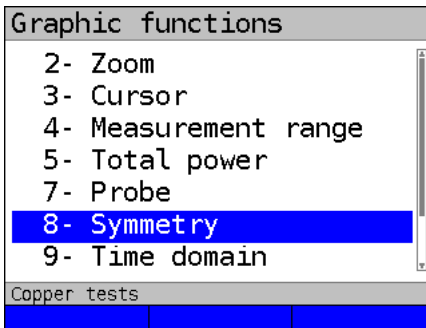Toggling symmetry/asymmetry:

See the Line scope description on page 239 for an example for toggling symmetry/asymmetry.

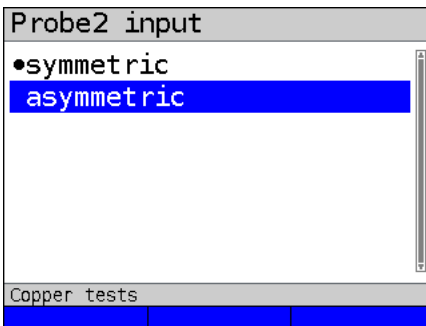

Once the test is started and Active Probe II activated, you can toggle the probe input between symmetric and asymmetric operation using the number key .

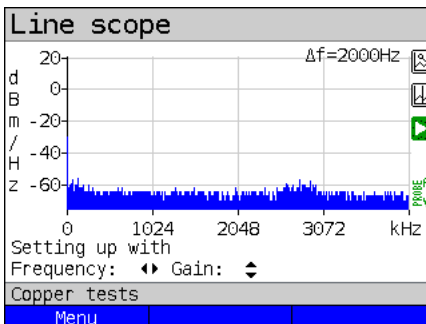

When switched to asymmetric mode, ARGUS displays possible interference sources and the line noise. The usable signal is hidden.

Saving test results without terminating the Line scope

You can save your results of the measurement without disconnecting in the same way as for VDSL, see page 72.

20.3 TDR

The TDR function enables you to determine line lengths in realtime or localise interference sources. Correct interpretation of the pulses displayed by ARGUS permits e.g. detection of stub lines, poor contacts or short-circuits. For this purpose, ARGUS transmits a pulse on the connected line and displays its reflection response.



The line may not carry a DC voltage greater than 200 V DC and must be free of AC voltage components.



The result of a TDR measurement in the ARGUS display may give the impression of multiple interference sources on the line. It is recommended that you eliminate the first interference source on the line and then repeat your measurement. It is possible that the first interference source caused one or more reflections, which can greatly falsify the reflection at the second interference source. Often, there is no second interference source on the line.



ARGUS generates a reflection at approx. 3 m. To precisely measure short lines and avoid this reflection, using e.g. a 5 m long connection lead is recommended. The pulse continues to be displayed in the graph but using the cable ensures that this is not on the line.

20.3.1 TDR settings

The chapter "Configuring accesses", page 28, explains how to set up the access type "Copper tests".

20.3.2 Wire types

Wire types/VoP

•PE 0.5 AWG24

PP 0.5 AWG24

Pulp 0.4 AWG26

Pulp 0.5 AWG24

Pulp 0.6 AWG22

PIC 0.4 AWG26

PIC 0.5 AWG24

Copper tests

Edit



Selects the wire types to be configured.

<Edit> Edits the wire-type parameters.

Wire type param.

Speed of propagation

Line resistance

Capacitance


Name

Copper tests



Setting	Description
Wire type/VoP	
Propagation speed	<p>To determine the distance, the calculation must take into account a correction value dependent on the wire type that specifies the ratio of the pulse propagation speed in the cable to the speed of light in a vacuum ($c_0 = 299.792458 \text{ m}/\mu\text{s}$).</p> <p>For many cable types, the pulse time is also specified in V/2.</p> <p>Minimum: $45.0 \text{ m}/\mu\text{s}$ (VoP in %: 30)</p> <p>Maximum: $149.7 \text{ m}/\mu\text{s}$ (VoP in %: 99.9)</p> <p>Default: $98.9 \text{ m}/\mu\text{s}$ (VoP in %: 66)</p> <p>The choice of propagation speed as VoP or V/2 is saved.</p>
Line resistance	<p>Sets the line resistance per kilometer.</p> <p>Range: $40 \text{ }\Omega/\text{km}$ to $400 \text{ }\Omega/\text{km}$</p> <p>Default: $80 \text{ }\Omega/\text{km}$</p>

Capacitance	Sets the capacitance (operating (mutual) capacitance) per kilometer. Range: 35 nF/km to 100 nF/km Default: 39 nF/km
Name	Enter the name of the wire type. Default: PE 0.5 AWG24

The default values only apply for this first cable type.


List of preconfigured default wire types:

No.	Name	Wire diameter (mm)	Line resistance (Ohm/km)	Mutual capacitance (nf/km)	VoP (%)	Note
1	PE 0.5 AWG24	0.5	80	39	66.0	Outdoor cable, Polyethylene, air filled
2	PP 0.5 AWG24	0.5	80	39	66.0	Outdoor cable, Polypropylene, air filled
3	Pulp 0.4 AWG26	0.4	150	36	60.0	Outdoor cable, conductor with pulp jacket, air filled
4	Pulp 0.5 AWG24	0.5	80	39	67.0	Outdoor cable, conductor with pulp jacket, air filled
5	Pulp 0.6 AWG22	0.6	65	38	68.0	Outdoor cable, conductor with pulp jacket, air filled
6	PIC 0.4 AWG26	0.4	150	36	64.0	Outdoor cable, conductor with plastic jacket, air filled
7	PIC 0.5 AWG24	0.5	80	39	66.0	Outdoor cable, conductor with plastic jacket, air filled
8	PIC 0.6 AWG22	0.6	65	38	67.0	Outdoor cable, conductor with plastic jacket, air filled
9	PIC 0.9 AWG19	0.9	29	34	72.0	Outdoor cable, conductor with plastic jacket, air filled
10	Jelly 0.9 AWG19	0.9	29	34	68.0	Outdoor cable, petroleum/jelly filled cable
11	Filled 0.4 AWG26	0.4	150	36	58.0	Outdoor cable, filled

No.	Name	Wire diameter (mm)	Line resistance (Ohm/km)	Mutual capacitance (nf/km)	VoP (%)	Note
12	Filled 0.5 AWG24	0.5	80	39	60.0	Outdoor cable, filled
13	Filled 0.6 AWG22	0.6	65	38	62.0	Outdoor cable, filled
14	PTFE/Teflon 0.5 AWG24	0.5	80	39	67.0	Outdoor cable, conductor with teflon jacket
15	Wire type 15	-	80	49	66.7	default, editable
16	Wire type 16	-	80	49	66.7	default, editable
17	Wire type 17	-	80	49	66.7	default, editable
18	Wire type 18	-	80	49	66.7	default, editable
19	Wire type 19	-	80	49	66.7	default, editable
20	Wire type 20	-	80	49	66.7	default, editable

20.3.3 Starting TDR

The chapter "Configuring accesses", page 28, explains how to set up the connection type "Copper tests".

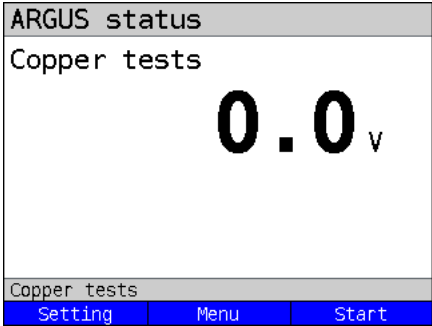

ARGUS status display.
ARGUS indicates any DC voltage on the line.

- <Setting> Switches to the settings for the wire-type list, see page 249.
- <Menu> Switches to main menu.
- <Start> Directly accesses "Single tests" menu.




Select and start TDR.

Continued on
next page



TDR status display:

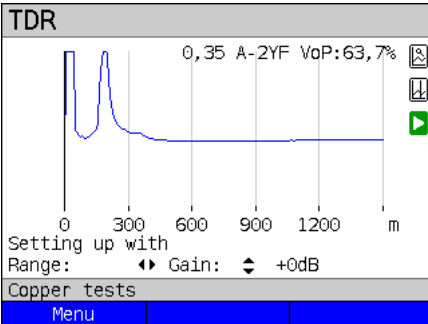


ARGUS displays possible interference sources on the copper twisted pair directly.

In this example, after the input pulse (starting at 0 meters) we can see a second pulse that spikes at approx. 150 m. This can indicate a 150 m long line that is open at its end.

The adjustable range, the gain and the graph functions permit more detailed analysis.

Gain:

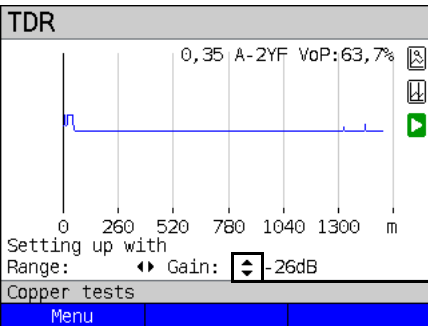


To ensure optimum detection of pulse reflections, match the function for adjusting the gain (y-axis) with the reduction/enlargement of the range shown (x-axis). ARGUS always starts with the lowest gain (-26 dB) at a range of 1500 meters.



Gain-Y: Sets the gain from -26 dB, -20 dB, 0 dB, +14 dB +24 dB, +34 dB, +44 dB

Range:

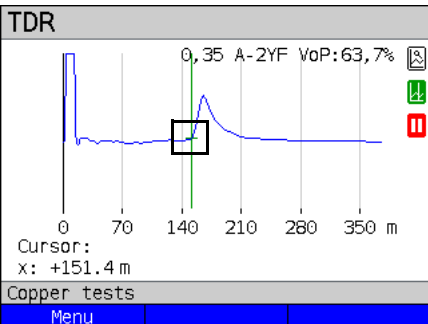

The measurements with the TDR can take place in a measuring range from 3.5 to 6000 meters. The resolution is approx. 0.3 % of the displayed measuring range.




The accuracy is approx. ± 2 % of the measuring range. When determining the distance, try to determine the start of a pulse where possible, and not the relative maximum.




Range-X: Sets the displayed measuring range. Every press of the cursor key halves or doubles the displayed range.


20.3.4 Graph functions

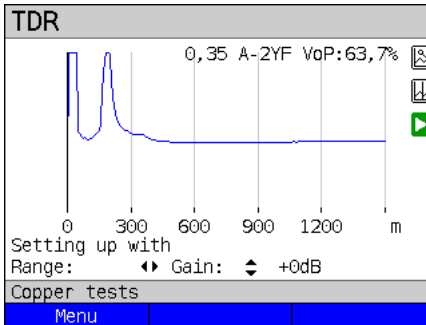

The graphic functions Zoom and Cursor enable detailed analyses of the graphs.

<Menu> Opens graph functions

Press  in the status display (in the graph) to save the results and stop the TDR function.

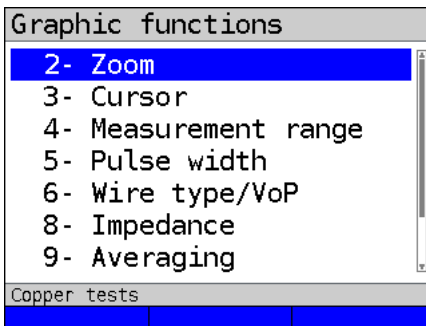

The Graph functions menu opens.



Exits the menu without changing.



You can also use this number key to activate the Zoom function within a graph.




The function of the cursor is described on page 254.



Accepts the selection and returns to the graph.

Zoom (2):

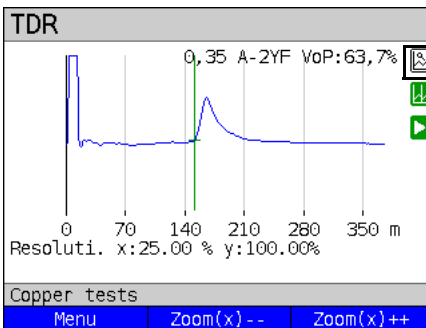

The magnifying glass shown in the display rests on a white background.

It has not yet been zoomed.


When the magnifier is placed over a dark background, the graph is zoomed.

<Zoom(x)++> Enlarges the middle section of the graph (100 %).

<Zoom(x)--> Not yet zoomed! Reverses **<Zoom(x)++>** and resets magnification.


When zooming, the y-axis always remains at 100 %. No y-axis zoom is available.

Continued on
next page

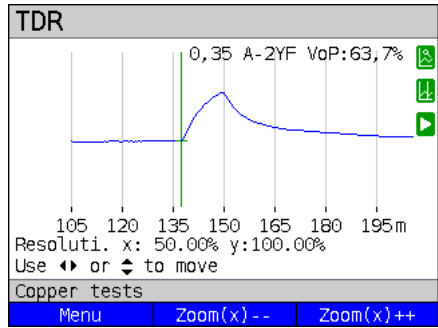

You can vary the graph size from 25 % to 100 % using the zoom softkeys. This doubles or halves the resolution. When concurrently using the cursor, you can precisely localise the reflection on the measured line.

Cursor (3):

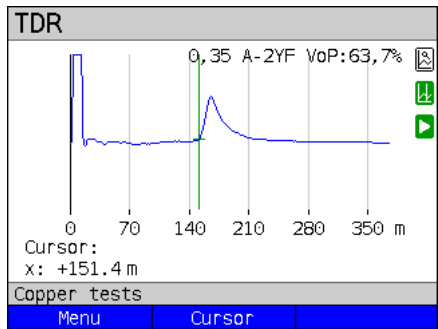


When the Cursor function is started, a green cursor line appears in the middle of the graph.

<Cursor> You can toggle the cursor on and off as needed using the Cursor softkey after activating it in the menu.

The values of the graph for the position under the cursor are displayed below the graph:


x: +151.4 m

 When the Stop function (see page 257) is activated, you can move the cursor faster.



Use the left and right cursor keys to move the cursor to any position on the graph to measure it. Briefly pressing the cursor key causes the cursor to jump to a new position in the graph. When the cursor key is held down, the steps the cursor covers in the graph become progressively larger.

The Zoom function and the Cursor function can also be combined. For example, you can determine a certain value using the cursor more easily when you have previously zoomed in on a specific area. However, the starting position of the cursor can vary.

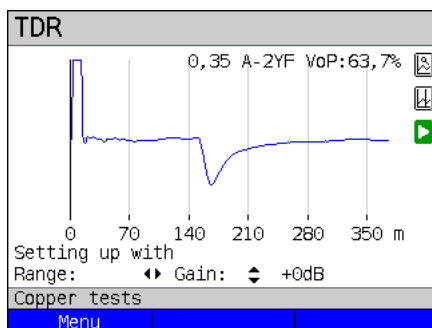
Measuring range (4):

When the TDR function starts, it is in the measuring range in the status display. You can set the range (x) and the gain (y) in the measuring range. If you have hidden the measuring range in order to work with the cursor or zoom, you can restore it:

<Menu>



Restores the measuring range

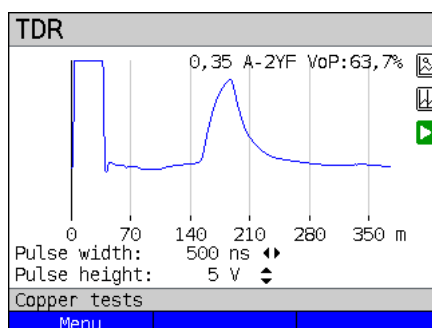Pulse width/height (5):

You can configure the width and height of the pulse that ARGUS outputs to the line.



Configuring the pulse

Height:

The pulse height sets the level of the pulse ARGUS outputs to the line in volts. The default value is **5 V**, but can be increased to 20 V. In principle, it is recommended that you increase the pulse height as the distance increases.

On short, very noisy lines as well, increasing the pulse can make the reflection stand out better against the noise, for a more reliable interpretation.

Width:


The pulse width sets the duration of the pulse ARGUS outputs to the line in nanoseconds (ns). The default value is **500 ns**, but you can increase this up to 2000 ns (2 μ s) depending on the measuring range. Just like a more powerful pulse, a longer pulse contains more energy, and thus is generally more suitable for use on longer lines. However, a longer pulse can also conceal important reflections, which can then no longer be correctly interpreted.

Wire types (6):


The absolute VoP value must always be less than 1. However, ARGUS always displays this in percent. In a wire with a VoP value of 0.7, a signal propagates at 70 % of the speed of light (c_0).

For many cable types, the pulse time is also specified in V/2: $V/2 = VoP [\%] * 1.5$. In this example, the V/2 value would come to 95.5 m/μs for a VoP of 0.637 resp. 63.7 %.

A typical patch cable has e.g. a VoP of 0.667 resp. 66.7 %, which corresponds to a V/2 of exactly 100 m/μs.


 To measure e.g. building wiring precisely, it is important to set the correct VoP value. You can determine the correct VoP using a reference cable of known length before the measurement.

Reference curve (*0):

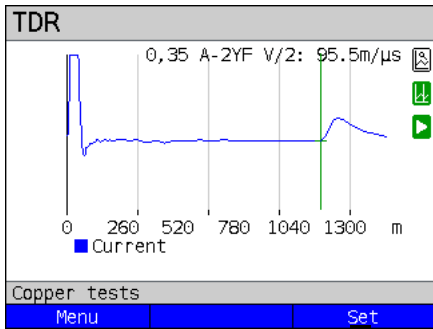


See also the instructions on page 241 on using the reference curve.

In this example, the line is open at 143.3 m (reference value).

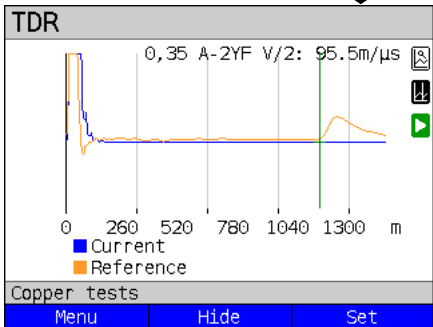

When the reference curve is set, an orange line is displayed in the graph. In this example, the line is terminated.

- <Hide> Hide reference curve.
- <Set> Set a new reference curve.

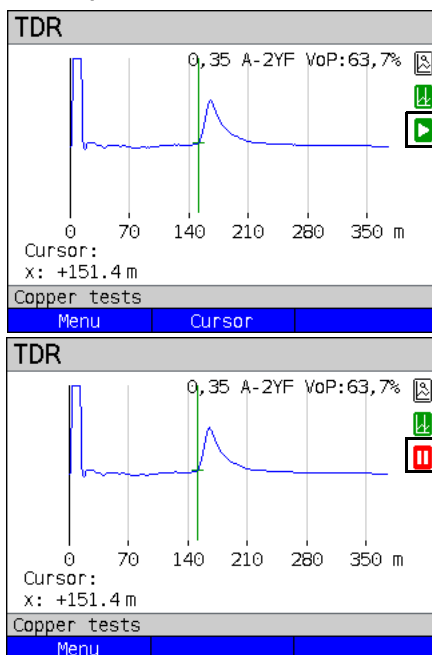Start/stop:

You can stop and restart a running test (realtime mode) at any time.



Test running



Stop test



Test is stopped



Restart test

Saving test results without terminating the TDR

You can save your results of the measurement without disconnecting in the same way as for VDSL, see page 72.




See page 294 for the meanings of all symbols used in the TDR.

20.3.5 Examples


The following signal forms can help you in interpreting the reflection responses that ARGUS displays.

Examples:

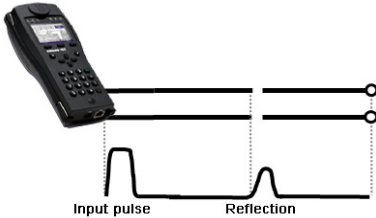


Open cable

The reflected pulse is positive. No proximate interference sources or the far end of the line can be seen.

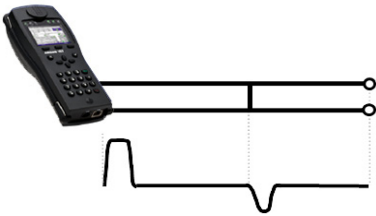


Short-circuit

The reflected pulse is negative. No proximate interference sources or the far end of the line can be seen.

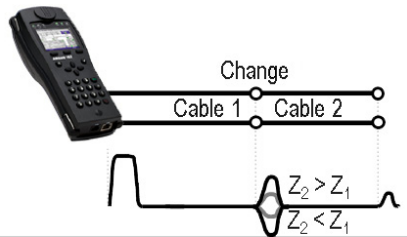


Mismatch

Different line cross-sections were used. The greater the mismatch, the greater the amplitude of the reflection.

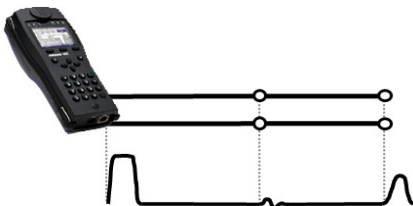


Poor contact point

A poor contact between two lines distorts the reflection into an S-shape. The worse the contact, the greater the reflection.

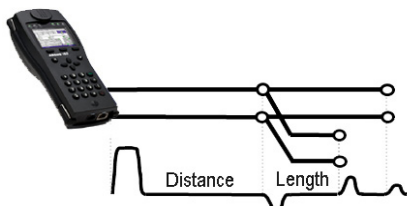


Stub line

The beginning of a stub line appears in the form of a negative reflection, followed by a positive reflection corresponding to the length of the stub line when the end of the stub line is open.

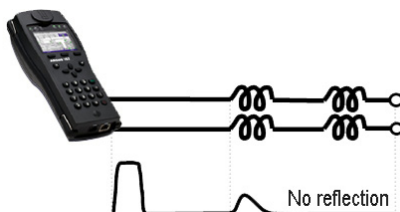


Loading coils

Loading coils deployed on the line are optimally designed for transmitting voice frequencies. They do not let DSL signals through. The TDR function enables you to detect the first coil in a line. The reflection is positive with a long tail in the direction of the end of the line. The following faults cannot be detected.

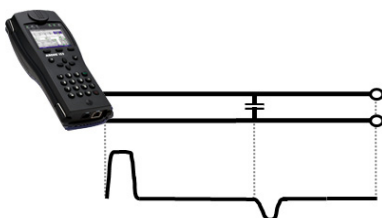


Capacitive network

Like a short-circuit, the reflection from a capacitive network is negative.

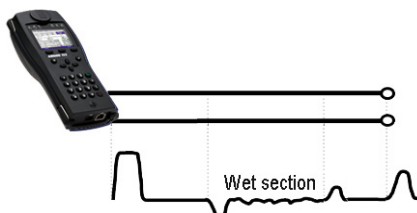


Moisture

Moisture penetrating the cable has the same effect on the reflection as a stub line. However, the zone between the negative and positive reflection appears significantly noisier than for a normal stub line.

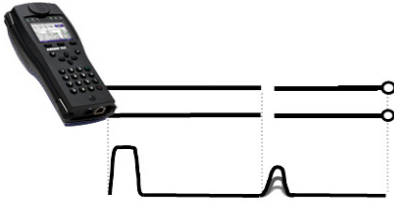


Loose/intermittent contact

Realtime operation is extremely suitable for detecting intermittent contacts. The amplitude of the positive reflections varies depending on the intermittent contact frequency.

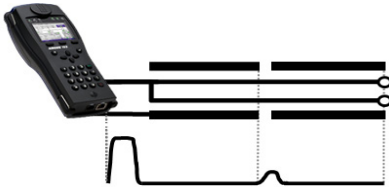

Open shielding

Broken or open cable shielding can be detected by connecting the "a" and "b" cores to ARGUS via one contact and the shielding to a second. The reflection looks like an open line.

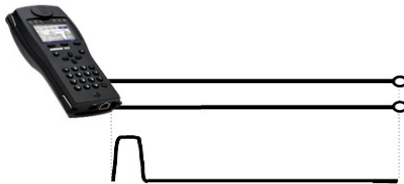

Correct line termination

When the line is properly and correctly terminated, the pulse generated by ARGUS is completely absorbed. No further reflections are visible.

21 Ethernet cable tests




For performing the following tests, the line must be voltage-free.

21.1 Configuring the Ethernet interface

Connect the local loop to the ARGUS socket "LAN" and switch on ARGUS. The chapter "Configuring the local loop", page 28, explains how to set up the connection type "Ethernet Cable Test".

Status screen

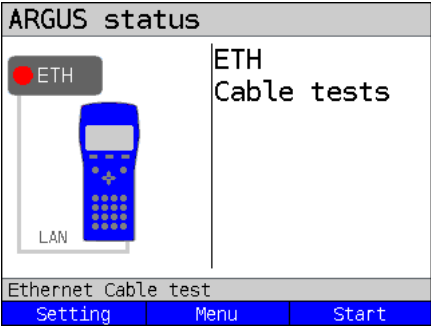


**Test not yet started:
red LED in display!**



Meaning of LED image in display:
Red LED: no test started

- <Setting> Opens the Ethernet cable test setup, see below.
- <Menu> Switches to main menu.
- <Start> Starts the Ethernet cable test, see below.

21.2 Ethernet cable test settings

 You can configure the following "Ethernet parameters". You can restore the default settings at any time (see page 298). The following example is used to illustrate how to modify a parameter.

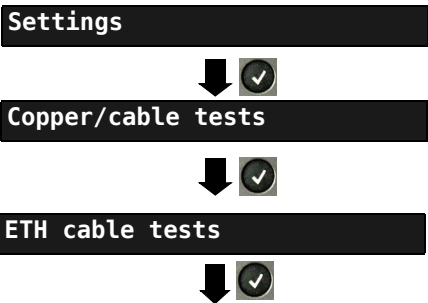

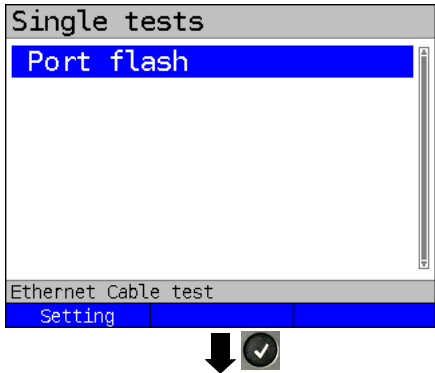

Select Port flash.


ETH port flash

Interval that ARGUS keeps the port active before performing a link disconnect. The disconnect time depends on the switch.
Range: 1 - 5 seconds
Default: **1 s**

21.3 Ethernet port flash


ARGUS can identify the port currently in use on the Ethernet switch using the test "Ethernet port flash". To facilitate identification, the flash frequency at the switch can be set in ARGUS.

21.3.1 Starting Ethernet port flash

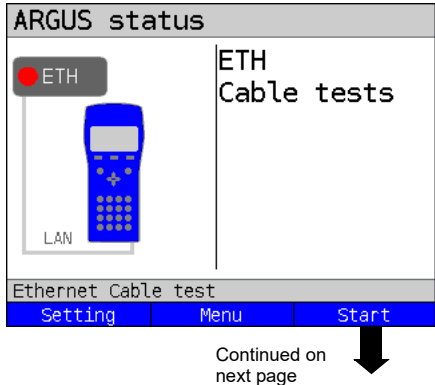


ARGUS in the status line.


- <Setting> Opens the Ethernet cable test settings, see page 261.
- <Menu> Opens the main menu.
- <Start> Starts Ethernet cable test.

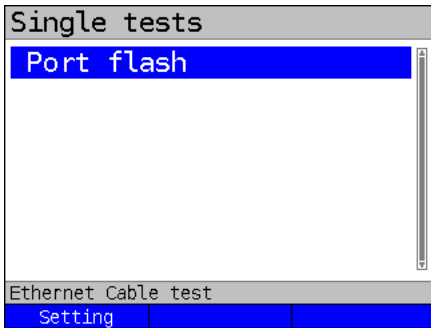

Start port flash directly by selecting it.

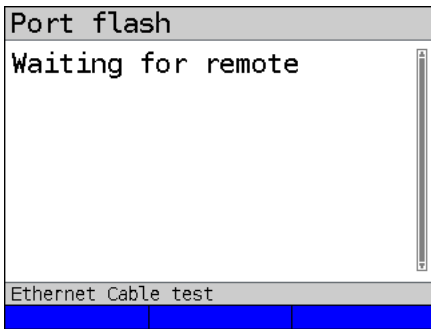

The Ethernet port flash test is executed.

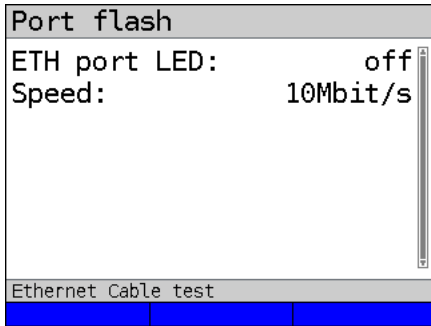

The test "ETH port flash" has been executed.

Display:

- Indication whether the port LED is flashing (in example "off").
- Link speed attained.

22 Test results


The saved test data are displayed either in the ARGUS display or on the PC. You can transfer the results to the PC, where the software WINplus generates a detailed measurement log (along with other functions).

ARGUS stores the test results together in 50 definable save slots. The system suggests "New result" as the default save name. The saved test results are also deleted when all configuration settings are reset.


The functions ("View", "Rename", "Send to PC", "Delete") in the Test results menu refer to one test result. You must thus first select a save slot with a test result:



ARGUS in Main Menu

When ARGUS is in the selection list for preconfigured accesses, you can switch to the abbreviated main menu with .


ARGUS displays the name of the stored result and the number of occupied slots.

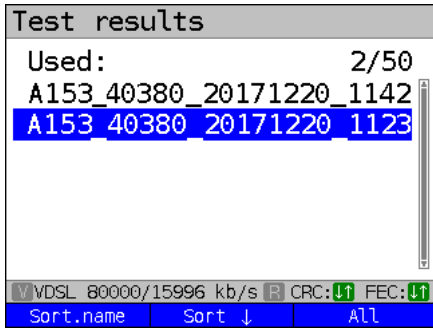

When multiple test results are saved, ARGUS lets you sort them by name and time (as in this example). You can also sort them manually.

- <Sort time> Sorts test results by time.
- <Sort ↑> The marked test result is moved up one place in the list.
- <Sort ↓> The marked test result is moved down one place in the list.
- <All> Deletes all test results or send to PC.

22.1 Saving test results

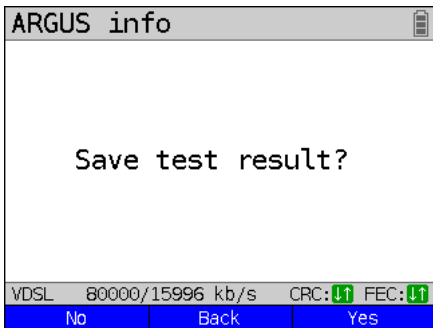

You can save the result after the end of a test or after disconnecting a connection.





ARGUS saves the test result in the first free slot. If all slots are occupied, you need to manually select a slot to overwrite.

ARGUS automatically proposes a save name. The name is composed of:

- the device type (in this example A153)
- the serial number (in this example 40380)
- the configured date (in this example 20th december 2017)
- the adjusted time (in this example 11:23 h)




You can accept the displayed save name or enter a new one using the number keys. The right softkey changes its meaning when pressed, affecting your entry. You can enter up to 24 characters. ARGUS displays the number of characters used so far.


- | | |
|---|---|
| <Last name> | ARGUS suggests the last save name used. |
| <Ab>AB> | Entry begins with upper-case letters and continues in lower-case. |
| <AB>12> | Entry of upper-case letters. |
| <12>ab> | Numerical entry. |
| <ab>AB> | Entry of lower-case letters. |
|  | Entry of special characters, e.g. @, /, -, ., *, ?, %, =, &, ! etc. |
|  | Entry of special characters e.g. _, :, +, # etc. |
| <Delete> | Deletes the place in front of the cursor. |
|  | Moves cursor |
|  | Don't save result, return to previous display. |

Save result

22.2 Displaying saved test results

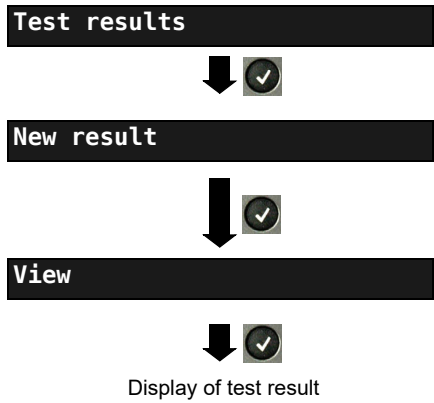

ARGUS in Main Menu


When ARGUS is in the selection list for preconfigured accesses, you can switch to the abbreviated main menu with .




Select a save slot (in this example selection of the first slot with the save name "New result").

22.3 Sending test results to a PC

You can send the test results to a PC for viewing and archiving. Connect ARGUS (ARGUS socket "USB-B") to the interface of your PC using the cable supplied with the device and start the software WINplus.

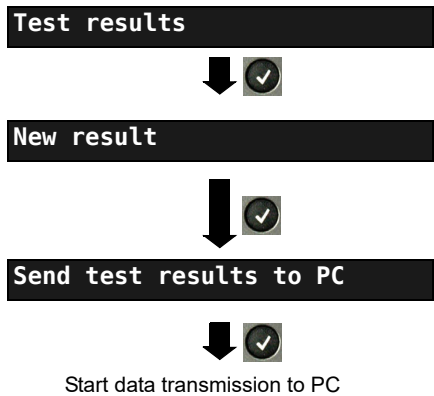

ARGUS in Main Menu

When ARGUS is in the selection list for preconfigured accesses, you can switch to the abbreviated main menu with .




Select a save slot (in this example selection of the first slot with the save name "New result"). All test results are transmitted.


22.4 Delete test results



The test result is deleted.

ARGUS in Main Menu

When ARGUS is in the selection list for preconfigured accesses, you can switch to the abbreviated main menu with .


 Select a save slot (in this example selection of the first slot with the save name "New result").

Deletes the test result stored in the selected slot.

To deletes all test results, see on page 289 "Restoring the factory settings".


22.5 Sending all test results to PC


ARGUS transfers all saved test results to the connected PC. Connect ARGUS to the PC and start ARGUS WINplus.

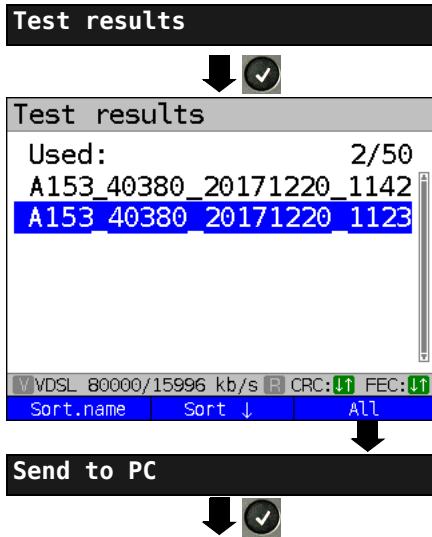

Start data transmission to PC

ARGUS in Main Menu


When ARGUS is in the selection list for preconfigured accesses, you can switch to the abbreviated main menu with .

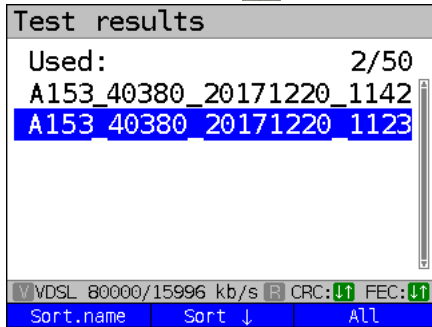


22.6 Deleting all test results

ARGUS deletes all saved test results from its internal memory.

ARGUS in Main Menu

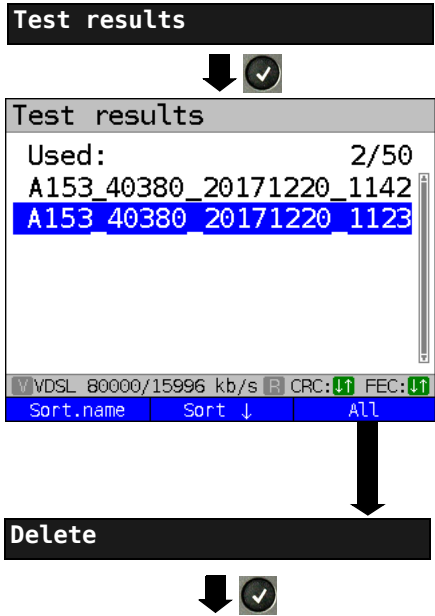

When ARGUS is in the selection list for preconfigured accesses, you can switch to the abbreviated main menu with .

Confirm the security prompt with <yes>; all 50 possible test results are deleted.

23 WLAN

ARGUS can be WLAN-enabled using a USB WLAN stick. ARGUS then offers WLAN as the management interface for an array of functions. ARGUS supports a variety of approved WLAN sticks, which are available as accessories. Please ask our Support team.




You only need the WLAN kit (or the ARGUS USB mini-hub) if your ARGUS only has one USB host interface and you wish to connect two USB devices (e.g. WLAN + ARGUS Copper Box).



Always insert your USB devices in the hub first before you power up ARGUS.


23.1 Starting WLAN

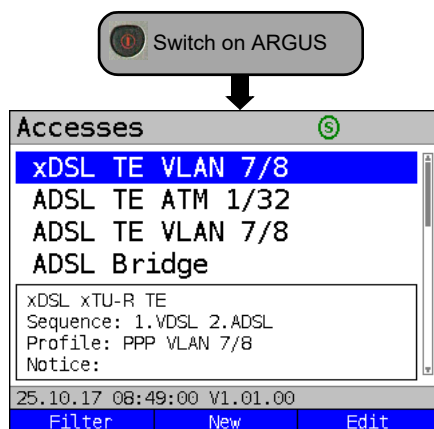

Access list or any point in the menu.



press shortly

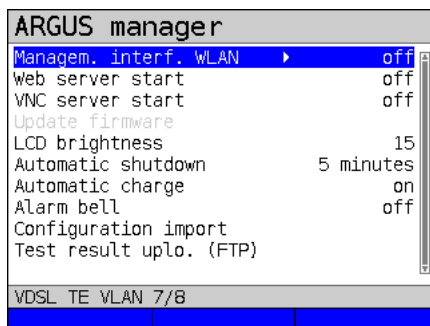



ARGUS manager display

- M-interface ETH / WLAN, see page 282
- Web server start, see page 284
- VNC server start, see page 284
- Update firmware, see page 275
- LCD brightness, see page 285
- Automatic shutdown, see page 286
- Auto. charge, see page 293
- Alarm bell, see page 286
- Configuration import, see page 277
- Test result upload (FTP), see page 280



right

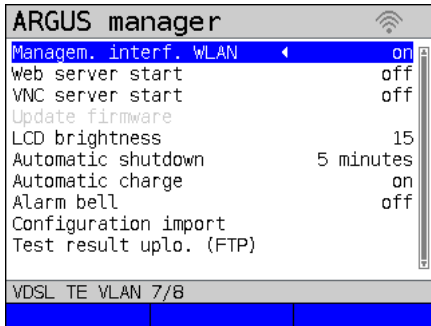

You can activate/deactivate or change settings using the cursor key .


The WLAN interface is now activated.

See page 282 for WLAN settings such as SSID, password, channel, etc.



Either ETH or WLAN can be selected as the management interface; the default setting is WLAN. You can change this under "Device settings/Management interface/Interface" (see page 282). This is only possible when the management interface is grayed out under "Start/Management interface"; if WLAN or Interface is grayed out, switch off the management interface first.

The WLAN interface is now activated. ARGUS is now in access-point mode (ARGUS-AP).

The WLAN symbol in the status line is green .

You can set up a WLAN connection with ARGUS by selecting the WLAN access with the name Argus153_SerialNumber on a smart phone, tablet or laptop and entering the password stored in ARGUS.



Electronic job management applications can also access ARGUS and pick up measurements using WLAN.

23.2 Test results via WLAN

If for example a laptop has a working WLAN connection with ARGUS, you can open the Web server by entering the IP address of the ARGUS unit (see page 283) or myargus.info in your browser's address bar.



The test results with the name data.csv can be opened directly or saved on the laptop. You can also use this functionality to save, delete and rename measurement logs. For this, you require a WebDAV application/app on your PC/laptop or smart phone/tablet.



The .csv file contains the connection parameters of the last measurement conducted.

The command "VNC" lets you control ARGUS remotely via your browser.



You may first need to activate the VNC server on ARGUS, see page 284.



Further information regarding the VNC server is available on request.




The ARGUS Web server has its own SSL certificate (myargus.info), which permits https:// access.



You can also access ARGUS using WebDAV via myargus.info. By this means, you can download measurement logs in .amp format directly from ARGUS via Ethernet or WLAN.

23.3 WLAN in router mode

When the ARGUS WLAN interface is active, it is always connected directly with the ARGUS router. If you want to use ARGUS as a true WLAN access point (ARGUS-AP) and e.g. start a download with this device as the gateway, you must first start a DSL access (ADSL, VDSL, see page 48).

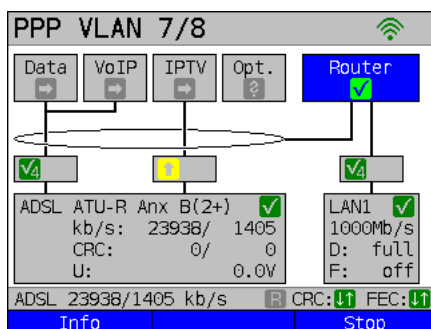

If the router (see diagram) has been started, both WLAN and LAN are connected to the ARGUS router.

The smartphone, tablet or laptop can use ARGUS as an access point. All applications such as data, VoIP or video that can be run e.g. on a smart phone can now be executed to test the connecting devices via ARGUS - thus replacing all customer devices.







WLAN and LAN are not linked via an Ethernet bridge. Each requires its own configuration. They may not be configured identically. A test from WLAN to LAN or vice-versa is not possible.


24 ARGUS settings


ARGUS can be custom-configured for special requirements. The default values are restored using "Reset" (see page 289).

24.1 Cloud services

ARGUS supports cloud services for communicating with its environment. These services enable ARGUS to share data with other systems via its test interface. ARGUS offers test interfaces for ADSL, VDSL, G.fast, Ethernet and LTE. When connected via these interfaces and with the data service running, ARGUS can download firmware updates, import a configuration and upload measurement logs.

-  The cloud services are deactivated by default.
-  At a minimum, the data service must be connected and successfully started via a VL using the corresponding test interface.
-  ARGUS always loads the country variant last used by that instrument.
-  The instrument only checks whether there is a different firmware on the server than the one it has loaded. Be aware of this if you have your own update server. Downgrades are possible, and can result in a loss of configuration data.

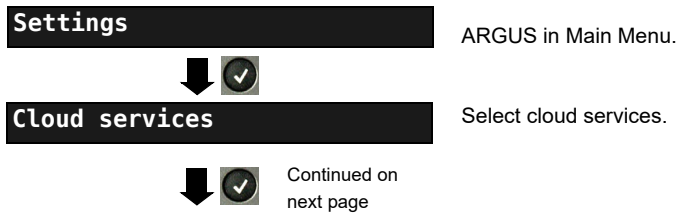

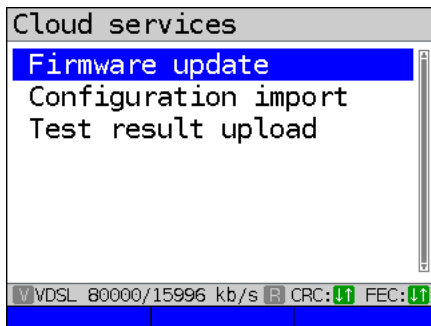

Select the cloud service to configure, e. g. Firmware update.



Settings	Description
Firmware update:	
Server	Configuration of the server, s. page 272.
Update check	Defines whether to automatically check for a firmware update. Default: off
Update	Starts the firmware update.
Configuration import:	
Server	Configuration of the server, s. page 274.
Check	Defines whether to check automatically for a new suitable configuration file. Default: off
Import destination	Determines whether the current settings or the current and saved settings are to be imported. Default: Cur. & backed up config.
Import	Starts the configuration import.
Test result upload, server configuration, see page 280	



Three server profiles are offered for server selection. All three profiles are identical, and differ only in their names:

- Server profile 1: Firmware
- Server profile 2: Configuration
- Server profile 3: Measurement log


You can also assign any name to the server profiles (Profile name) for your use, e.g. you can create two different profiles for importing configurations if measurement log uploading is not needed.



Only the server profile "Firmware" is preconfigured. When the server specified in this profile is used, ARGUS looks for a new firmware version on intec's server. The ARGUS instrument logs onto the server with its serial number and IP address.

24.1.1 Cloud services settings

Settings	Description		
Firmware	<Edit> Activates the server profile you wish to edit.		
	Server	FTP server address	Entry the FTP server address. Default: <i>firmware.argus.info</i>
		User name	Entry the user name. Default: <i>argus</i>
		Password	Entry the password. Default: <i>update</i>
		Profile name	Entry the profile name. Default: <i>Firmware</i>
	Update check	Defines whether to automatically check for a firmware update. Default: <i>off</i>	
Configuration	<Edit> Activates the server profile you wish to edit.		
	Server	FTP server address	Entry the FTP server address. Default: <i>*/*</i>
		User name	Entry the user name. Default: <i>*/*</i>
		Password	Entry the password. Default: <i>*/*</i>
		Profile name	Entry the profile name. Default: <i>Configuration</i>
	Check	Defines whether to automatically check for a new suitable configuration file. Default: <i>off</i>	
Test result	<Edit> Activates the server profile you wish to edit.		
	Server	FTP server address	Default Default: <i>*/*</i>
		User name	Entry the user name. Default: <i>*/*</i>
		Password	Entry the password. Default: <i>*/*</i>
		Profile name	Entry the profile name. Default: <i>Test result</i>




See page 294 for the meanings of all symbols used for cloud update.

24.1.2 Cloud Update

The cloud update process is explained in the following. In this example, VDSL VTU-R mode is configured and selected as described in chapter „5 Configuring accesses“ (see page 23). For details on configuring the firmware updates, see the chapter “Configuring ARGUS” on page 272.




Never under any circumstances import a configuration when ARGUS when is operating in battery mode. Connect ARGUS to the power adapter before importing a configuration.

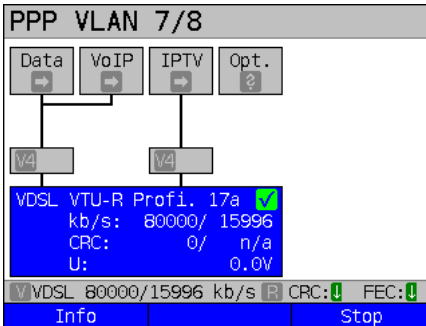


Starts the service.

 The profile shown in the display (in this example profile 17a) is used for the cloud update.



Switch to Data using the cursor keys Data and press <Start> to activate the service.

If no connection is established, ARGUS automatically connects at this point using the default profile, s. page 48.

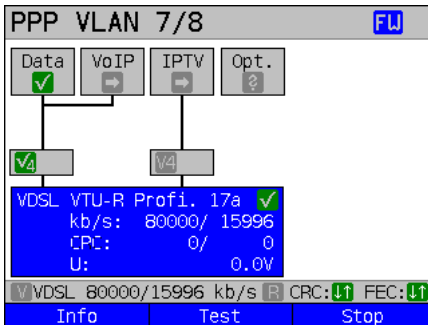

The service Data and the VDSL connection are active.

<Info> Duration of activation.

<Test> Opens test selection.

<Stop> Deactivates the service.

The blue “FW” in the status line indicates that a firmware update is available.



Continued on next page


Press one after another



and



Starts the firmware update

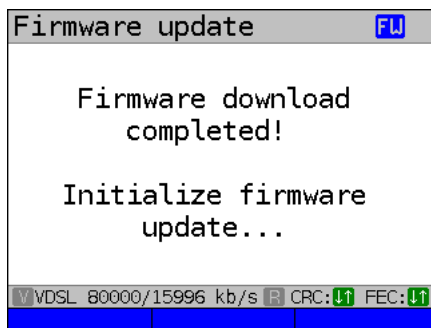

ARGUS automatically restarts after a successful firmware update.

24.1.3 Configuration import

24.1.3.1 Automatic configuration import

This function enables you to read out and adopt the ARGUS configuration file.





Never under any circumstances import a configuration when ARGUS when is operating in battery mode. Connect ARGUS to the power adapter before importing a configuration.

Settings



Backup/Restore

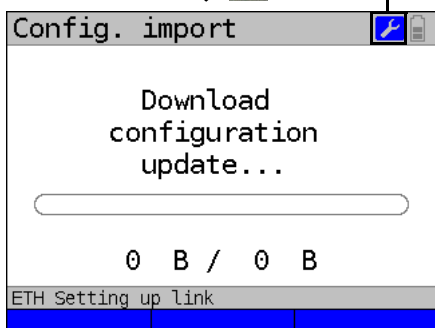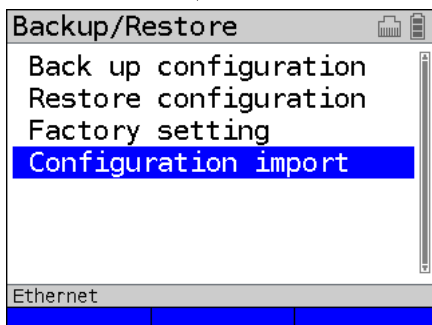

Prerequisites:

The instrument is connected to the interface (xDSL, G.fast, Ethernet or LTE).

The instrument must connect with the server, and a suitable configuration file for this instrument must be available. If this prerequisite is not met, you can only import a configuration manually.


If the configuration is not imported immediately, the instrument will display a corresponding message each time the instrument is powered up.

Select "Configuration import".



A new configuration is available.

The configuration file is downloaded.

Continued on
next page

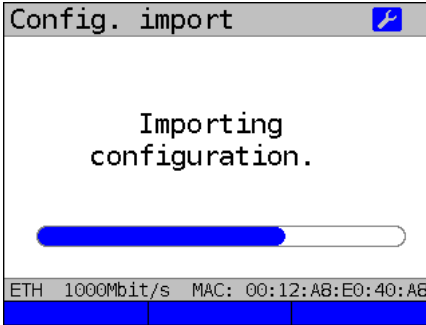

The configuration is imported.

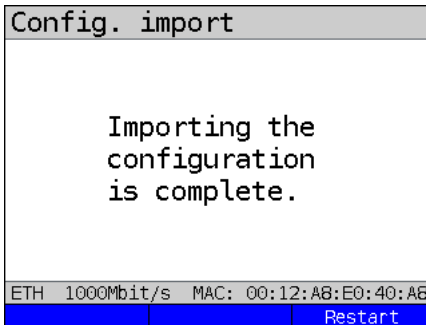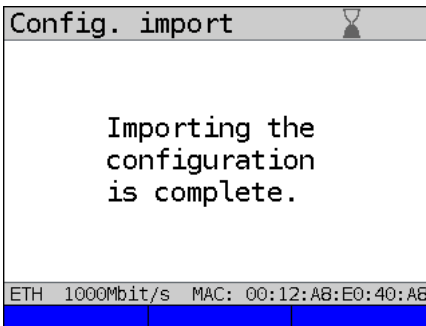

The instrument needs a few seconds before it can be restarted; this is indicated by an hourglass in the top right next to the battery indicator.

<Restart> Restart of the device.

Once the import is successfully completed, restart the device.

24.1.3.2 Manual configuration import

This function makes it possible to accept a configuration previously stored on the ARGUS instrument via WebDAV.



Never under any circumstances import a configuration when ARGUS is operating in battery mode. Connect ARGUS to the power adapter before importing a configuration.





Manual configuration import assumes that automatic configuration import is switched off, s. page 280.

Settings



Backup / Restore

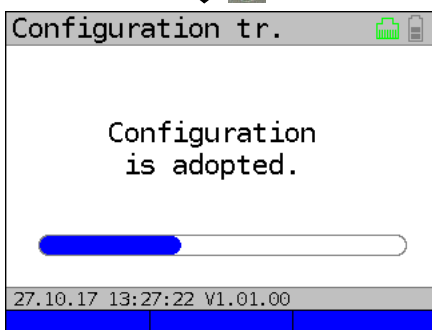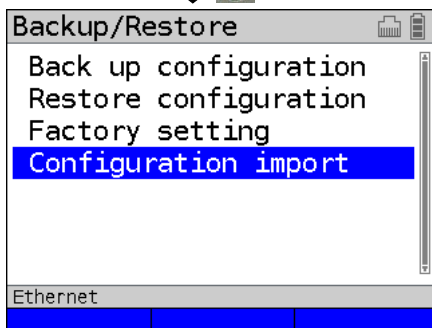

Once the import is successfully completed, restart the device.

Select "Configuration import".

The configuration is read and loaded from an ARGUS configuration file (*.acn) stored on ARGUS in the folder "acn".



Once a WLAN link is active and a WebDAV server has transferred an acn file to ARGUS, you can load it. Otherwise "Adopt configuration" is grayed out. If ARGUS cannot find a suitable acn file, it outputs an error message.




A configuration is imported.



The instrument needs a few seconds before it can be restarted; this is indicated by an hourglass in the top right next to the battery indicator.

24.1.4 Upload test result

This function enables you to upload test results to an external server and download them again at a later date.

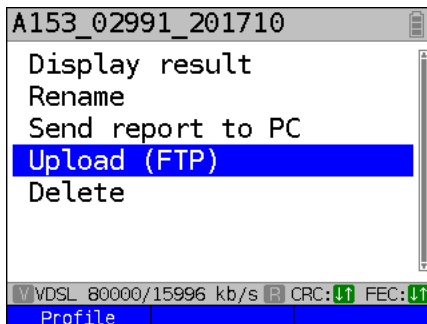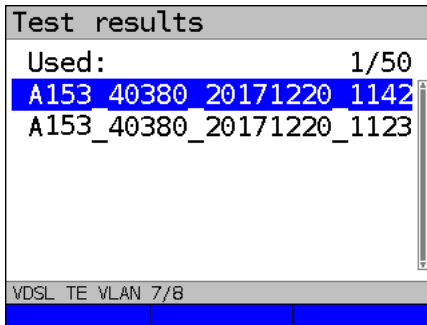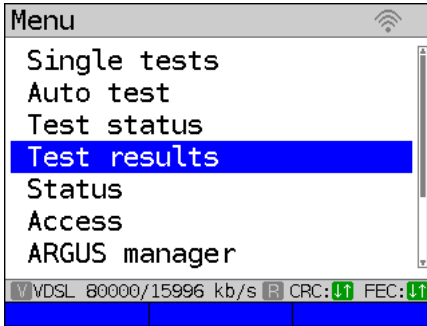

Continued on next page

Prerequisites:

The instrument is connected to the interface (G.fast, xDSL, Ethernet or LTE).


The name of the test result "New result" can vary; you can also assign any name to the test results when saving.

- <Sort time> Sorts test results by time.
- <Sort ↑> The marked test result is moved up one place in the list.
- <Sort ↓> The marked test result is moved down one place in the list.
- <All> Deletes all test results or send to PC.


Select „Upload (FTP)“.

If there is no connection to the server, the instrument connects to the server when you start the upload.


- <Profile> If the server data are not stored, you can enter them here.

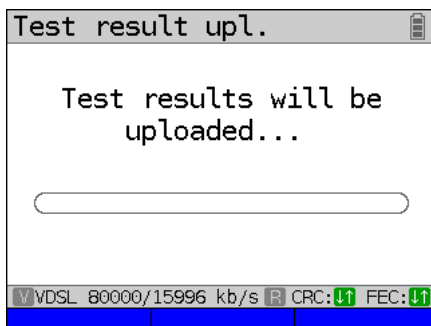

The tests results are uploaded.

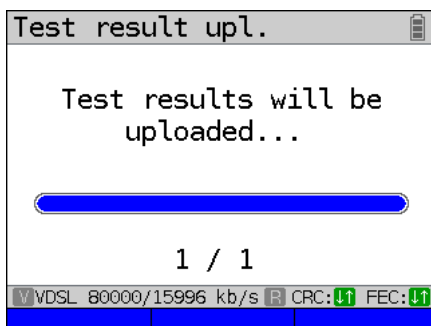

The upload takes a few seconds; the actual duration depends on the quantity and file size.

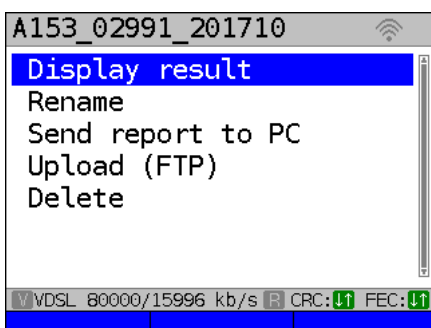








Following the upload, ARGUS returns to test results processing mode.

The upload is now complete, and the measurement result is on both the external server and ARGUS. It can now be deleted.

24.2 Remote access

ARGUS offers a wide variety of remote control functions. For instance, it can connect to a mobile end-user device (smart phone or tablet) via the WLAN interface, and can be remotely controlled from the mobile device.

Settings	Description	
Management interface	Start management interface	<p>Determines whether the management interface is used. If WLAN was selected as the management interface, ARGUS operates as a WLAN router, see below. Depending on the selected interface, ARGUS displays either a WLAN or an Ethernet symbol.</p> <p>WLAN:  WLAN is not active (grey)</p> <p> WLAN is active (green)</p> <p>Ethernet:  Ethernet is selected</p> <p>Default: off</p>
	Interface selection	<p>When the interface selection is greyed out, the management interface must first be halted (see above) by setting „Start management interface“ to off. Then restart it again.</p> <p>Selects the management interface (Ethernet or WLAN).</p> <p>Default: WLAN</p>
	WLAN	<p>If WLAN is greyed out, the management interface must first be halted (see above) by setting „Start management interface“ to off. Then restart it again.</p>
	SSID	<p>The service set identifier (SSID) is a user-definable name with which ARGUS can be identified as a network.</p> <p>Your SSID can also be displayed using the keyboard shortcut  and  .</p> <p>Default: Argus153_SerialNumber</p>


		Password If WLAN was selected as the management interface (see page 282), mobile devices log in using a password query. The password (default: argus153) can also be displayed using the keyboard short-cut  and  .
		Channel Selects the WLAN channel on which the WLAN stick transmits. Channels 1 through 11 are available for the 2.4 GHz frequency band, and channels 52, 56, 60 and 64 can be used for the 5 GHz band. Default: 1
		DHCP server Settings for the DHCP server: - Starting and ending IP address Range: 0.0.0.0 to 255.255.255.255 Default: (assignment see RFC 3330) Start: 192.168.20.30 End: 192.168.20.40 - Domain name, see „User name“ page 97 for results - Duration of reservation for IP addresses Range: 1 to 99999 seconds Default: 240
	IP settings	IP address ARGUS IP address Range: 0.0.0.0 to 255.255.255.255 Default: 192.168.20.1 (for issuing see RFC 3330)
		Netmask IP netmask Range: 0.0.0.0 to 255.255.255.255 Default: 255.255.255.0 (for issuing see RFC 3330)
		Gateway Gateway IP address Range: 0.0.0.0 to 255.255.255.255 Default: 0.0.0.0 (for issuing see RFC 3330)

Webserver	Start Webserver	Determines whether the webserver is used. Default: off
	Password protection	Determines whether a password protection is used for the webserver. Default: on
VNC server	Start VNC	Determines whether the VNC server is used. Default: off
	Password protection	Determines whether the password protection is used. Default: on
	VNC scaling	Determines the scaling used to display the ARGUS screen on the PC. Range: Factor 1 - Factor 4 Default: Factor 2


24.3 Configuring the device

Changing a device setting is described using the setting "Alarm tone" as an example.


Settings

↓ 


Device

↓ 

Alarm tone


↓ 

● Off

↓ 


ARGUS adopts the marked setting as the default.


ARGUS in Main Menu

When ARGUS is in the selection list for preconfigured accesses, you can switch to the abbreviated main menu with .


Select a setting (e.g. Alarm tone) using the cursor keys.

The default is indicated with a ● in the display.

 Mark the desired setting. The marked setting is highlighted in blue in the display.

 Return to next-higher level menu without saving setting change.

Setting	Description
Menu language	Select the operating language Default: <i>depends on country</i>
LCD brightness	Sets display contrast: 16 contrast levels are possible. You can increase or decrease the contrast using the cursor keys. The vertical arrow shows where the current contrast lies in the range from low to high contrast.
Date / time setting	Enter the date, time, time offset and daylight savings time via the number keys. Switch between the lines using the up and down cursor keys. Change the three following settings, from top to bottom, so that all settings take effect: Time offset: Set the time offset (coordinated world time: UTC-12 to UTC+14) for your time zone here. UTC+1 is the setting for central Europe.
	Daylight savings time: If central European time is selected, ARGUS calculates with a total time offset of UTC +2 during the summer months.
	Date / time: To set the time manually, enter the correct time in your time zone using the ARGUS number keys. In automatic time setting, ARGUS automatically reads the time from a preconfigured time server. Default: <i>0.de.pool.ntp.org</i> This can be changed to a different server. The prerequisite is that ARGUS can connect to the internet. Carry out e.g. a ping test (e.g. ping www.argus.info).
	The time you enter runs on the built-in ARGUS realtime clock until the power supply is interrupted. When ARGUS is switched off and the batteries removed, the clock continues to run for a few days on its internal buffer. The time is undefined as soon as the buffer is exhausted, and must be set again.
Ring volume	You can set the volume of the ring tone ARGUS uses to signal an incoming call. For one thing, you can adjust the initial volume. - Default: <i>Level 1</i> (very quiet) You can also adjust the end volume. - Default: <i>Level 7</i> (very loud) For an incoming call, ARGUS begins with the initial volume (very quiet) and increases the volume with each ring until it reaches the final volume level (very loud).

Alarm tone	ARGUS generates alarm tones in different situations, e.g. as soon as a bit error occurs in BERT or ARGUS has synchronised with an xDSL access, and when error counters reach high counts.	
	Short - long	Successfully synchronised
	Long - short	Lost synchronisation
	Short - short	Error counter spike (the tone relates only to the last second. Only one tone sounds even when multiple errors are displayed.)
	The setting "off" suppresses all alarm tones. Default: off	
Jingle	An ARGUS jingle is played after the device powers up and initialises. Default: off	
Power management	Automatic off: Sets the no-activity period after which ARGUS switches to power-saving mode when the power supply is not connected. When power-saving mode is turned off entirely, ARGUS will display a warning that switching off power-saving mode reduces the battery time the next time it is powered up. You can deactivate this warning with the "X" key. <on> cancels deactivation. Default: after five minutes	
	Illumination Sets the duration for background illumination. Background illumination is always on when the power supply adapter is connected. In battery mode, ARGUS switches off background illumination after a set time. Default: after 30 seconds	
Software option	Activates a software option. You must enter an activation key via the keypad. A variety of options can be activated in ARGUS; each one requires entry of a 20-digit code via the number keys. This code will be provided on request. <div> There are also codes for resetting options. You should only enter these codes when you understand what they do.</div>	
Licenses	Displays the open source packages, which are used in the ARGUS firmware and have been published under different licenses (GPL, LGPL, MIT, BSD, etc.), see page 310.	
Company address		
Entry of the customer address for the measurement log. Each configuration item permits up to 29 characters.		
Company name		Default: */*
Street		Default: */*
ZIP/City		Default: */*
Phone number		Default: */*

24.4 Backing up and restoring settings


ARGUS offers multiple functions for backing up and restoring settings. In addition to the actual backup/recovery of the settings configured in ARGUS, these also include the options of restoring the factory defaults and importing configurations to overwrite the current one.

24.4.1 Backup / Restore


With ARGUS, you can back up all settings (PPP user name, PPP password, IP addresses, profile names and more) and restore them if needed.

Backing up settings


ARGUS in Main Menu

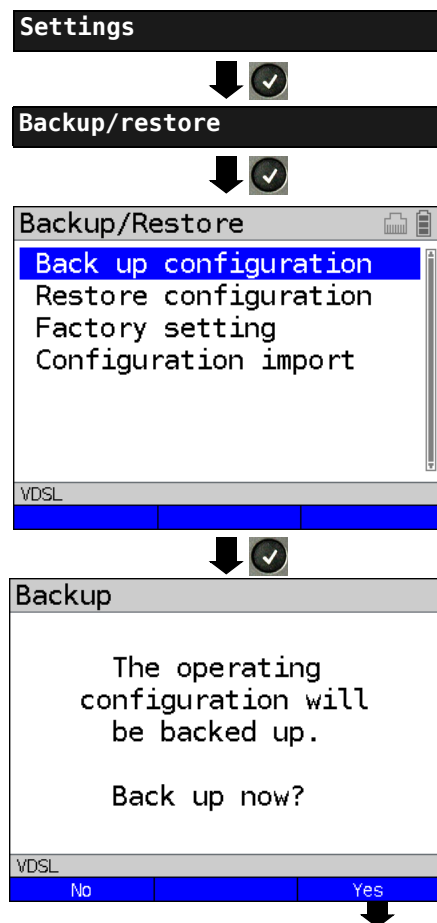

All settings made in ARGUS are backed up unchanged and can thus be restored later.

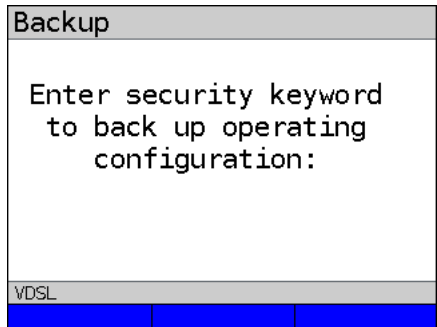


Enter the security password to back up or restore settings. You can obtain this from your Technical Support or directly from intec (see page 8).

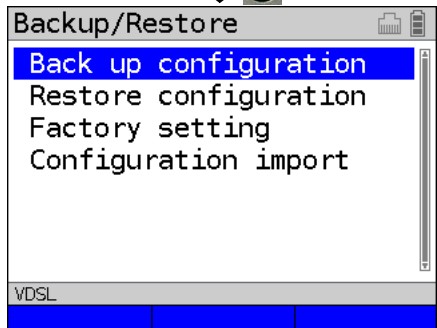

The settings are now backed up and can be restored as necessary.

Restoring settings

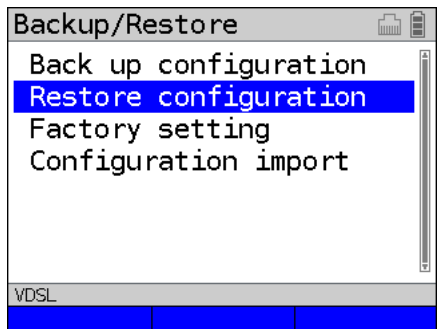

Select "Restore settings"



and



Restores the saved test settings.



If no settings have been backed up, this function has the same effect as "Restore factory setting", see page 289. A security password is not required.



24.4.1.1 Restoring the factory settings

ARGUS resets all settings to the factory defaults.



The PPP user name and password, IP addresses, profile-names and all test results stored in ARGUS are erased.

Settings



Backup/restore



Backup/Restore

- Back up configuration
- Restore configuration
- Factory setting**
- Configuration import

VDSL



Factory setting

All configurations
will be set to
factory setting!
All test results
will be deleted!

Continue?

VDSL

No Yes

All parameters are reset to the factory defaults.



and



ARGUS jumps directly to the security prompt.



Enter the security password to delete all settings.

You can obtain this from Technical Support or directly from intec (see page 8).



and



Restores the saved test settings.



If no settings have been backed up, this function has the same effect as "Restore factory defaults", see page 288.

The following steps are performed as for "Backup settings", see page 287.

25 Update via PC


You can download firmware files online free of charge at www.argus.info/service and then upload them to ARGUS.

Go to the Web page www.argus.info.


Click the menu option "Service" (highlighted in blue here) in the navigation bar.



In the drop-down Service menu, click the option "Downloads".

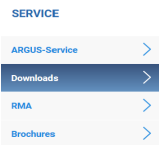


This opens up a product overview.

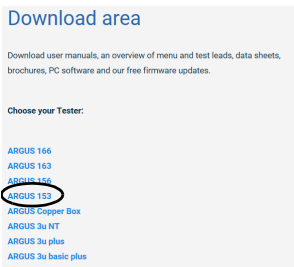

Select your ARGUS device.

Once you select your device, you are automatically taken to the firmware updates. Select your country-specific firmware variant.

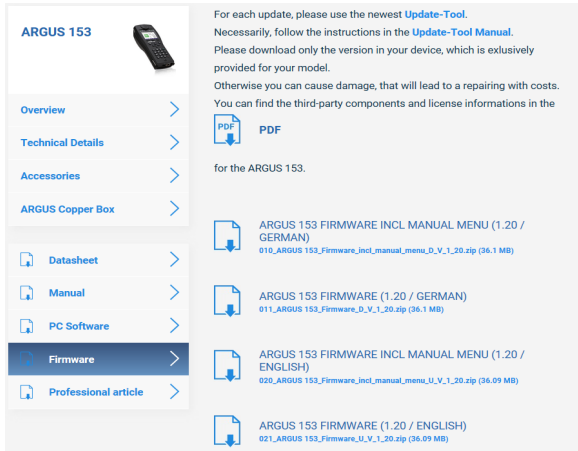

When you select your variant, a browser dialogue opens that enables you to save the firmware to your local PC. The following steps are explained in the manual and in the update tool instructions.

Important information on updating your ARGUS firmware



- Never under any circumstances update ARGUS when it is operating in battery mode.
- Connect ARGUS to the power adapter before uploading the update file from the PC.
- An ARGUS USB cable is required for updating (USB cable with mini-USB plug).
- You should back up the configuration and measurement logs to a PC before performing an update.
- Do not disconnect ARGUS from the PC during the update.
- Do not switch off ARGUS during the update.
- Be sure to observe the messages in the ARGUS display, and not just the instructions of the update tool on the PC.
- The update is only complete when the update tool displays the corresponding message on the PC and ARGUS starts with the "normal" startup screen after being restarted by the update tool.
- ARGUS only powers back up when you click one of the two buttons ("Back to step 1" or "Exit program") at the end of the update.



If problems occur because of a failure to follow these instructions, repeat the update process up to three times. Each repetition makes it possible to overwrite further faulty software components.



When connecting an ARGUS Copper Box, it can occur that ARGUS automatically initialises the Copper Box with the correct firmware in order to avoid compatibility issues. This can take a moment.

26 Using the battery pack

Changing the battery pack

Power down ARGUS and disconnect the power adapter. Then release the knurled screw securing the battery pack.

Handling the battery pack




ARGUS may only be operated using the battery pack supplied with the device; connecting other power supply units to the contacts of the device will damage ARGUS.

- Only charge the supplied battery pack in ARGUS.
- Do not use the ARGUS battery pack in other devices.
- Active charging of the battery pack and automatic charging (on by default) may only be carried out in a temperature range of 0 °C to +40 °C.
- Charge the battery pack completely at least once a month (even if the device has not been used for a longer period!).
- The lithium ion battery pack should be stored with a charge of 40 to 60 %. When storing the device for longer periods, you should refresh this charge level every six months. To prevent full discharge, remove the battery pack from the device for long-term storage.
To maximise battery life, do not store the battery long-term at temperatures above +50 °C.
- See the chapter Safety information (page 9) for detailed information on using and transporting the lithium ion battery pack safely.

Status

ARGUS indicates the current state of the battery graphically in the display when no power adapter is connected. A battery symbol flashes in the display when it is down to a power reserve of approx. 8 minutes (depending not the operating mode). Tone errors, and in extreme cases malfunctions, can occur in this period. Connect the power adapter. ARGUS can recharge the battery completely when the power adapter is connected. The ARGUS power pack does not require manual discharge. A complete charging process can take up to approx. 6 hours.

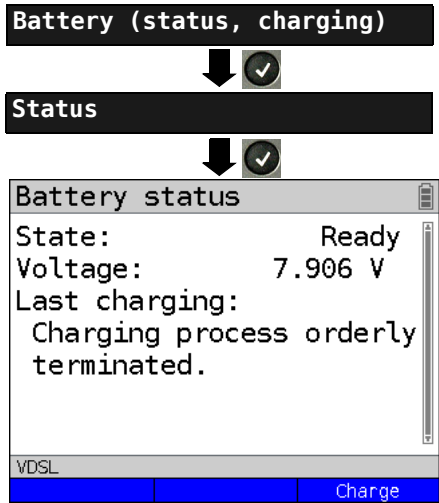


ARGUS in Main Menu

When ARGUS is in the selection list for preconfigured accesses, you can switch to the abbreviated main menu with . Connect the power adapter! Start the charging process.

During the charging process, ARGUS displays the current status and the voltage.

<Charge> Starts the charging process.

Automatic battery charging in the background

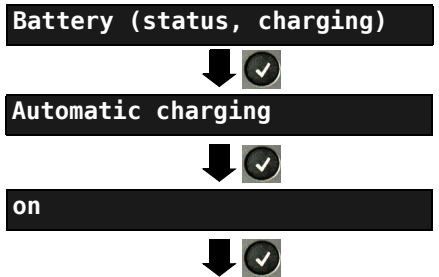

ARGUS in Main Menu

When ARGUS is in the selection list for preconfigured accesses, you can switch to the abbreviated main menu with .

ARGUS charges the battery automatically in the background when the mains adapter is connected as soon as the battery status falls below a threshold value (battery symbol in display)

ARGUS adopts this setting and switches to the next higher level menu.







When ARGUS is disconnected from the power adapter before that battery is completely charged, ARGUS does not automatically continue charging when it is subsequently reconnected because the charge is no longer below the threshold.

27 Appendix

A) Hotkeys







Graphic functions:


After starting the xDSL interface or a test, like Line scope or TDR, you can use the following graphic functions in the result displays:

Hotkey	xDSL trace	ADSL/VDSL, G.fast	Line Scope	TDR
Number key 1	Legend	-	-	-
Number key 2	-	Zoom	Zoom	Zoom
Number key 3	Cursor	Cursor	Cursor	Cursor
Number key 4	-	-	Measuring range	Measuring range
Number key 5	-	-	Total power	Pulse width / height
Number key 6	-	-	-	Wire type/VoP
Number key 7	-	-	Probe	-
Number key 8	-	-	Symmetry	-
Number key 9	-	Setting of x-axis	Time/FFT	-
Number key 0	-	Min/Max	Peak hold	-
Number key #	-	-	100 Ohm input resistance	-
	-	Continue	-	-
	-	-	Run/Hold	Run/Hold
Press one after another  and 	-	-	Reference curve	Reference curve
Press one after another  and 	-	Store	Store	Store

Hotkey assignment

You can call important functions/tests directly using the keys of the ARGUS keypad. Depending on the selected access type (xDSL, G.fast and Ethernet in this example), different hotkeys can be used:

Hotkey	Service	ADSL	VDSL/ G.fast	ETH
Number key 0	ARGUS status	x	x	x
Number key 1	Hotkey help	x	x	x
Number key 3	IP ping	x	x	x
Number key 4	Traceroute	x	x	x
Number key 5	HTTP download	x	x	x
Number key 6	Test status	x	x	x
Number key 7	FTP download	x	x	x
	QR-Code*	x	x	-
Number key 8	Copper Box	x	x	-
Number key 9	IPTV	x	x	x
	Status screen	x	x	x
	VoIP call	x	x	x
Press one after another  and 	Shortcut to access selection menu.	x	x	x
Press one after another  and 	Displays ARGUS-specific information such as ARGUS type, SW version, Serial number, own MAC addresses, SW options, user info (see next page).	x	x	x

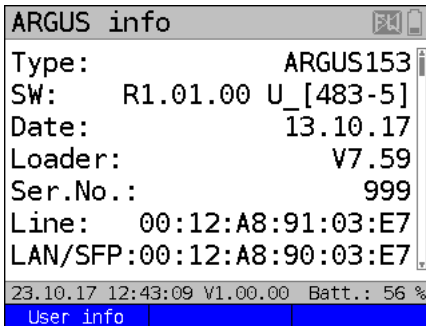

ARGUS info

Type: ARGUS153

SW: R1.01.00 U_[483-5]

Date: 13.10.17

Loader: V7.59

Ser.No.: 999

Line: 00:12:A8:91:03:E7

LAN/SFP:00:12:A8:90:03:E7

23.10.17 12:43:09 V1.00.00 Batt.: 56 %

User info

The ARGUS info displays the ARGUS type, the software version, the serial number and more. The softkey „User info“ opens the entry menu, which you can use to store user-specific information.

<User info> Entering user-specific information (see „Notices“ on page 33)



User info:

|

0/50 signs

23.10.17 12:43:56 V1.00.00 Batt.: 56 %

Inv: Delete 12>ab

The user info can be up to 50 characters long. The entered user info is displayed in the ARGUS info below the serial number ARGUS/Copper Box.

<Inv:> Entry of inventory number



User info:











Inv: |

5/50 signs

23.10.17 12:44:20 V1.00.00 Batt.: 56 %

Inv: Delete 12>ab

The user can enter an inventory number. This data is retained when ARGUS is reset to the factory defaults.











Hotkey	Service	ADSL	VDSL, G.fast	ETH
Press one after another  and 	Restores the saved test settings, see page 288.	X	X	X
Press one after another  and 	Resets all settings to the factory default, see page 289.	X	X	X
Press one after another  and 	ARGUS saves the current measurement without stopping it. ARGUS automatically suggests a name.	X	X	X
Press one after another  and 	Quick start of configuration import.	X	X	X
Press one after another  and 	Quick start of cloud update.	X	X	X

* You can only use this hotkey when the instrument is within the test parameters.




If a Copper Box was used on ARGUS for the last test, an additional softkey <Copper Box> appears, containing all information on the last connected ARGUS Copper Box. Once the Copper Box is started, the information page of the currently connected Copper Box is automatically displayed.







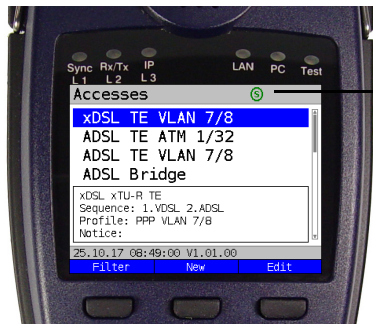







Depending on the selected access type (Copper tests in this example), different hotkeys can be used.


Hotkey	Service	Cu tests Status
Number key 0	ARGUS status	x
Number key 1	Hotkey help	x
Number key 5	Sends test results to PC	x
Press one after another  and 	Shortcut to access selection menu.	x
Press one after another  and 	Displays ARGUS-specific information, see S. 295.	x
Press one after another  and 	Restores the saved test settings, see page 288.	x
Press one after another  and 	Resets all settings to the factory default, see page 289.	x
Press one after another  and 	ARGUS saves the current measurement without stopping it.	x

B) Symbols





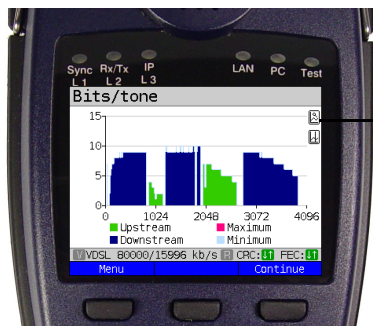


The following symbols can be displayed in the ARGUS status line.


Symbol	Colour	Application	Description
	grey	Accu	This symbol shows the current battery status.
	green	varied	This symbol means that you can use the Shift key to switch to the softkeys.
	green	varied	This symbol shows that Shift is already engaged.
	blue	Cloud update	The firmware can now be updated.
	grey	Cloud update	The update function is active but no update can be found. For example due to an incorrect server path.
	blue	Configuration import	No configuration file found.
	grey	Configuration import	The configuration check is active but no configuration can be found. For example due to an incorrect server path.
	grey	varied	Importing a configuration or executing a test.
	green	WLAN	WLAN is active; ARGUS is currently in access point mode.
	grey	WLAN	WLAN is not active.
	grey	Ethernet	The management interface Ethernet is selected.
	green	Ethernet	The management interface Ethernet is active.
	grey	Volume	Signal tone deactivated.
	grey	Volume	Signal tone activated.







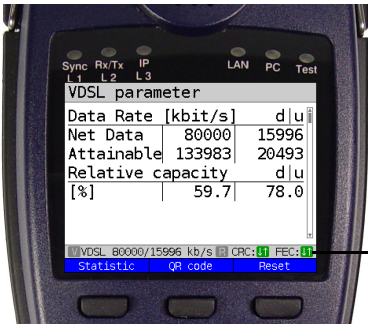


The following symbols can appear in the ARGUS main display area.

Symbol	Colour	Description
	grey	The service is not yet assigned to a virtual line.
	grey	This service, VL or physical layer is idle.
	grey	The service is unavailable.
	yellow	Activating the physical layer, VL or service.
	yellow	Physical layer, VL or service deactivated due to an unexpected occurrence.
	yellow	Deactivating.
	green	Synchronisation achieved (physical layer) or a VL or service was activated successfully.
	green	A test is currently running in this service.
	red	An error has occurred.
	grey	Preparing activation of physical layer, VL or service.
	orange	The Tx and Rx values are not equal in the VoIP QoS test.
	green	Test running.
	red	Test stopped.
	green	Active Probe is active and correctly supplied from ARGUS.

	green	Graphs are zoomed.
	white	Graphs are not zoomed.
	black	Cursor is activated.
	white	Cursor is deactivated.
	red	A signal at the input (e.g. for line scope) is too high or the gain is set too high in the frequency range or time domain, s. page 243



The following symbols
are displayed in this
field.

Symbol	Colour	Description
	green	No CRC errors occurred in the final second.
	red	FEC errors occurred in the final second in upstream and downstream.
	green / red	No Upstream CRC errors occurred in the final second in upstream.
	red / green	No FEC errors occurred in the final second in downstream.
	grey	Retransmission configured but not active.
	blue	Retransmission working.
	red	Retransmission active.

C) Error message: PPP connection

ARGUS Display	Description
External fault:	
Negotiation err	Cannot negotiate the network protocol for PPPD, so the remote site is not reachable.
Idle release	Connection was terminated, since there was no activity.
Time out rel	Connection was terminated, since the maximum connection time elapsed.
PPP: Echo req. error	Remote site did not answer echo requests so the connection has been terminated. (PPP connections are tested at regular intervals by sending echo requests to the remote site.)
Hanging up rel	Disconnected by remote site.
Loopback erro	The setup of the PPP connection was cancelled, since a loopback was detected.
Authent. Error	Authentication error: Wrong user name or password - rejected by remote site.
PADO timeout	No PADO packets received.
PADS timeout	No PADO packets received.

D) Error message: Download test

ARGUS Display	Description
External fault:	
Http redir.error	Fault: Too many HTTP redirects.
http: no response	No answer from HTTP server.
Http serv.error	HTTP server has returned an error. (for details see the table below "HTTP Error Messages")
Http encod.error	Due to an encoding problem, data transfer with HTTP is not possible.
Ftp open error	Error when opening the FTP connection.
Ftp login error	FTP login error. Wrong user name or password or anonymous login not supported.
Ftp passiv err.	FTP server does not support passive transmission mode.
Ftp rec. error	FTP receive error.
Network error	Network error
Ftp error	General FTP error.
URL error	Fault: No HTTP or FTP URL specified.
Socket error 2	Error when connecting a socket. The server's HTTP service is not available.
Http Head.error	Error in the header of the requested HTTP file.
Ftp no file	FTP download error: No such file or directory found.
Unknown address	Unknown host address. Possible cause: Error in the address entered, DNS resolution not working or network not accessible.
Unknown download error	Unknown download error

E) HTTP status codes:

Display on ARGUS: Code No.	Meaning
100	Client should continue its request.
101	The protocol is being changed at the Client's request.
200	The Client's request has succeeded.
201	The Client's request that a new document be created was successful.
202	The Client's request has been accepted for processing.
203	The Client's request will be answered with information from a source other than the server.
204	The Client's request was successful. The server sends [no content] only the HTTP header.
205	The Client's request was successful. The server [resets content] sends a new HTTP body.
206	The Client's request was successful. The server sends only part of the requested document [partial content].
300	The request was not precise enough so multiple documents have been returned.
303	The requested resource has been found at a different URI and should be retrieved from there.
304	The requested document has not been changed in the interim.
305	The requested document must be retrieved from a proxy instead of from the server.
307	The requested resource has been temporarily relocated to a different URI [temporary redirect].
400	Syntax error in the Client's request [Client error].
401	The request requires user authentication.
402	Payment is required to process this request.
403	The Client's request has been refused. (e.g. because authentication failed.)
404	The requested document was not found (e.g. because of an error in the URL entered or while the document is no longer available).
405	The method specified by the Client in its request is not allowed by the server.
406	The requested document in a format that is not supported by the Client.
407	The request requires that the Client authenticate itself with a proxy.
408	The Client did not place its request within the time allowed by the server [Request Timeout].

409	Due to a conflict (e.g. another request) the Client's request cannot be completed by the server.
410	The requested URL is [gone] no longer available on the server.
411	The Client sent data to the server without a defined Content Length.
412	The preconditions in the Client's request could not be satisfied by the server.
413	The Client's request has been refused by the server because the request entity is too large.
414	The Client sent a URL to the server that is too large (e.g. because of the form values contained).
415	The Client's data is not supported by the server.
416	The range (in a document) requested by the Client does not exist.
417	The server could not (or did not wish to) satisfy the Client's expectation given in the Expect request header field.
424	Due to a failed dependency, the requested document will not be sent by the server.
500	Due to an unexpected condition, the server cannot fulfill the Client's request (e.g. faulty configuration, missing or wrong CGI program).
501	The server does not support the function required to fulfill the Client's request.
502	The server received an invalid response from an upstream server or proxy which it accessed in attempting to fulfill the request.
503	The server is currently unable to handle the request due to a temporary overloading of the server.
504	The Client's request (of a gateway or proxy) did not receive a response within the specified time.
505	The server does not support the HTTP protocol version that was used in the Client's request.

F) General Error Messages

Display on ARGUS	Description
Prot. not supp.	The protocol (IP, PPPoE, etc.) is not supported in the selected mode.
Unknown error	Unknown error occurred.
No PPP connec.	No PPP connection can be setup.
Test aborted	Test aborted by user.
Ping start error	Error when starting the Ping test.
Fault: PPP con- nection	Unexpected termination of the PPP connection.
Unexp. PING end	Unexpected termination of the Ping test.

G) VoIP SIP status codes

SIP requests:

The six basic requests / methods:

- INVITE** Invite a user to a session (call - initiates a session)
- ACK** Acknowledge an INVITE request
- BYE** Terminate a session (hangup)
- CANCEL** Terminates the setup of a connection
- REGISTER** Provides data regarding subscriber availability (host name and IP address)
- OPTIONS** Supplies information regarding the functions supported by the other SIP telephone

SIP responses:

SIP responses are answers to SIP requests. There are six basic types of SIP responses with numerous sub-responses:

- 1xx** Informational responses (180 indicates for example that the phone of the party called is ringing)
- 2xx** Reports that the request has been successful
- 3xx** Redirection responses
- 4xx** Client failure responses
- 5xx** Server failure responses
- 6xx** Global failure responses

Display on ARGUS: Code No.	Meaning	Explanation
100	Trying	The ARGUS is attempting to setup a call.
180	Ringing	The phone at the other end is ringing.
181	Call Being Forwarded	The call is being forwarded.
182	Call Queued	The call is in a wait loop.
183	Session Progress	The call is being setup.
200	OK	Everything is all right.
202	Accepted	Connection has been accepted.

300	Multiple Choices	There is no unique destination address for the remote end. Please select one.
301	Moved Permanently	Calls are being permanently forwarded.
302	Moved Temporarily	Calls are being temporarily forwarded.
305	Use Proxy	A proxy must be used.
380	Alternative Service	Alternative service
400	Bad Request	The request is not OK.
401	Unauthorized	You are not authorized.
402	Payment Required	Payment is required.
403	Forbidden	This is not permitted.
404	Not Found	The remote end was not found or does not exist.
405	Method Not Allowed	The method (e.g. SUBSCRIBE or NOTIFY) is not permitted.
406	Not Acceptable	The options used in the call are not supported.
407	Proxy Authentication Required	The proxy must be authenticated.
408	Request Timeout	The time for the request has been exceeded (timeout).
409	Conflict	There is a conflict.
410	Gone	The subscriber is no longer reachable here.
411	Length Required	The length must be supplied.
413	Request Entity Too Large	The values are too long.
414	Request URI Too Long	The URI is too long. (Destination address)
415	Unsupported Media Type	The codec is not supported.
416	Unsupported URI Scheme	The URI scheme is not supported. (Destination address)
420	Bad Extension	The extension is wrong.
421	Extension Required	An extension is necessary.
423	Interval Too Brief	There is a problem with the SIP parameters. (Register Expire is too short)
480	Temporarily Unavailable	The subscriber is currently not reachable.
481	Call/Transaction Does Not Exist	This connection does not exist (any longer).
482	Loop Detected	A redirection loop has been detected.
483	Too Many Hops	Too many redirects.
484	Address Incomplete	The SIP address is incomplete or faulty.
485	Ambiguous	The SIP address is not unique.
486	Busy Here	The destination is busy.
487	Request Terminated	The request has been terminated.
488	Not Acceptable Here	The call cannot be accepted.
491	Request Pending	A request is waiting.

493	Undecipherable	Decryption error.
500	Server Internal Error	Internal error in the server.
501	Not Implemented	The requested method (functionality) has not been implemented.
502	Bad Gateway	The gateway is bad.
503	Service Unavailable	The service is not available.
504	Server Time-Out	The gateway did not respond in time.
505	Version Not Supported	The SIP protocol version is not supported.
513	Message Too Large	The message length is too long. Use TCP.
600	Busy Everywhere	All terminals are busy at the remote end.
603	Declined	The system at the remote end refused to accept the call.
604	Does Not Exist Anywhere	This user does not exist any longer.
605	Not Acceptable	SIP request not acceptable.

H) Vendor identification numbers

Abbreviation	Manufacturer
ALCB	Alcatel (STMicroelectronics)
ANDV	Analog Devices
BDCM	Broadcom
GSPN	Globespan
IKNS	Ikanos
IFTN	Infineon
META	Metanoia
STMI	STMicroelectronics
TSTS	Texas Instruments

I) Software Licenses

The ARGUS firmware includes code from what are known as Open Source packages, which have been published under various licenses (GPL, LGPL, MIT, BSD, etc.).

Additional information can be found – if requested in your order – on the CD-ROM included in the package (see Software_License.htm) or can be viewed at http://www.argus.info/web/download/Software_License.

In the event that you are interested in the sources licensed under GPL or LGPL, please contact support@argus.info. A machine-readable copy of the source code can be obtained from intec Gesellschaft für Informationstechnik mbH for a minimal fee - to cover the cost of physically copying the code. This offer is valid for 3 years.

J) Abbreviations

Characters

Δf	Bandwidth
Ω	Ohm (electrical resistance)

A

A	Ampere (electrical current)
AAL	ATM adaptation layer
AC	Alternating Current or Access Server
ACS	Auto Configuration Server
ADSL	Asymmetric Digital Subscriber Line
AFTR	Address Family Transition Router
AI	Action indicator
AIT	Application information table
AMP	ARGUS measurement protocol
ANSI	American National Standards Institute
Anx.	Annex
APL	("Anschlusspunkt Linie") Service termination point
APN	Access Point Name
ARP	Address Resolution Protocol
AS	Available second
ASCII	American Standard Code for Information Interchange
ATM	Asynchronous Transfer Mode
ATU-R	ADSL Transceiver Unit
Auto-MDI-X	Automatic Medium Dependent Interface Crossing
Avg	Average

B

BER	Basic Encoding Rules
BGP	Border Gateway Protocol
BNG	Broadband Network Gateway
BR	Bridge
BRAS	Broadband access server

C

C	Celsius
c_0	Speed of light
CAT	Conditional access table
CC	Continuity counter
CO	Central office
Codec	Coder decoder
CQE	Conversational Quality Estimated
CR	Call reference

CRC	Cyclic redundancy check
D	
dB	Decibel
dBm/Hz	Performance measurement with the reference quantity 1 mW per hertz
DC	Direct Current
DDM	Digital diagnostic mode
DF	Delay factor
DHCP	Dynamic Host Configuration Protocol
DiffServ	Differentiated services
DIN	Deutsches Institut für Normung - German Institute for Standardization
DL	Download
DMT	Discrete Multitone Transmission
DNS	Domain Name System
DPBO	Downstream power backoff
DSCP	Differentiated services codepoint
DSL	Digital Subscriber Line
DSLAM	Digital Subscriber Line Access Multiplexer
DTMF	Dual Tone Multi Frequency
E	
EARFCN	EUTRA Absolute radio-frequency channel number
EFM	Ethernet in the First Mile (see protocol IEEE 802.3ah)
EIT	Event Information Table
ElektroG	Elektro- und Elektronikgerätegesetz, German law governing electrical and electronic devices
EMC	Electromagnetic compatibility
EN	European standard
EoA	Ethernet over ATM
EOC	Embedded operations channel
ete	end-to-end
ETH	Ethernet
ETR	Expected Throughput Rate
ETSI	European Telecommunications Standards Institute
F	
F	Farad (unit of electrical capacitance)
FEC	Forward error correction
FFT	Fast Fourier transform
FTP	File Transfer Protocol
FW	Firmware
G	
G.fast	G.fast access to subscriber terminal
GB	Gigabyte

Gbit/s	Gigabits per second
GCID	Global Cell ID
GigE	Gigabit Ethernet
H	
h	hour
HD	High definition
HDSL	High bit rate digital subscriber line
HEC	Header error checksum
hex	Hexadecimal
HLC	High layer compatibility
HLOG	Amplitude of transmission function per tone
HTTP	Hypertext Transfer Protocol
HVT	("Hauptverteiler") Main distribution frame
Hz	Hertz (measuring unit of frequency)
I	
IAD	Integrated access device
ID	Identifier
IEEE	Institute of Electrical and Electronics Engineers
IGMP	Internet Group Management Protocol
INP	Impulse noise protection
IP	Internet Protocol
IPCP	Internet Protocol Control Protocol
IPoA	Internet Protocol over ATM
IPoE	Internet Protocol over Ethernet
IPTV	Internet Protocol Television
ISO	International Standards Organization
ISP	Internet service provider
ITSP	Internet telephony service provider
ITU	International Telecommunication Union
K	
KB	Kilobyte
KVZ	("Kabelverzweiger") Cable branch box
kbit/s	Kilobits per second
L	
L1	Layer 1 in the OSI reference model
L2	Layer 2 in the OSI reference model
L3	Layer 3 in the OSI reference model
LACP	Link Aggregation Procedure for D-channels
LAN	Local Area Network
LAPD	Link access procedure for D-channels
LCD	Liquid crystal display

LCP	Link Control Protocol
LED	Light-emitting diode
LLDP	Link Layer Discovery Protocol
LOS	Loss of synchronize
LQO	Listening quality objective
LTE	Long Term Evolution
M	
m	Meter
MAC	Media Access Control
MB	Megabyte
Mbit/s	Megabits per second
MCC	Mobile Country Code
MDF	Main distribution frame (see also HVT)
MDI	Media Delivery Index (RFC 4445)
min.	Minute
MLR	Media loss rate
MMS	Microsoft Media Server Protocol
MNC	Mobile Network Code
Modem	Modulator-demodulator
MOS	Mean opinion score (ITU-T P.800)
MPEG	Moving Picture Experts Group
MSA	Multiple source agreement
MTU	Maximum Transmission Unit
mV_{pp}	Millivolt peak-to-peak
N	
n/a	not available
n/r	not received
n/u	not used
NAT	Network address translation
NGN	Next generation network
NIT	Network information table
NOK	Not OK
NSAP	Network service access point
NSF	Network specific facilities
NTR	Network timing reference
O	
OAM	Operation, Administration and Maintenance
OoS	Out of Sequence
OSI	Open Systems Interconnection
OUI	Organizationally unique identifier

P	
P/N	Part number
PADI	PPPoE active discovery initiation
PADO	PPPoE active discovery offer
PADR	PPPoE active discovery request
PADS	PPPoE active discovery session confirmation
PADT	PPPoE active discovery termination
PAP	Password Authentication Protocol
PAT	Program association table
PC	Personal computer
PCR	Program clock reference
PD	Protocol discriminator
PDU	Protocol data unit
PEN	Private Enterprise Number
PID	Packet identifier
PLR	Packet loss ratio
PMT	Program map tables
P-P	Point-to-point
P-MP	Point-to-multipoint
PMMS	Power Measurement Modulation Session
PMS	Physical media specific
PPP	Point-to-Point Protocol
PPPoA	Point-to-Point Protocol over ATM
PPPoE	Point-to-Point Protocol over Ethernet
PPTP	Point-to-Point Tunneling Protocol
PSD	Power spectral density
PSI	Program specific information
PWR	Power

Q

Q in Q	IEEE 802.1.ad, S-VLAN
QLN	Quiet line noise
QoS	Quality of service

R

RC	Resistance (R) and capacitance (C)
REIN	Repetitive electrical impulse noise
RF	Radio frequency
RFC	Request for comments
RJ	Registered jack (standardised socket)
RoHS	Restriction of Hazardous Substances
RT	Router
RTCP	Real-Time Control Protocol

RTP	Real-Time Transport Protocol
RTSP	Real-Time Streaming Protocol
Rx	Received
S	
s	second
S/N	Serial number
SBC	Session Border Controller - Outbound Proxy
SCI	Sending complete indication
SDT	Service description table
SHINE	Single high impulse noise event
SIM	Subscriber Identity Module
SIP	Session Initiation Protocol
SNR	Signal-to-noise ratio
SNRM	Signal-to-Noise ratio margin
SPB	Shortest Path Bridging
SSL	Secure Sockets Layer
STB	Set-top box
STUN	Session Traversal Utilities for NAT
SUB	Subaddressing
T	
T	Trigger
TAC	Type Approval Code
TAL	("Teilnehmeranschlussleitung") Subscriber line
TCP	Transmission Control Protocol
TDR	Time domain reflectometry
TDT	Time and date table
TE	TErминаl, terminal equipment
TEI	Terminal endpoint identifier
TLS	Transport Layer Security
TM	Test manager
TS	1. Technical specification 2. Transport stream
TTX	Teletext
Tx	Transceived
U	
UDP	User Datagram Protocol
UL	Upload
URI	Uniform Resource Identifier
URL	Uniform Resource Locator
US	VDSL: Upstream band
USB	Universal Serial Bus

UTC	Coordinated Universal Time
V	
V	Volt
V/2	Pulse propagation time
VC	Virtual channel
VCC	1. Virtual channel connection 2. Voltage at the common collector
VCi	Virtual channel identifier
VC-MUX	Virtual circuit multiplexing
VDSL	Very High Speed Digital Subscriber Line
VLAN	Virtual Local Area Network
VL	Virtual line
VLC	Video LAN client
VNC	Virtual Network Computing
VoD	Video on demand
VoIP	Voice over Internet Protocol
VoP	Velocity of propagation
VPI	Virtual path identifier
V_{pp}	Volt peak-to-peak
VTU-R	VDSL transceiver unit
W	
WebDAV	Web-based Distributed Authoring and Versioning
WEEE	Waste Electrical and Electronic Equipment
www	World Wide Web
X	
xDSL	Collective term for the different DSL variants
xTU-C	xDSL Transceiver Unit - Central Office
xTU-R	xDSL Transceiver Unit
Z	
Z	Apparent resistance

K) Index

A

Abbreviations	302
Access	
ADSL	37
Ethernet	78
Access filter	23
Access mode	17, 19
Access wizard	24
Active Probe II	244
Connecting Active Probe II	245
Connection example	245
Starting Active Probe II	245
ADSL	
Access mode	37, 47, 76
Annex A	29
Annex A auto	29
Annex A/M auto	29
Annex B	29
Annex B auto	29
Annex J	29
Annex L	29
Annex M	29
Bridge	74
Configuration	29, 39
Connecting	48
Data rate	52
Determining connection parameters	47
Disconnecting	71
Display bit distribution	54
Display error counters	53
Display quiet line noise	59
Display trace data	52
Displaying stored test results	73
Einstellungen	29
mode	29
Modem trace display	49
Profile configuration	48
Rated / threshold value	39
Rated value	44
Router	76
Save results	71
Selecting interface	38
Set value	39
Settings	29
Status screen	38
Supported standards	15
Alarm tones	286

Alias www address	138
Ambient temperature	37
APN	98
Appendix	294
ARGUS	
Control panel	14
Dimensions	14
Display dimensions	14
General Error Messages	306
Inputs and outputs	14
MAC addresses	41, 103
Settings	272, 285
Switching on	16
Weight	14
ARGUS Manager	286
ARGUS status	295
ASCII	100
ATM	86, 95
Bitrate	61, 63
Statistics	103
with Ethernet	95
Attainable Data Rate	67
Attainable data rate	61, 63
Attenuation	61
Authentication	168
Auto test	228
Auto tests	228
Automatic charging	10, 12, 292
Automatic Configuration import	277
Autonegotiation	80, 83

B

Background illumination	14
Basic package	1
Battery pack	9
Active charging	10, 12, 292
Attaching	20
Automatic charging	293
Changing	292
Charge level	292
Charger	12
Charging temperature range	10, 12, 292
Long-term storage	12, 292
Protective function	12
Storage	292
Transport	12
Transportation information	10
BGP	102
Bits/tonne	54
Bitswap Events	68

BRAS statistics	103
Bridge tap	61
HLOG	60, 61
Rule of thumb	61

C

Cable	
Patch	74, 76, 78
xDSL	47, 74, 76
Cable tests	261
Caller ID	168
Capacitance	250
Charging temperature	14
Charging the battery	10, 12, 20, 292
Checksum errors	131
Codec	171, 177
Collisions	83
Concurrent tests	228
Configuration import	
Manual configuration import	279
Configuring accesses	23
Conformity declaration	10
Connection	
Copper	19
Ethernet	19
xDSL	19
Connection type	189
Connections	
Bottom	19
Top	19
Continuity error	216
Copper tests	232
Country code	70
CRC	62, 64, 67
Current delay	97
Cursor function	56

D

Data	86
Data log	102
Data Transmission Units (DTU)	69
Date entry	285
Declaration of conformity	14
default wire types	250
Delete test results	267
DHCP	99
Auto	45, 99
Client	99, 100
Server	99, 101
Timeout	100

User class information	100
User-defined option	100
Vendor ID	100
Vendor info	100
DiffServ	173, 193
DIN EN 50419	11
Display illumination	16
Displaying test results	266
Disposal	11
DNS server	99
Download	137
Error Messages	303
Download file name	137
Download rate	140, 144, 225
DSCP	173, 193
DSL	
Introduction	37
DTMF settings	172
Dual	45, 98
Duplex	
Full	81
Half	81

E

Earpiece mode	176
Elec.length@1MHz	66, 69
Electrical length	66, 69
Electromagnetic compatibility	10, 14
ElektroG	11
EN60950-1	14
Encapsulation	95
Energy-saving mode	10
EoA	95
Error counters	
Reset	63
ES	67
Ethernet	
Access type	78
Establishing connection	81, 82
Flow control	81
Mismatch	81
Statistics	82
Transmission speed	19
Ethernet statistics	103
ETR	66, 69
Extended operation	10

F

FEC	62, 64, 67
File size	137
Filter	23

Finding the modem	234
Firewall	76
Flow control	81
Fragmentation	129
Frequency band	114
FTP download	110, 142
Result	145
FTP server	110, 150
FTP upload	110, 146
Result	149, 155, 156

G

Gateway IP	99
Graphic functions	294
Gratuitous ARP	44
Grayed-out elements	91

H

Headset	14
Headset connection	19
Headset mode	176
HEC	62
Help	295
Hexadecimal entry	41
Hidden menu options	1
HLOG/tone	60
Hops	133
Hotkey assignment	112, 295
Hotkeys	112
HTTP download	110, 137
Parallel	138
Result	141
Test parameters	137
HTTP status codes	304
Humidity	14

I

IGMP version	206
Index	318
Initial operation	20
INP	62, 64, 67
INP REIN	66, 69
INP SHINE	66, 69
intec Gesellschaft für Informationstechnik mbH	8
Interleave delay	62, 64, 67
Internet telephony service provider	168
Introduction	6
IP	95, 287, 289
Own	99
IP ping	110, 127
Assigned configuration	108
Results	130

Save results	132
test parameters	127
IP statistics	103
IP tests	127
IP version	98
IPoA	95
IPTV	110
Audio bytes	192
CC error	191
CC error rate	191
Channel selection	205
Current RTP loss rate	192
Error indication	191
IGMP latency	191
IGMP version	191
Jitter buffer	216
PCR jitter	191
Profile	189, 190, 203
Profile name	192, 216
Qos	193
RTP jitter	192
RTP sequence errors	192
Scan	203
Scan max. switchover time	207
Scan profile	203, 207
Scan settings	205
Server address	215
Sync error	191
Test parameters	190
Tests	189
Total RTP loss rate	192
Type of stream	215
video bytes	192
VoD	214
IPTV line	88
IPTV passive	210
IPTV scan	110
Test parameters	205
IPv4	99
IPv6	45, 101, 108, 127

J

Jingle	286
Jitter buffer	171

K

Key	14
Back	17
Enter	16
Handset	17
Level	17

Power	16
Shift	18
Keys	
Cursor	17
Keypad	16

L

Latency mode	61
Layer 1	36
Layer 2 parameters	85
Layer 2/3 settings	87
Layer 3 parameters	85
Layer-1 box	36, 52, 75, 89
LCD brightness	285
LED image	47, 74, 76
LEDs	16
Ethernet access	19
Level key	17
Line attenuation	61, 64
Line interference	54
Line resistance	249
Line scope	233
Clipping	243
Connection example	234
Cursor	236
Frequency range	235
Gain	235
Graph functions	236
Measuring range	237
Reference curve	241
Start/stop	242
Starting the line scope	233
Status display	234
Zoom	236
Line socket	15
Listen port	169
Lithium	12
LLDP	83
Long form	53
Long-term operation	37
Loop	
Layer	120
layer 1 (L1)	120
layer 2 (L2)	120
Own IP address	123
Protocol-independent parameters	120
Starting	125
Loop attenuation	64
Loudspeaker	16
Lower case	97

Lower-case	26, 33, 128, 265
Lower-case letters	72
LTE	
Disconnecting	116
Frequency band	114
PIN	114

M

MAC address	41
Management interface	282
Manual configuration import	279
Measurement log	264, 291
Menu language	274
Microphone	16
Mini-USB	19
MOS	166, 176
MOS setting	172
MOS value	181
Multicast IP	191

N

Net Data Rate	67
Netmask	99
Network delay	181
Network scan	161
Notice	33
Number block	17
numeric entry	17

O

Operating language	285
Operating temperature	14
Operation	
Quick-start guide	16
Option	
Function	1
Oscilloscope	239
Outbound proxy	168
Output Power	67
Output power	61, 64
Overview	52
Overview of tests	112

P

Packet response time	131
PADI	105
PADO	105
PADR	105
PADS	105
PADT	105
Parallel tests	222
PCR jitter	216

Physical layer	36, 85, 86
Power adapter	14
Connector	19
Power management	286
Power supply	14
Power-saving mode	21
PPP	85, 95, 97, 287, 289
Error Messages	302
Profile	85, 87, 92, 97
Statistics	103
Trace	104
PPPoA	95
PPPoE	95
PPTP	78, 95, 97
Probes	133
Profile name	287, 289
Profile types	87, 88
Profiles	87
Protection functions	10, 37
Protocol	95
Protocol statistics	103
Provider code	70
PWR	19

Q

QLN/tone	59
QoS	173
Qos	193
Qualify	170
Quiet line noise (QLN)	59

R

Real-time clock	21
Reg. expire	170
Registrar	168
Regulations for hazardous materials	12
Relative capacity	61, 63, 67
Remote port	169
Resync	63, 65, 68
Retranmission (G.INP)	63, 65, 68
Retry-after	170
Return of old equipment	11
R-Factor	166, 176
Rights	2
Ring volume	285
RoHS conformity	14
RoHS Directive	11
Router	
SIP port	46
RTCP	181
RTCP statistics	178

RTP	166, 181
RTP port range	170
RTP statistics	177
RTSP server type	216
RTSP type	216

S

Safety information	9
Headset	9
USB-host interface	9
Save name	265
Saving test results	265
Sending test results to PC	266
Server address	137
Server profile	137
Service	
Start	89, 93
Service Data	88
Service IPTV	88
Service Opt.	88
Service statistics	111
Service VoIP	88
Services	85, 86, 110
SES	67
Session border controller (SBC)	168
Set IP	97
Showtime	65, 68
Showtime no sync	65, 68
Signal attenuation	64, 67
Silence detection	170
SIP	166
SIP domain	169
SIP log	181
SIP trunk	169
SNR margin	62, 64, 67
SNR/tone	59
Softkeys	18, 20
Dual function	18
Software option	286
Standards	15
Static IP	99
Status screen	36, 82, 85, 86, 110, 295
STB	189, 210
Storage temperature	14
Stub line	61
Rule of thumb	61
Support	8
Symbols	87
Symmetry	239
Symmetry/asymmetry toggling	239

.....	247
System information in DSLAM	63

T

TDR

Cursor	254
Examples	258
Gain	252
Graph functions	253
Measuring range	255
Propagation speed	249
Pulse width/height	255
Range	252
Start/stop	257
Starting TDR	251
Status display	252
TDR settings	248
VoP	249
Zoom	253
Test results	264, 289
Tests	110
Timeout	133
Timestamp	49
Toggling asymmetry	239
Toggling symmetry	239
ToS	173, 193
Traceroute	110, 133, 157
Results	136
Test parameters	133
Transmission function	60

U

UN directive	12
Update	291
Update tool	291
Upload file name	137
Upload file size	137
Upper-case	26, 33, 97, 128, 265
USB	
Client interface	14, 19
Host interface	14, 19
User agent	169
User safety	14

V

VDSL

Carrier set	43
Disconnecting	84
Display connection parameters	52
Profile	52
Rated / threshold value	42
Save results	84, 126

Supported profiles	15
Supported standards	15
Vectoring mode	43
VDSL connection parameters	52
Vendor far	63, 66, 69
Vendor near	63, 66, 70
Version	66, 69
.....	1, 63
Virtual line	85
Activating	89
Settings	95
Virtual lines	85, 86
Additional	90
Examples	94
Multiple	194
VL default configuration	88
VL profile	110
VL profiles	85, 87
VLAN	85, 96
VLAN ID	46, 96, 121, 122
VLAN prioritisation	173
VLAN priority	96, 122, 123
VLAN TPID	97
VNC-Server	284
VoD	214
Profile	214, 215
RTSP	215
Test parameters	215
VoD line	88
Voice codec	175, 181
Voice quality	175
VoIP	
Call	174, 226
Call acceptance	184
destination	175, 226
DiffServ	173, 193
DS field	173
DSCP	173, 193
Echo test	184
MOS value	175
Profile name	173
QoS	173
Register status	181
Results	181
SIP status codes	307
STUN server	172
Test parameters	168
Tests	166
ToS	173, 193
volume	175, 227

VoIP account	167
VoIP call	110
VoIP wait	110, 180, 183
Voltage	
DC voltage range	15
Voltage measuring range	15
VoP	249
VPI/VCI	85, 95

W

Webserver	284
Website	8
WEEE	11
WINanalyse	264
WINplus	264
Wire type list	249
WLAN	
Channel	283
Password	283
SSID	282

X

x-axis	
Frequency	57
Tones	57
x-axis labelling	57
X-axis zoom	54, 236
xDSL	
Bridge	37
Router	37

Y

Y-axis zoom	55, 236
-------------------	---------

Z

Zoom	55
------------	----